



MODEL: 91593MBR  
PACKING DIAGRAM

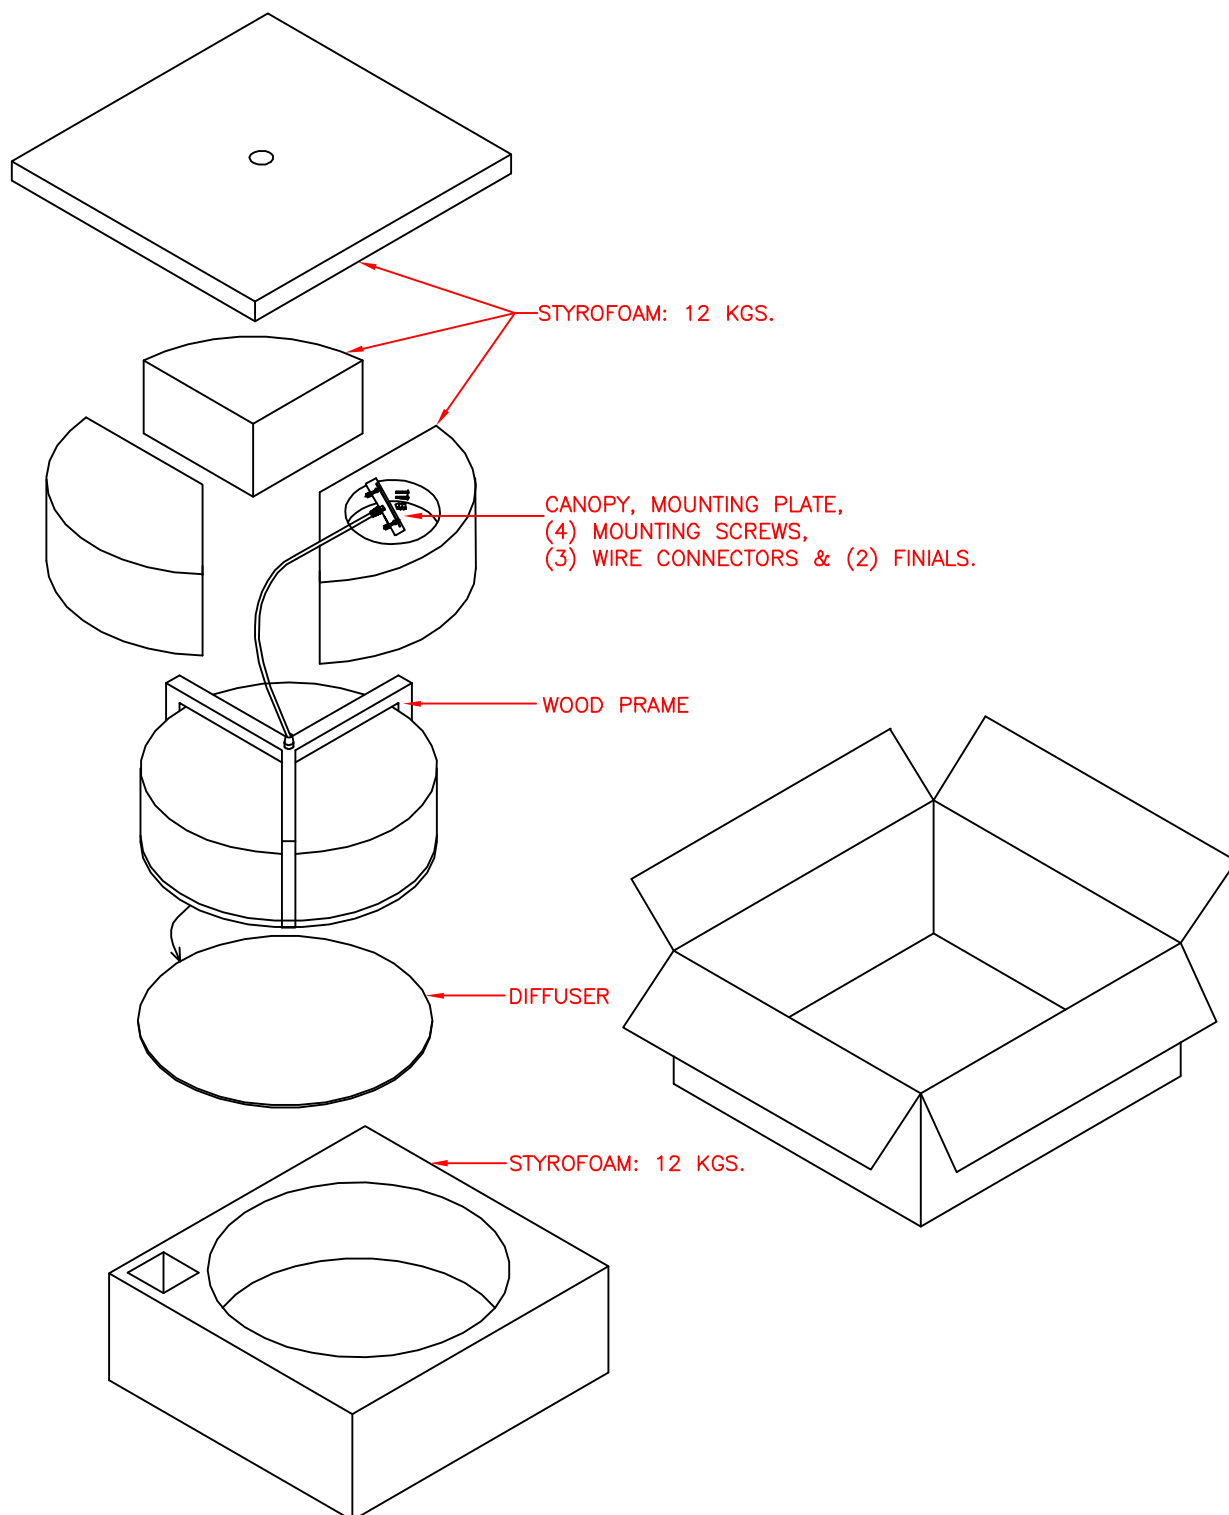

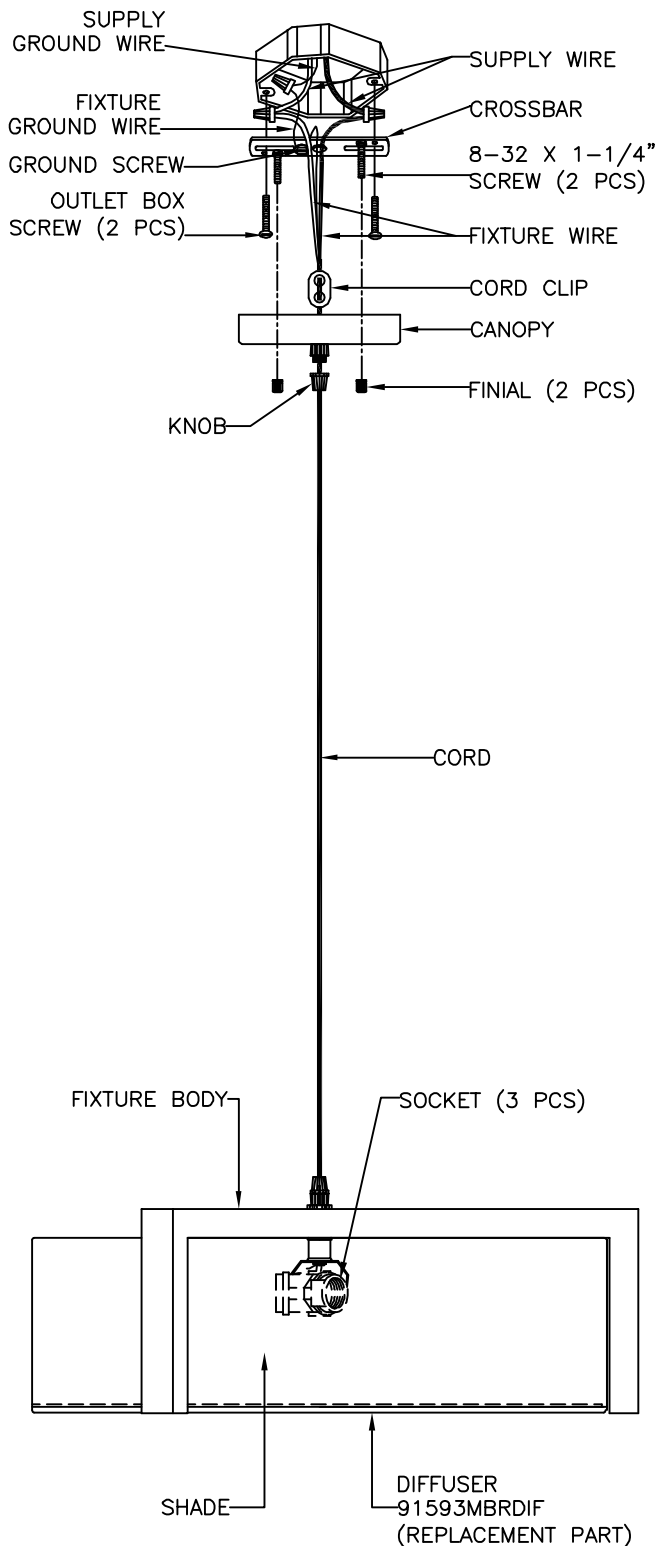

AVAILABLE PART IS:  
91593MBRDIF (DIFFUSER)

## ASSEMBLY INSTRUCTIONS

### READ AND SAVE THESE INSTRUCTIONS

**READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.**

**MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.**

### UNPACK THE LAMP

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: FIXTURE BODY, (3) WIRE CONNECTORS, CORD CLIP, CANOPY, CROSSBAR, (4)  $\frac{8}{32} \times 1\frac{1}{4}$ " SCREWS, (2) SMALL NUTS AND (2) FINIALS. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.

**CAUTION:** TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL. IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRSTLY, TURN THE FIXTURE OFF. NEXT, TURN THE WALL SWITCH OFF. FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPES OF FUSES MUST BE UNSCREWED TO SHUT OFF THE POWER.

\* ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES.

\*\* IF YOU ARE NOT FAMILIAR WITH WIRING, YOU SHOULD USE A QUALIFIED ELECTRICIAN.

\*\*\* THIS FIXTURE IS INTENDED TO BE MOUNTED TO A UL LISTED OUTLET BOX CAPABLE OF SUPPORTING THE FIXTURE.

### FIXTURE INSTALLATION

1. CUT OFF THE CORD TO KEEP THE POWER WIRE 12" LONGER THAN THE LENGTH THAT YOU WANT.
2. ADJUST THE HEIGHT OF THE FIXTURE AS DESIRED BY LOOSENING THE SET SCREW, SLIDE THE CORD CLIP INTO THE CANOPY TO SECURE THE CORD, ONCE THE DESIRED HEIGHT IS ACHIEVED, TIGHTEN THE SET SCREW.
3. SPLIT THE END OF THE POWER SUPPLY WIRE 3-1/2" FROM THE END AND STRIP THE PLASTIC COVER OFF THE WIRE ABOUT 1/2".
4. PRIOR TO INSTALLING THE BULB, PLEASE INSPECT SOCKET FOR SILICA PACKET. IF PACKET IS PRESENT, REMOVE AND THROW AWAY. DO NOT EXPOSE TO CHILDREN AND PETS.
5. INSTALL A 60 WATT MAXIMUM MEDIUM BASE TYPE "A" BULB (NOT INCLUDED) INTO EACH SOCKET FROM TOP OF THE FIXTURE BODY.
6. ATTACH THE CROSSBAR TO THE CEILING OUTLET BOX USING THE TWO SCREWS PROVIDED WITH THE OUTLET BOX. (NOTE: IF THE SCREWS WITH THE OUTLET BOX ARE TOO SHORT, USE THE (2) 8-32 x 1-1/4" SCREWS PROVIDED IN THE MOUNTING HARDWARE PACKAGE).
7. CONNECT THE WHITE WIRE FROM THE FIXTURE TO THE WHITE WIRE OF THE SUPPLY CIRCUIT. CONNNECT THE BLACK WIRE FROM THE FIXTURE TO THE BLACK WIRE OF THE SUPPLY CIRCUIT.
8. WRAP THE FIXTURE GREEN GROUND WIRE AROUND GREEN GROUND SCREW ONE FULL TURN AND TIGHTEN THE SCREW. CONNECT REMAINING END OF FIXTURE GROUND WIRE TO THE SUPPLY GROUND WIRE.
9. TUCK THE WIRES CAREFULLY INSIDE THE OUTLET BOX. SPREAD THE ELECTRICAL SPLICES SO THAT THE BLACK WIRES ARE ON ONE SIDE OF THE OUTLET BOX AND THE WHITE WIRES ARE ON THE OTHER SIDE.
10. RAISE THE CANOPY TO THE CEILING AND SECURE IN PLACE WITH (2) FINIALS, THEN SCREW THE KNOB TO BOTTOM OF CANOPY.
11. RESTORE POWER. YOUR FIXTURE IS NOW READY FOR USE.

