


-in case of abnormal environmental conditions and in case of strange operation conditions.
-as well as then, if repairs or illegal abortions are made by persons, who are not authorised by us or if our appliances are equipped with spare parts, supplementary parts or accessories, which are not original parts or if contact with unsuitable material have caused the damage.


ANZZI™

TW-AZ102
TOWEL WARMER

Have questions? Contact us at 1-844-44-ANZZI or visit us at www.ANZZI.com

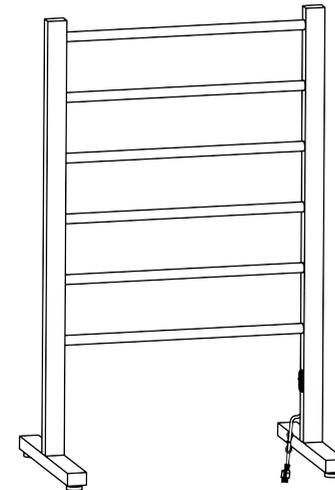

1. WARNING: This appliance is intended only for drying textiles washed in water.
2. "This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.

Voltage: AC120V, 60Hz


Power: 65W

avoid damage or danger caused by improper use, these users instruction should be carefully kept and followed. If you give the appliance to another person, ensure to also supply them with these user's instruction.


Safety Cautions

- Ensure that your mains voltage corresponds to that stated on the appliance. The appliance should be connected to an earthed main socket.
- Never use the appliance with a damaged cord. If the power cord damaged, it must be replaced by the manufacturer or the its service agent or similarly qualified person in order to avoid a hazard. Before cleaning, always unplug the appliance from the power supply. All repairs should be made by a competent qualified electrician.
- Competent qualified electrician : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger.
- In any case you should return the appliance to the electrician.

Mounting

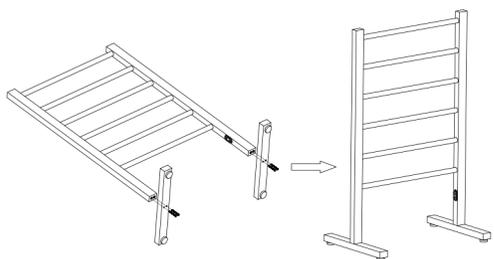

Attach the freestanding leg to the unit

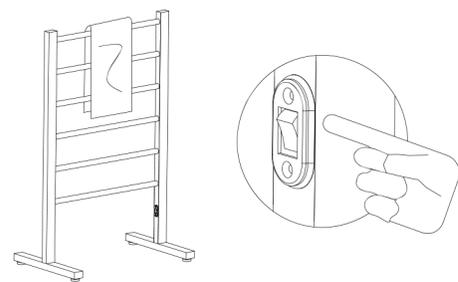

Plug into an earthed main socket.
Turn on the switch to start working and
turn off when it is not in use.

Disposal

Please respect the environment!

Dispose the packaging according to the local garbage regulations.

Dispose paper and carton separately from plastic bags into the corresponding containers

Dispose the appliance at the end of its lifespan according to environmental considerations.

Important information

In case of malfunction you may send the appliance to your dealer, information about the malfunction and the original purchase receipt (which is obligatory for a repair free of charge)

Within the guarantee period we repair defects of the appliance, which are based on material or manufacturing faults, in our choice by repair or exchange. These obligations do not extend the period of guarantee. No claim on a new period of guarantee results from it.

An exact description of the complaint reduces the processing time.

We apologise for any inconvenience, that any claims of good-will are excluded:

- after expiry of the lifetime due to the construction and especially for batteries, accumulators, electric lamps etc.

- for consumption accessories and wear parts such as driving belts, motor coals, tooth brushes, grinding.

- attachments, dough hooks, beaters, mixer attachments, round cutters etc.

- in case of breakage, as e.g. glass, porcelain or plastic.

- in case of damages in transport, misuse.

- in case of lack of care, cleaning and maintenance and in case of non observance of operation or mounting instructions.

- in case of chemical and/or electrochemical effects.

- in case of operation with wrong type of current respectively voltage and in case of connecting to unsuitable power sources.