



RANGE HOOD

USER MANUAL

Dear Consumer,
Thank you for your purchase of our range hood.
Please make sure to read all the instructions carefully
before proceeding with the installation of the range hood.

TECHNICAL SPECIFICATIONS

Model No.: ☐ TRI-RS-7475E1

☐ TRI-RS-7475F1

Total power: 69W

Motor power: 65W

Led light: 2x2W

Voltage: 120V

Frequency: 60Hz

Filter: Aluminum filter
Steel baffle filter

Control: Touch control

Model No.: ☐ TRI-RS-7275E1

☐ TRI-RS-7275F1

Total power: 204W

Motor power: 200W

Led light: 2x2W

Voltage: 120V

 
Frequency: 60Hz

Filter: Aluminum filter
Steel baffle filter


Control: Touch control

PARTS INCLUDED

Hood body

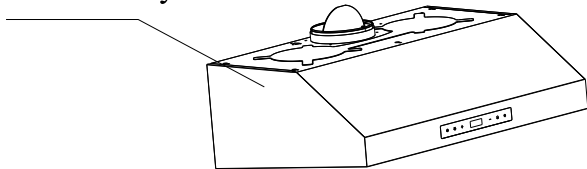

Baffle filter

 


INSTALLATION REQUIREMENT

1. Do not install the Range hood where there are many doors or windows in order to avoid effecting the exhaust efficiency caused by air convection.
2. Install the Range hood directly above the cooking surface. The recommended distance between the cooking surface and the bottom of the range hood is minimum 24" and maximum 27".
3. In order to get the optimum performance, do not extend the vent pipe too far (you can buy the Φ 153mm or 6" diameter vent pipe), adjust the vent pipe, and make sure the connection is sealed correctly.
4. After hanging the unit on the wall, make sure the hood is level and vertical.
5. The air outlet must not be connected to chimney flues or combustion gas ducts. The air outlet must not be connected to ventilation ducts for rooms in which fuel-burning appliances are installed.

INSTALLATION PROCEDURES


SAFETY WARNING

 HOOD MAY HAVE SHARP EDGES; PLEASE WEAR PROTECTIVE GLOVES IF IT IS NECESSARY TO REMOVE ANY PARTS FOR INSTALLING, CLEANING OR SERVICING.

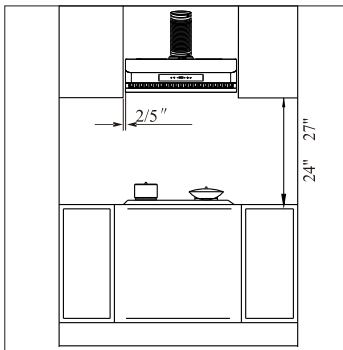


Step 1:

 Fix the position of the range hood in accordance with the recommended height between 24" to 27" from the cooking surface to the bottom of the hood.

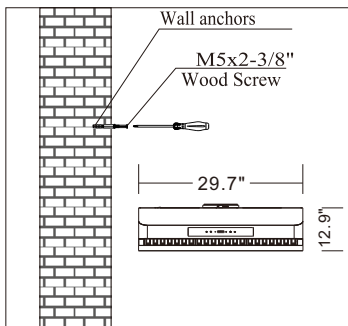


Step 2:

 Drill 2 level holes in the wall with 8mm in diameter and 2 3/8"-2 3/4" in depth. Press the 2 anchors provided into the holes. Install the 2 wood screws 2 3/8" which are supplied with the hood. Make sure it is securely fastened to the wall.

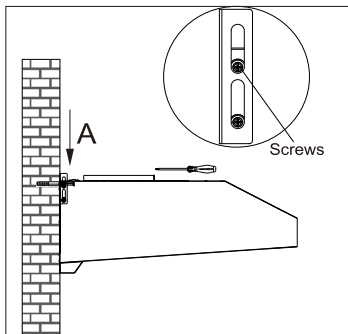


Step 3:

 Unscrew the hook with a screwdriver, then adjust the height. Screw it tightly and hang the range hood. The 2 wood screws to the wall anchors after the hood is level and of the hook to connect the hood body. Fasten all final adjustments are made.

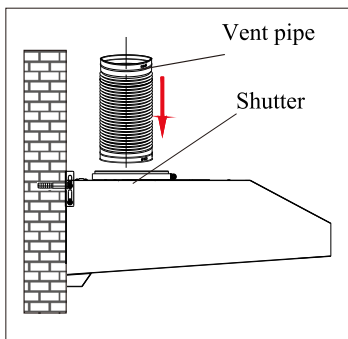

Step 4:

 Fix the vent pipe ($\Phi 153/6"$ diameter) onto the shutter.

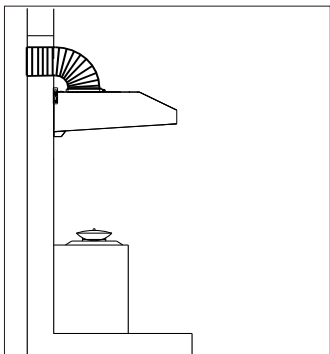


Step 5:


Extend the air outlet of the vent pipe outside. Make the bend of the vent pipe no more than 120° .

IMPORTANT SAFETY INSTRUCTIONS:

 
NOTE: 1) The appliance is not to be used by children or persons with reduced physical, sensory or mental issues, or lack of experience and knowledge, unless they have been given supervision or instruction.

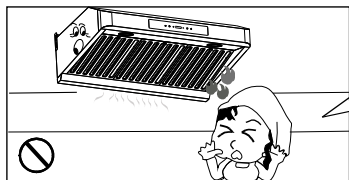

 
Do not connect the air outlet to chimney flues or combustion gas ducts.

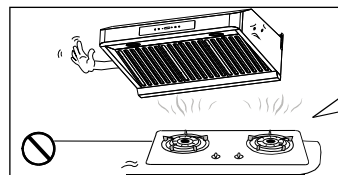

 
Do not leave unattended open flames under this hood

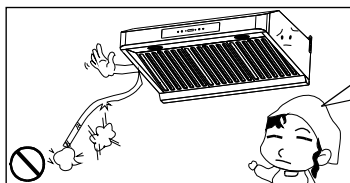

 
In case of any damage to power cable, replace the broken cable with a new one by a qualified person.

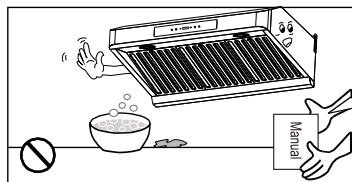

 
Clean the hood correctly in accordance with instructions or it might cause the possibility of fire or operation problems.

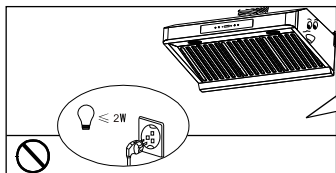

 
Replacing the Led lamp should be performed by a qualified person. Always use a LED light 2W or less.

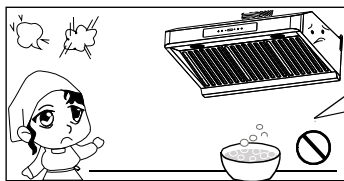

 
Never wash the control switch with water or it will cause electrical problems for the hood.

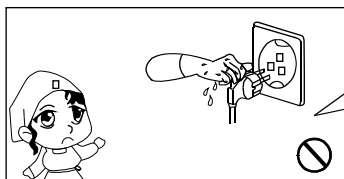

 Never pull the plug out of the power supply with wet hands to avoid the possibility of electric shock.

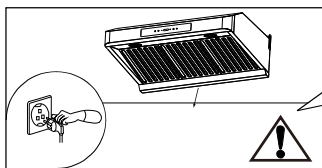

 Disconnect the hood from the power supply if the appliance will not be used for an extended period time.

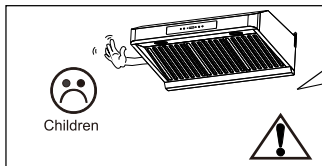

Please do not allow Children to operate the device without proper supervision.

MAINTENANCE

CAUTION: NEVER PUT YOUR HAND INTO THE HOUSING AREA OF THE FAN WHILE THE FAN IS OPERATING.

FOR THE OPTIMAL LEVEL OF OPERATION, CLEAN THE RANGE HOOD SURFACE, FAN, AND ALUMINUM FILTER REGULARLY.

 
1. Use only mild soap or detergent solutions to clean the range hood surface. Dry surface using soft cloth.
2. Use a stainless steel cleaner to polish the stainless steel finish.
3. Clean the aluminum filter once a week with regular use. Press the buckle of the aluminum filter slightly, take off the aluminum filter and put it into warm soapy water using mild detergent, wipe the aluminum filter with soft brush. Replace the filter after it is dry.
4. Clean the motor fan and other inside parts every 6 months or according to recommendations from the manufacturer.
5. DO NOT clean motor with water or other liquid.

TO REPLACE LED LIGHT


Make sure all control switches are off, and range hood is unplugged.

Please follow below instructions:

1. Use Philips head screwdriver to pop out the lamp assembly, then unplug lamp from the internal wires.
2. Connect the new lamp assembly with internal electrical wire and push the light into the hood lamp hole.

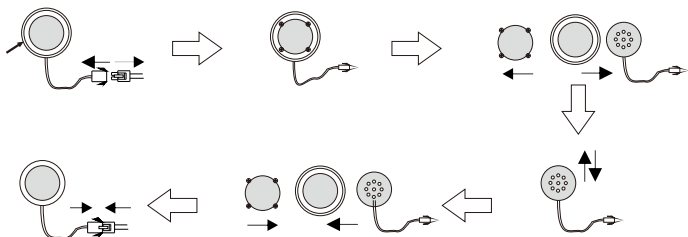


OPERATING INSTRUCTION

 

1.How to use the Touch Control

 - ☀ Press to turn on /off the light.
- ✿ Press to select the high speed.
- ✿ Press to select the medium speed.
- ✿ Press to select the low speed.
- ⏻ Press to select on/off.




Timer Speeds

Light On/off



Time setting: Press approximately 3 seconds to set time.

Touch  (Light) to set minute.

Touch  (Speed) to set hour.



Press once to get high speed, 2nd to get middle speed and 3rd to get low speed, and recycle.



Touch to turn on/off the light.



In standby mode, press to get the hood on.

In working mode, press once to get one minute delay to turn off the hood, press again to turn off immediately.

WARNING – TO REDUCE THE RISK OF A RANGE TOP GREASE FIRE:

- a) Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.
- b) Always turn hood ON when cooking at high heat or when flambeing food (i.e. Crepes Suzette, Cherries Jubilee, Peppercorn Beef Flambe').
- c) Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter.
- d) Use proper pan size. Always use cookware appropriate for the size of the surface element.

WARNING – TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A RANGE TOP GREASE FIRE, OBSERVE THE FOLLOWING: SMOTHER FLAMES with a close-fitting lid, cookie sheet, or metal tray, then turn off the burner. **BE CAREFUL TO PREVENT BURNS.**

- If the flames do not go out immediately, **EVACUATE AND CALL THE FIRE DEPARTMENT.**
- b) **NEVER PICK UP A FLAMING PAN** – You may be burned.
- c) **DO NOT USE WATER**, including wet dishcloths or towels – a violent steam explosion will result.
- d) Use an extinguisher **ONLY** if:
 - 1) You know you have a Class ABC extinguisher, and you already know how to operate it.
 - 2) The fire is small and contained in the area where it started.
 - 3) The fire department is being called.
 - 4) You can fight the fire with your back to an exit.

WARNING: TO PROVIDE PROTECTION AGAINST ELECTRIC SHOCK, CONNECT TO PROPERLY GROUNDED OUTLETS ONLY.
A UTILISER SEULEMENT AVEC UNE TROUSSE DE RACCORDEMENT DE CORDON DE HOTTE VÉRIFIÉE ET APPROUVÉE POUR EMPLOI AVEC CE MODÈLE DE HOTTE.

WARNING - To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device. AVERTISSEMENT : NE CONVIENT PAS A DES REGULATEURS DE VITESSE A SEMI-CONDUCTEURS.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING – Improper grounding can result in a risk of electric shock.

Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician install an outlet near the appliance

CONSIGNES DE MISE A LA TERRE

Cet appareil doit être mis à la terre. En cas de court-circuit, le fil de mise à la terre limite le risque de choc électrique parce qu'il assure le retour du courant à la terre. L'appareil est livré avec un cordon muni d'un fil de terre et d'une fiche de mise à la terre, qui doit être branchée sur une prise mise à la terre correctement installée.

AVERTISSEMENT — Une mise à la terre incorrecte peut entraîner des risques de choc électrique. Consulter un électricien compétent en cas de doute sur ces consignes de mise à la terre ou en cas d'incertitude concernant la mise à la terre correcte du circuit sur lequel l'appareil est branché.


Ne pas utiliser de cordon de rallonge. Si le cordon d'alimentation est trop court, faire installer une prise par un électricien compétent à proximité de l'appareil.

WARNING - TO REDUCE THE RISK OF FIRE, USE ONLY METAL DUCT WORK.

TROUBLES SHOOTING

CAUTION: Disconnect the power supply before servicing.

Status	Cause & Method of Repairing	Tools required
No power	Check circuit breakers. If the power supply is damaged, please call a qualified person to repair.	Philips Screwdriver
The light works but the motor does not run	a) Remove the fan guard and rotate the fan by hand. If the fan cannot move smoothly, the core or bearings of the motor may be damaged. In this case, replace with a new motor. b) If the motor stops running and has a bad odor, the motor should be replaced. c) If the starting wire (yellow) is disengaged from the condenser, it needs to be replaced. d) If the condenser is damaged, replace with a new one.	Philips Screwdriver
The light works but the motor does not run	a) Take off the filter and check to see if the connection between air inlet and wind chamber is sealed or not. b) Check the connection between air vent pipe and wind chamber for oil leaks. If "YES", seal with caulking.	Philips Screwdriver
Noise vibration	a) Please check motor mount screws. b) If the fan is damaged or unbalanced, replace with a new one.	Philips Screwdriver
Weak suction	a) The distance is too far between the Range Hood and cooking surface. b) Windows, doors and drafts can effect the performance of the range hood.	Philips Screwdriver
Hood not level	a) Check installation of range hood. b) Range hood must be level for better performance.	Philips Screwdriver
Light does not work	Just pull out LED Assembly and replace with a new one, then put the lamp back. a). Check to make sure light is plugged in. b). Replace light housing assembly.	Philips Screwdriver

Please note that this product is marked with this symbol:  According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product, Please do NOT dispose of this product with house hold waste. Please send this product to WEEE collecting points where available.