

# INSTALLATION INSTRUCTIONS

## FLL-360 Series

### LED Wall Light



## PRECAUTION

Read these instructions carefully before attempting to install the fixture. Retain instructions for future reference. Before beginning installation or service, disconnect the power by turning off the circuit breaker. Turning the power off by using the light switch is not sufficient to prevent electrical shock. All work should be performed by a qualified electrician. This fixture is for outdoor use and should not be used in areas with limited ventilation or high ambient temperatures. This product must be installed in accordance with the applicable installation codes and ordinances by a person familiar with the construction and operation of the product and the hazards involved. **NOTE:** In order to comply with established electrical code, the installer must seal the area around the mounting plate and the wall with silicone sealant to provide a watertight seal.

### AVERTISSEMENT:

S'assurer que toute alimentation possible est COUPE'E avant de commencer l'installation ou l'entretien. Tout le ca'blage doit e'tre fait par un e'lectricien vertifi'e.

## INSTALLATION

### Direct wall mounting to recessed box:

1. Remove the rear mounting plate by loosening the two allen head screws from bottom of the plate on the rear of the fixture.
2. Fasten the mounting plate to the recessed outlet box while leveling the mounting plate using the level bubble.
3. Splice leads from back of fixture to the power supply leads – black to black (hot), white to white (neutral), and green to green (ground). Push the splices into the outlet box.
4. Align the fixture against the mounting plate. Take care to not pinch the wire leads.
5. Secure the fixture by tightening the two allen head screws to lock the mounting plate.
6. For wet locations, caulk between the rear housing and the mounting surface to prevent water from entering the fixture from behind.
7. The LED light engine is preinstalled and prepositioned. **DO NOT OPEN** the unit. **DO NOT TOUCH THE SURFACE OF THE LEDS.**

**NOTE:** This fixture must be mounted in the **LENS DOWN** position.

## WIRING

LED units are multi-voltage 120-277 VAC. No additional tap wires are provided.

## TROUBLESHOOTING CHECKLIST -- If the light does not work

- Check your power source.
- Check electrical connections.