





HOOKER[®]

— FURNITURE —

ASSEMBLY INSTRUCTION

Item#: 638-50458-00 Giselle Acrylic Leg Pouf

*** Caution: Please read all instructions carefully before starting the assembly process.

NO	HARDWARE LIST		Q'TY
A		FLAT WASHER	8
B		LOCK WASHER	8
C		BOLT	8
D		ALLEN WRENCH	1

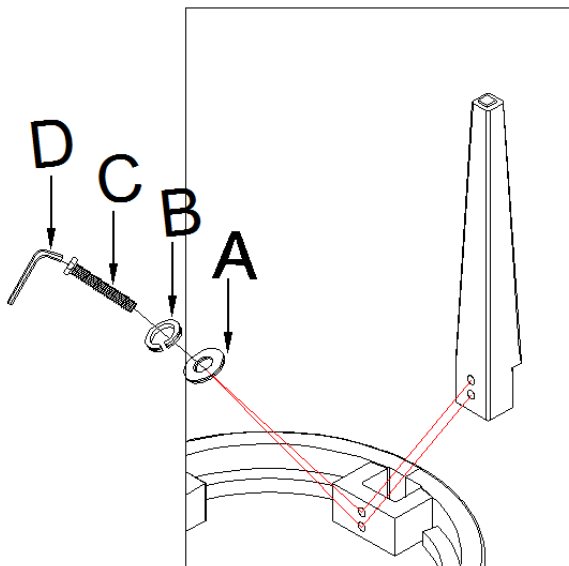
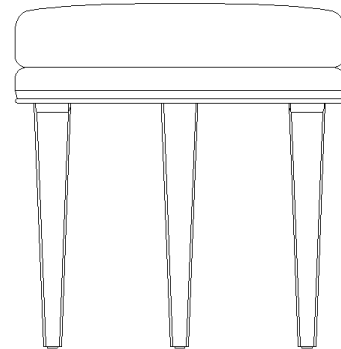


Diagram 1

Assembly Steps:

1. Place pouf top upside down on a soft surface to prevent it from being scratched.
2. Follow numbers on legs. Attach four acrylic legs to pouf top by using flat washers (A), lock washers (B) and bolts (C), secure by turning with allen wrench (D) in a clockwise direction. (See Diagram 1)
3. Turn pouf upright.

Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.