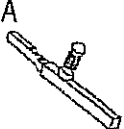



 
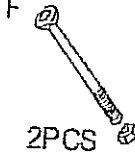


 

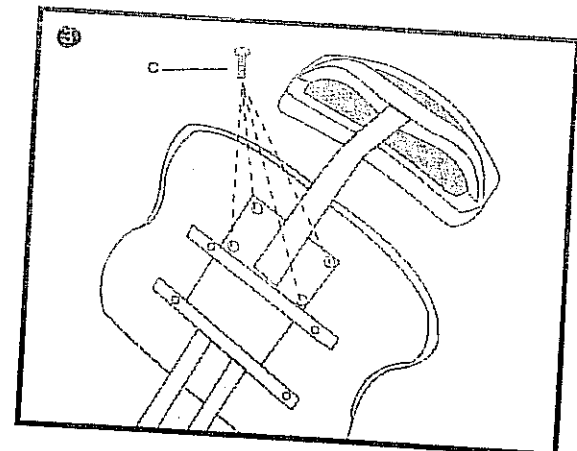
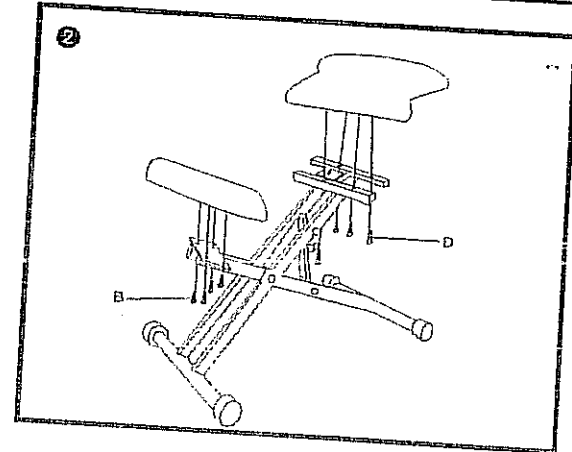
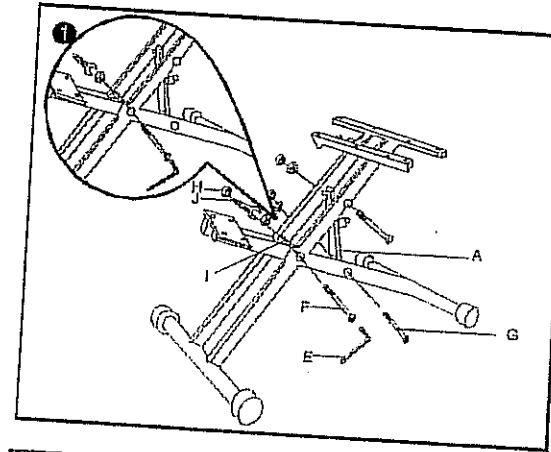
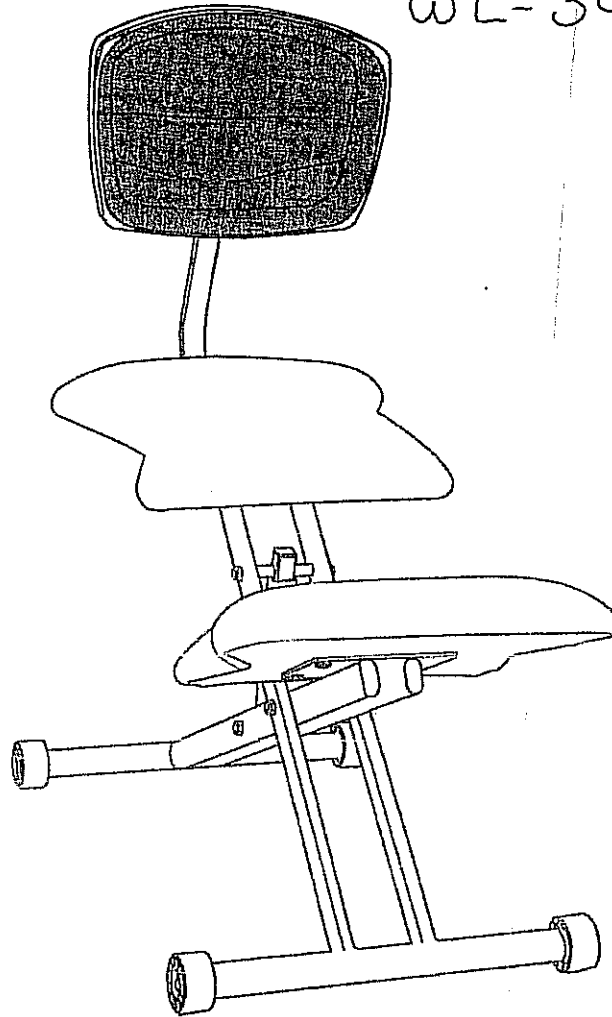


Model 3440 Assembly Instructions

WL-3440-GG

Parts Listing

- | | |
|--|--|
| A  1PC | B  4PCS (S) |
| C  4PCS (M) | D  4PCS (L) |
| E  1PC | F  2PCS |
| G  1PC | H  3PCS |
| I  1PC | J  1PC |



ASSEMBLY NOTES:
 During assembly, hand tighten screws only. When all screws are in place, you may then tighten all screws completely.
CAUTION: 1. Do not use this chair as a step ladder.
 2. Check for loose screws and tighten them anytime.