

PRODUCT MAINTENANCE:

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.
2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture.
3. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust and wipe carefully.

TROUBLESHOOTING:

Problem	Possible Cause	Corrective Action
Light will not turn on.	Power is off.	Make sure power supply is on.
	Faulty switch.	Test or replace switch.
	Faulty wire connection.	Check wiring.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.

LIMITED WARRANTY


The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether expressed or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

KEEP your receipt and these Instructions for Proof of Purchase.

X-Light Surface Mount Light

Models 6160 - 6162 - 6164 - 6166

INSTALLATION MANUAL

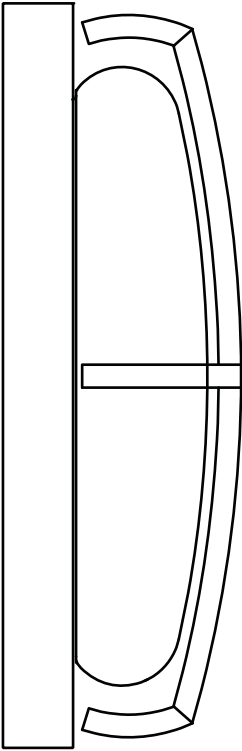

INSTALLATION INSTRUCTIONS:

- **WARNING:** Installation should be performed by a qualified licensed electrician.
- **DANGER:** Before installation, turn off the main power at the circuit breaker.

1. Install the canopy mounting bracket to the ceiling box with supplied screws.
2. Make the wiring connections using the supplied wire nuts from the light fixture to the supply wires in the ceiling box.
6. Slide the canopy housing over the mounting bracket and secure with the mounting screws.
7. Install light bulbs (not included).
8. Install the glass - metal fixture using the canopy threaded rod into metal globe canopy and secure with retainer nut.


NOTE: If you have electrical questions, consult your local electrical code for approved grounding methods.

TOOLS REQUIRED FOR INSTALLATION AND ASSEMBLY (not included):

- | | | | | | |
|---|---|---|---|---|---|
|  |  |  |  |  |  |
| Phillips Screwdriver | Flathead Screwdriver | Adjustable Wrench | Wire Strippers | Safety Goggles | Electrical Tape |

PARTS INCLUDED

- | | | | | | | |
|---|---|---|---|---|---|---|
|  |  |  |  |  |  |  |
| Wire Nuts (3) | Mounting Screws (2) | Threaded Rod Connector | Threaded Rod | Retainer Nut | Nut | Washers (2) |

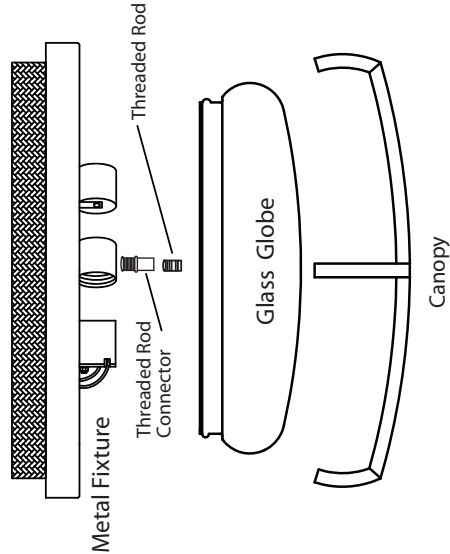

For energy savings we recommend using a CFL or LED bulbs in the light.



Fluorescent

LED

