 


# ASSEMBLY INSTRUCTIONS


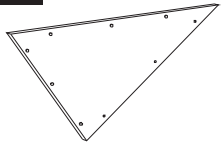 
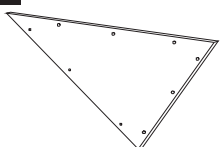 
 
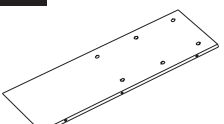 

 
 
## DINING TABLE

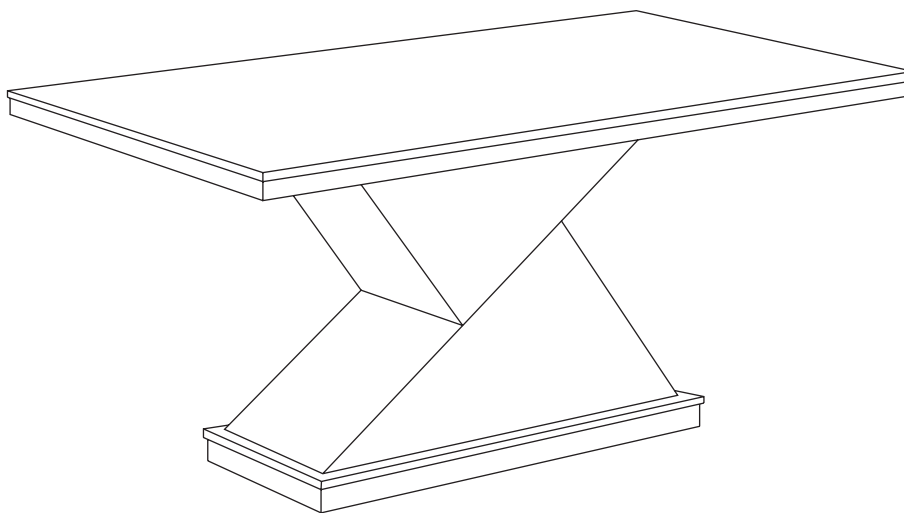



 

 

 

 
 
### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


## PARTS IDENTIFICATION
 
<b>A</b> Quantity: 1  Table Top	<b>B</b> Quantity: 2  Side Leg Panel (Left)	<b>C</b> Quantity: 2  Side Leg Panel (Right)	<b>D</b> Quantity: 1  Connecting Panel (Upper)	<b>E</b> Quantity: 1  Connecting Panel (Lower)
<b>F</b> Quantity: 2  Diagonal Panel	<b>G</b> Quantity: 1  Base Frame	<b>H</b> Quantity: 1  Mounting Panel		


## HARDWARE LIST

<b>1</b> Quantity: 36  Camlock	<b>2</b> Quantity: 36  Connecting Bolts	<b>3</b> Quantity: 4  JCBC Bolt m6 x 35mm	<b>4</b> Quantity: 4  Leg Leveller	<b>5</b> Quantity: 2  Wooden Dowel m10 x 30
<b>6</b> Quantity: 1  Allen Key	<b>7</b> Quantity: 8  CSK Screw m4 x 32	<b>8</b> Quantity: 2  Metal Bracket	<b>9</b> Quantity: 4 for Metal bracket  CSK Screw m4 x 16	<b>TOOLS REQUIRED</b>  Household screw driver

## STEP 1 *Align connecting bolts* **TWO SETS**

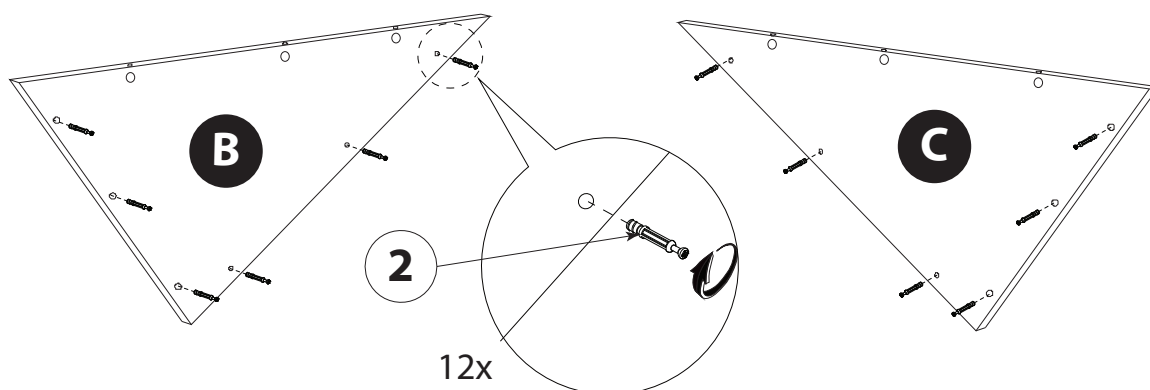


## STEP 2 *Firstly, Assemble Upper Leg base.*

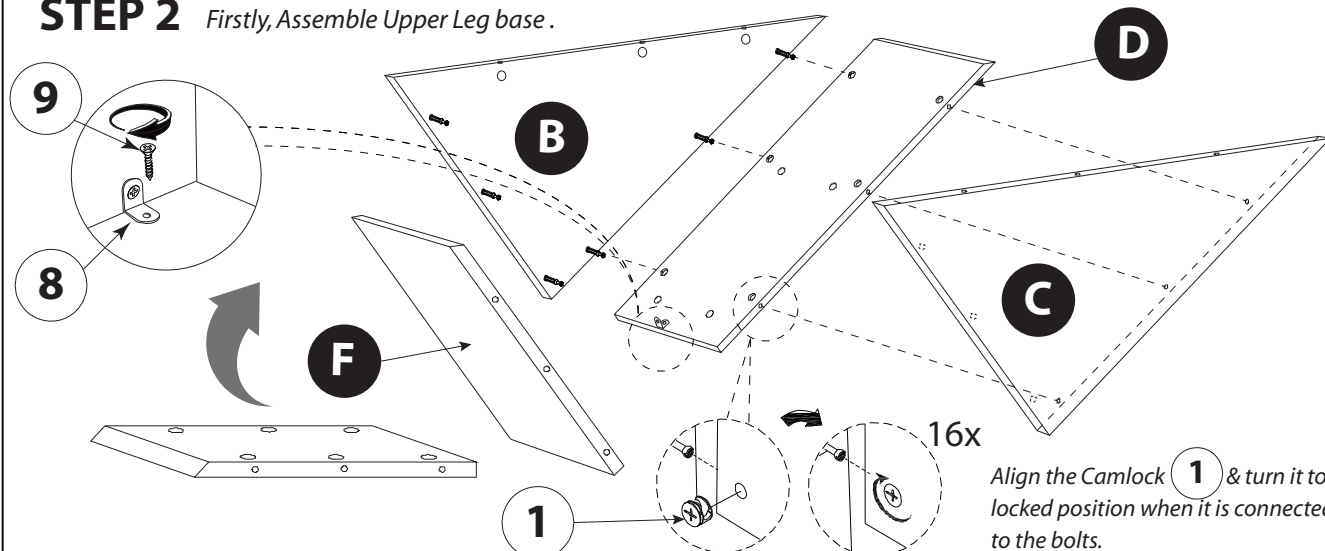 


## STEP 3 Assemble Lower Leg base.

 
## STEP 4 Connect Lower Leg Base to the Base Frame.

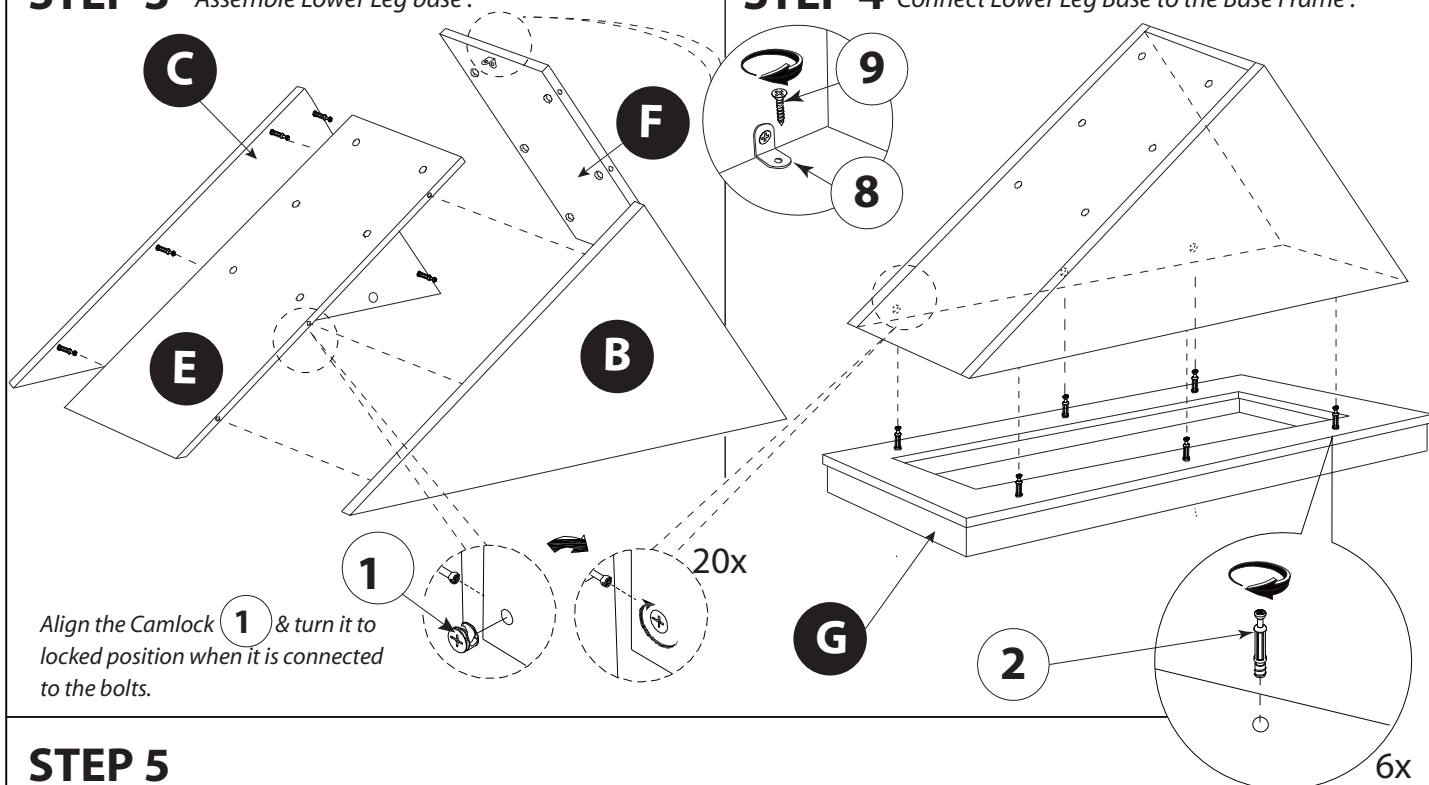

## STEP 5

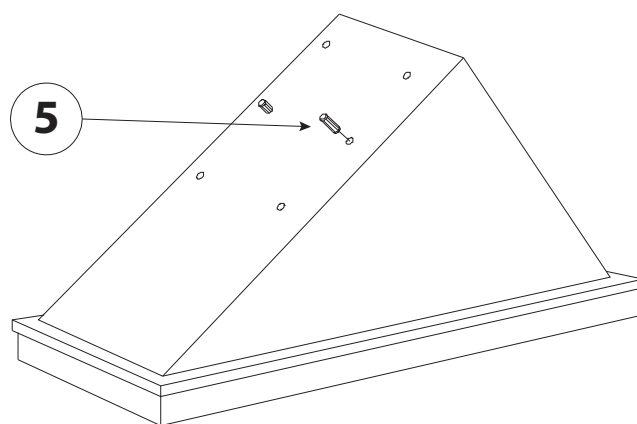 


## STEP 6 Connect both Leg Bases.

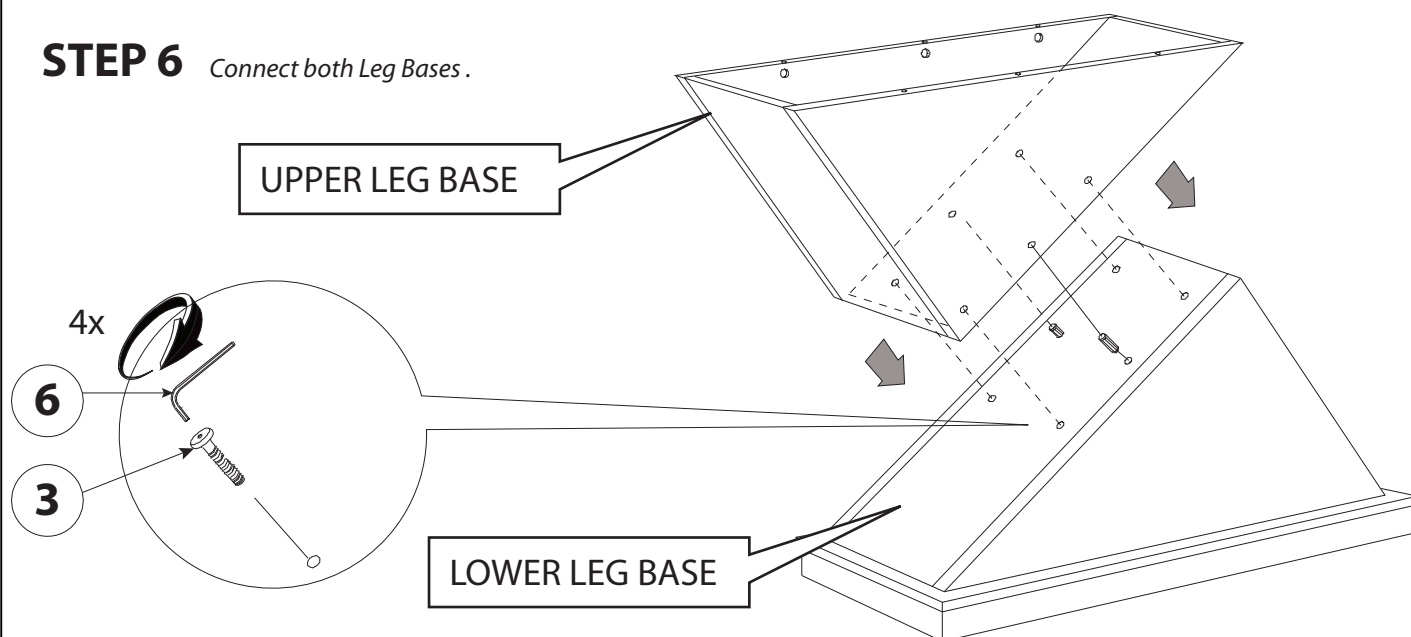 


ENSURE TO FULLY TIGHTEN ALL THE BOLTS BEFORE ASSEMBLING THE LEG BASE TO THE TABLE TOP

## STEP 7 Attach the Mounting Panel to the top side of the Leg Base.

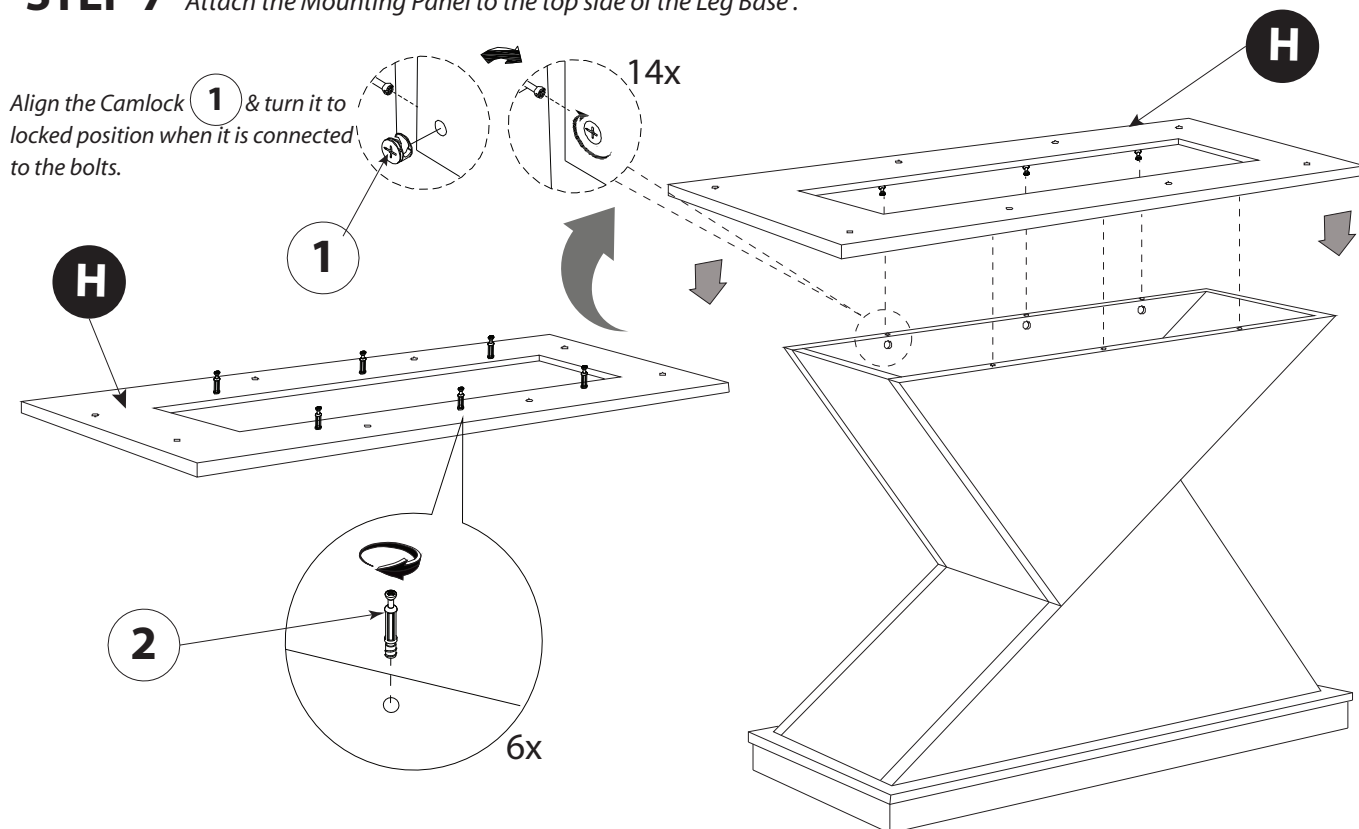 


## STEP 8

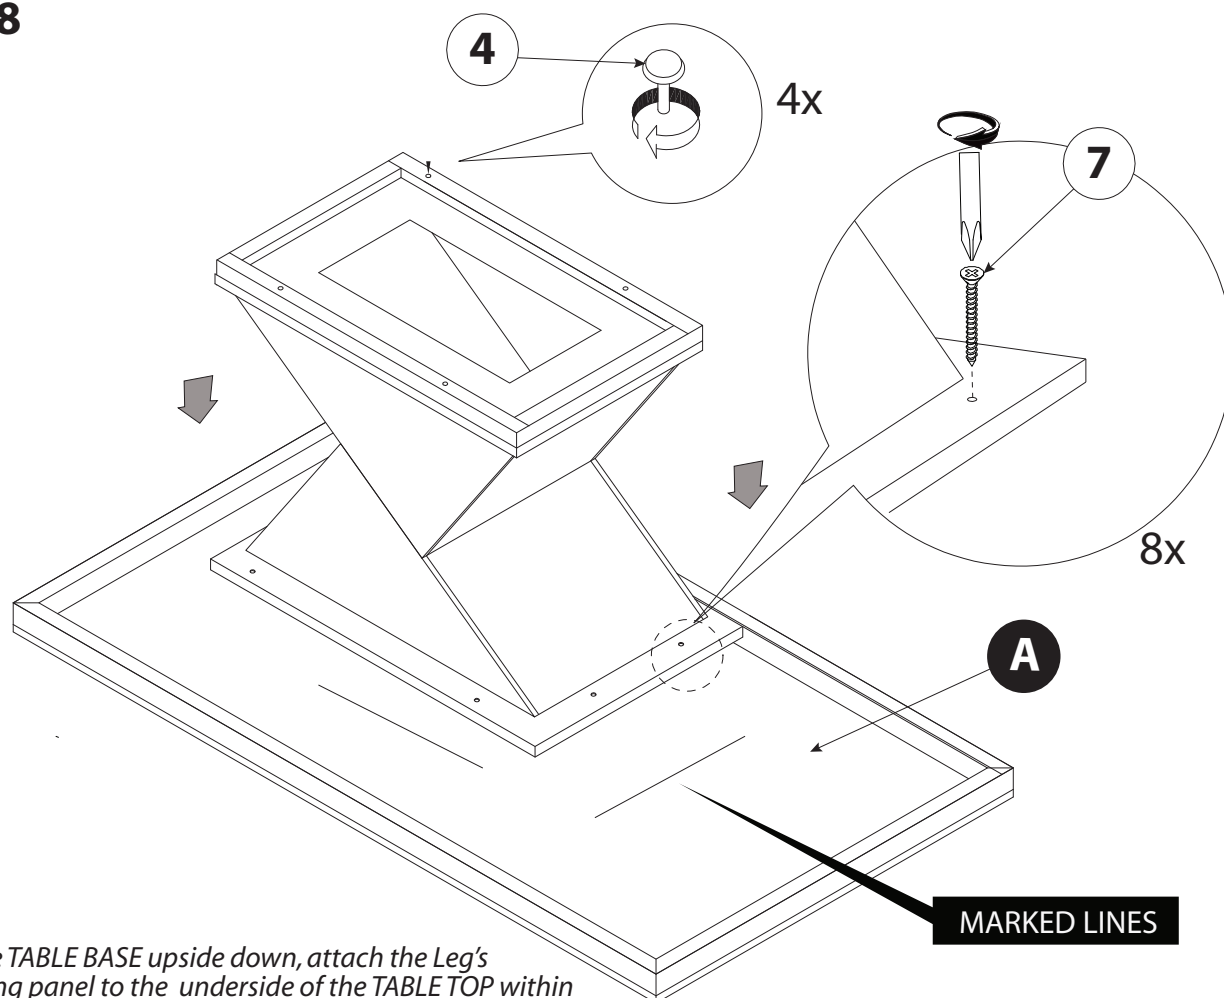 

Turn the TABLE BASE upside down, attach the Leg's mounting panel to the underside of the TABLE TOP within the marked lines, align screws, and tighten them. Make sure all screws are fully tightened before turning the table table upright, by two adults or more.

# ASSEMBLY INSTRUCTIONS
 
## DINING CHAIR

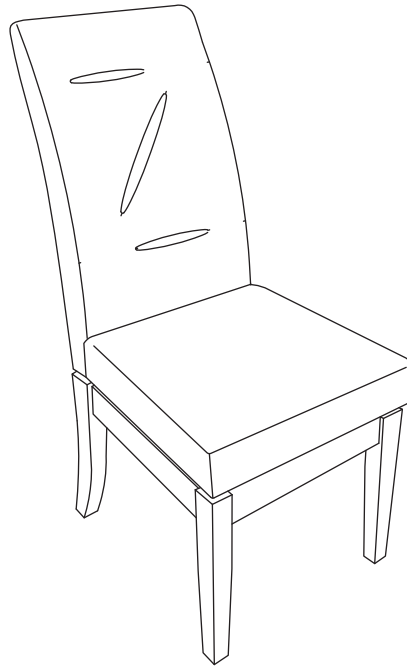

### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

# Chair Assembly Tips

The key to correct chair assembly is to loosely attach all of the bolts, then gradually tighten them in succession until all of them are secure. Completely tightening one or more bolts prematurely can result in the following:

## ISSUE: CHAIR IS UNLEVELED

 
### Cause:

- Chairs can be wobbly or unlevelled if one or more bolts are fully tightened before all bolts are attached and / or tighten.
- Chairs can be wobbly or unlevelled if assembly is completed in a different room or surface than where the product is intended to primarily reside.

### Solution:

- Loosen each bolt in the seat box (front legs, back corner-blocks, and back apron) until they are adjustable by hand. Place the chair upright on a flat surface. Press firmly and evenly on the seat edges until the product sits level but do not lean against the chair back. Once the chair sits level on the desired surface, fully tighten each bolt.
- When assembling your chair, make sure to do it in the location that the chair will most often be used. Uneven flooring frequently accounts for wobbling issues.

*Loosen bolts until adjustable by hand*

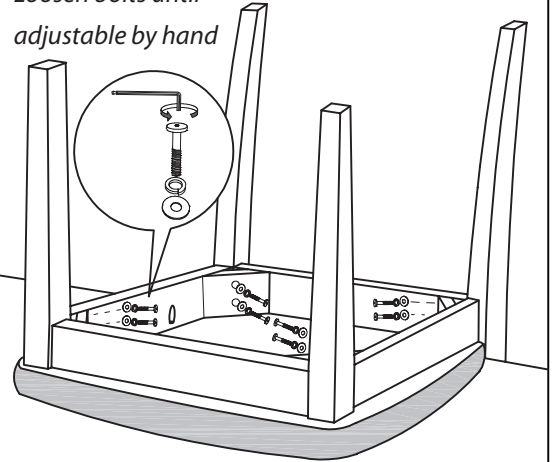



 

 
 
 
 

 
 


## ISSUE: HOLES ARE MISALIGNED

### Cause:

 
- This issue can occur when some bolts are tightened fully before all other bolts are tightened or attached.

### Solution:


- Loosen each bolt in the seat box (front legs, back corner-blocks, and back apron) until finger tight. This will allow you to realign the holes and properly fasten the bolts to the frame.

PARTS IDENTIFICATION ( quantity for 1 chair)				
<b>A</b> Quantity: 1  Chair Backrest	<b>B</b> Quantity: 2  Cushioned Seat	<b>C</b> Quantity: 1  Chair Base Frame (with Swivel Mechanism)	<b>D</b> Quantity: 1  Front Legs	<b>E</b> Quantity: 1  Back Leg (Left)
<b>F</b> Quantity: 1  Back Leg (Right)	<b>HARDWARE IDENTIFICATION ( quantity for 1 chair)</b>			
	<b>1</b> Quantity: 4  JCBB Bolt m6 x 25mm	<b>2</b> Quantity: 2  JCBC Bolt m6 x 45mm	<b>3</b> Quantity: 8  JCBC Bolt m6 x 50mm	<b>4</b> Quantity: 4  JCBC Bolt m6 x 80mm
<b>5</b> Quantity: 14  Spring Washer 1/4"	<b>6</b> Quantity: 14  Flat Washer 1/4"	<b>7</b> Quantity: 1  Allen Key		


STEP 1

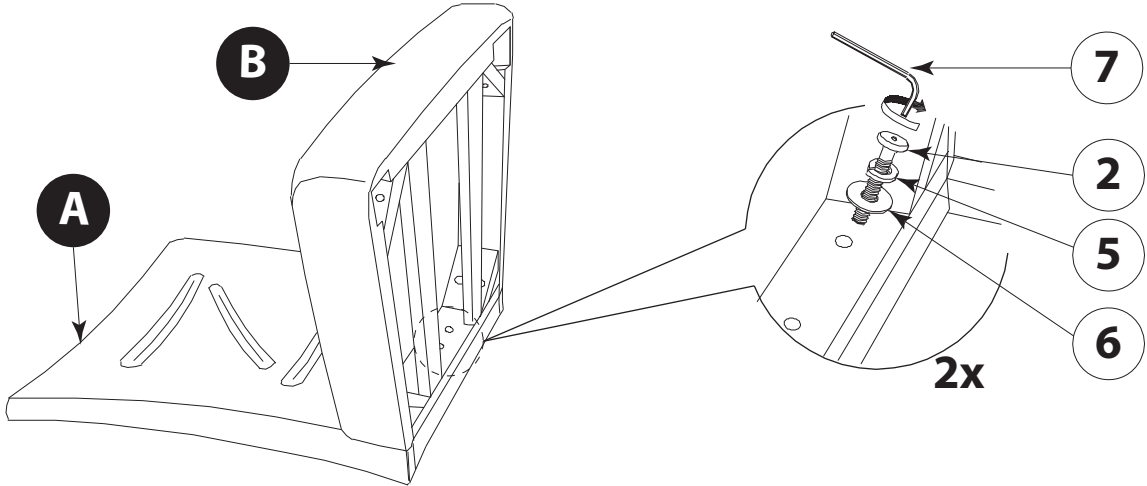

 
STEP 2

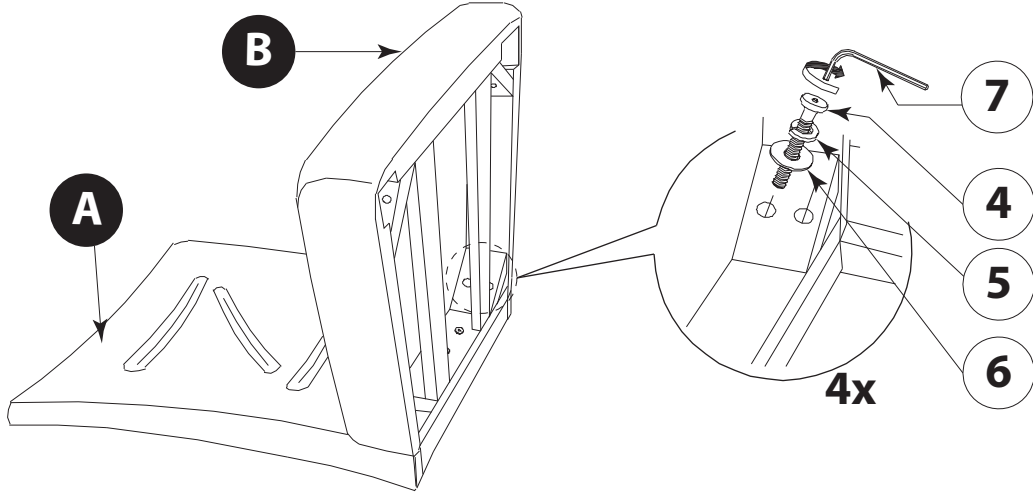


## STEP 3

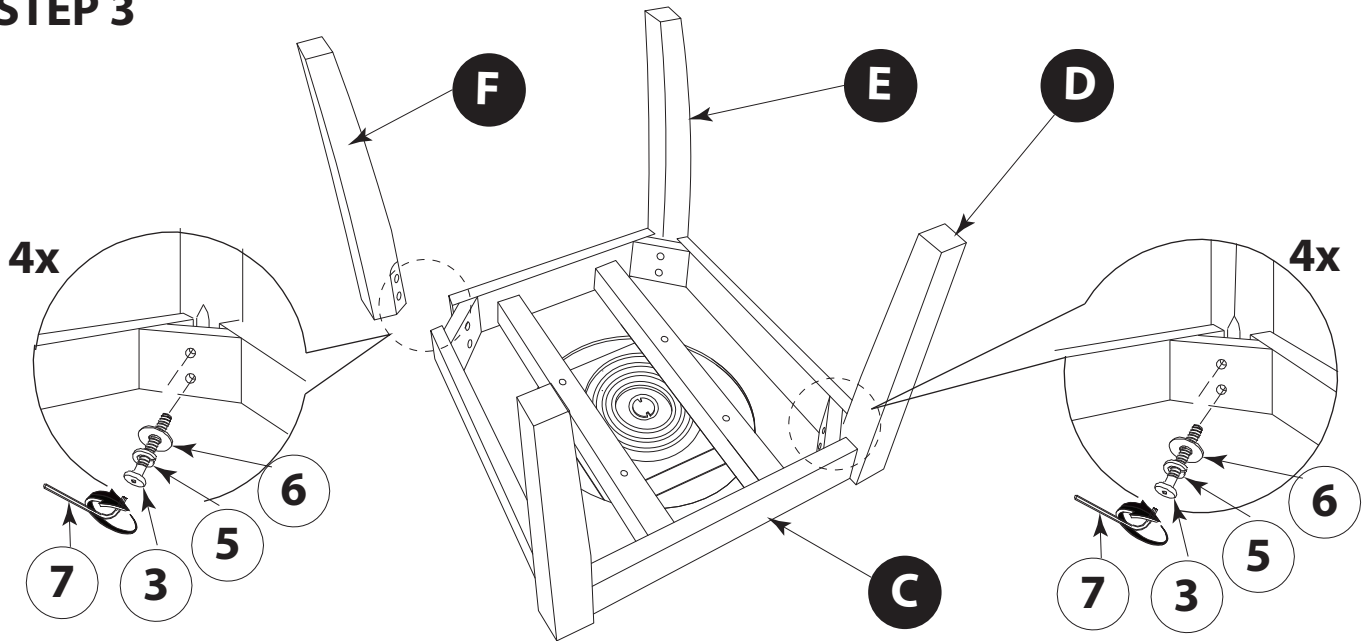 

## STEP 4

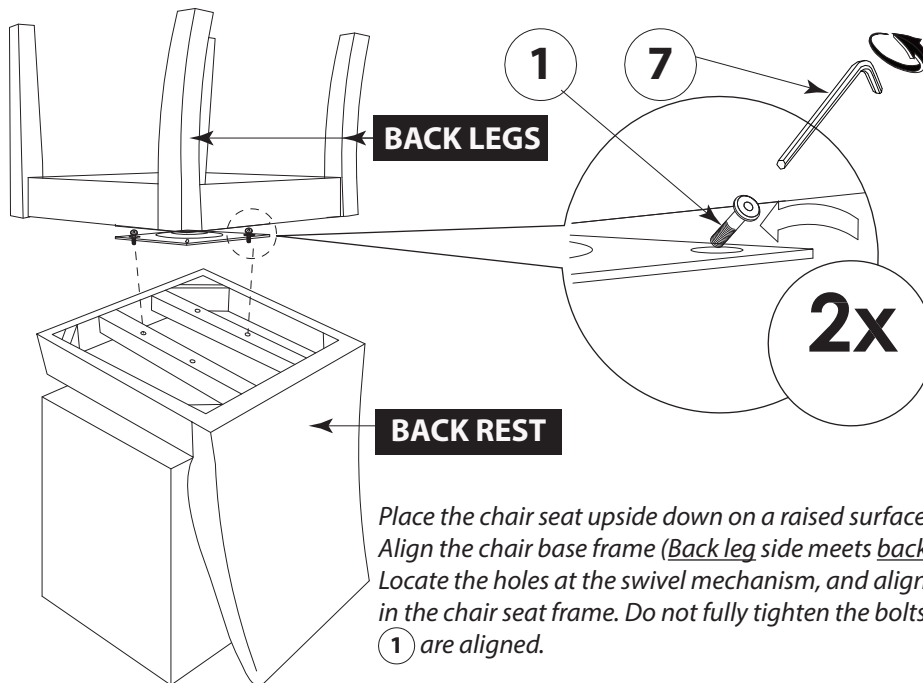 


## STEP 5

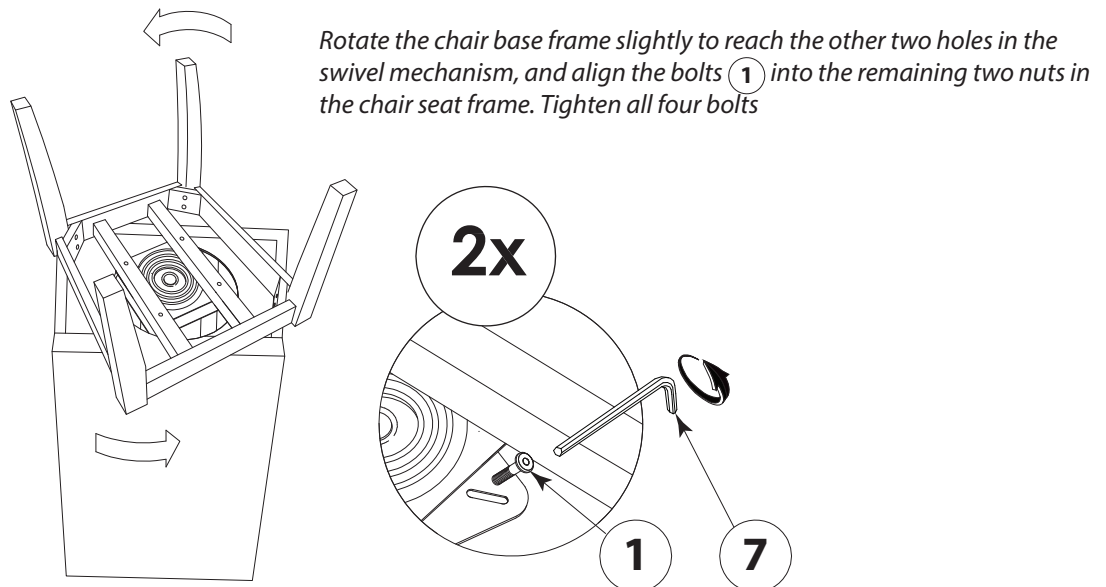 



# ASSEMBLY INSTRUCTIONS
 
## BENCH

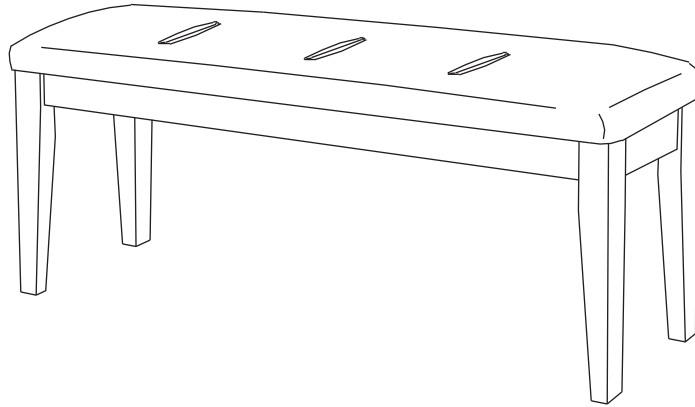

### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

# Chair Assembly Tips

The key to correct chair assembly is to loosely attach all of the bolts, then gradually tighten them in succession until all of them are secure. Completely tightening one or more bolts prematurely can result in the following:

## ISSUE: CHAIR IS UNLEVELED

 
### Cause:

- Chairs can be wobbly or unlevelled if one or more bolts are fully tightened before all bolts are attached and / or tighten.
- Chairs can be wobbly or unlevelled if assembly is completed in a different room or surface than where the product is intended to primarily reside.

### Solution:

- Loosen each bolt in the seat box (front legs, back corner-blocks, and back apron) until they are adjustable by hand. Place the chair upright on a flat surface. Press firmly and evenly on the seat edges until the product sits level but do not lean against the chair back. Once the chair sits level on the desired surface, fully tighten each bolt.
- When assembling your chair, make sure to do it in the location that the chair will most often be used. Uneven flooring frequently accounts for wobbling issues.

*Loosen bolts until adjustable by hand*

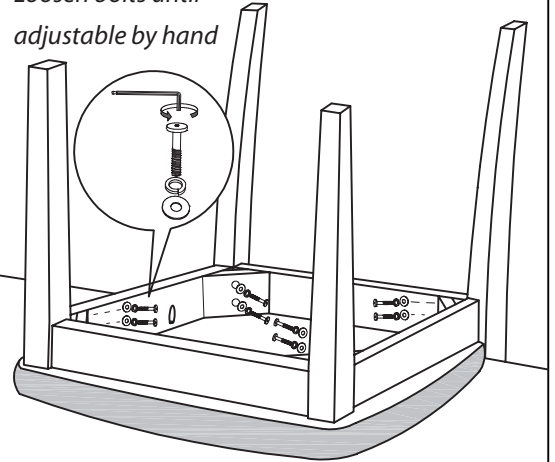



## ISSUE: HOLES ARE MISALIGNED





### Cause:

- This issue can occur when some bolts are tightened fully before all other bolts are tightened or attached.

### Solution:

  - Loosen each bolt in the seat box (front legs, back corner-blocks, and back apron) until finger tight. This will allow you to realign the holes and properly fasten the bolts to the frame.

PARTS IDENTIFICATION ( quantity for 1 bench)				
<b>A</b>	Quantity: 1	<b>B</b>	Quantity: 4	
				
Cushion Seat with aprons		Bench Legs		

   HARDWARE IDENTIFICATION ( quantity for 1 bench)								
<b>1</b>	Quantity: 8	<b>2</b>	Quantity: 8	<b>3</b>	Quantity: 8	<b>4</b>	Quantity: 1	
								
JCBC Bolt m6 x 60mm		Spring Washer 1/4"		Flat Washer 1/4"		Allen Key		

