

ASSEMBLY INSTRUCTIONS:

LEGACY CLASSIC

FURNITURE

9931-1230/1200 TV FRAME/DRESSER





Thank you for purchasing this quality product. Before beginning, please check the packing material carefully for small parts which may have come loose inside the carton during shipping. Please do not discard any packing material until all parts have been located. If any parts are missing, please contact your dealer for prompt replacement.











Caution: (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.


(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.

(3) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the below mentioned components are attached to the furniture properly and kept tightened.

Parts & Hardware List:


PARTS LIST			QTY
A	TV FRAME		1 PC
B	DRESSER		1 PC
C	METAL SUPPORT		2 PCS
D	TV mount bracket (Packed inside of TV frame)		1 SET

HARDWARE LIST		QTY	HARDWARE LIST		QTY		
1	BOLT	 ø5/16"*1-3/4"	8 pcs	6	LOCK WASHER	 1/4"	6 pcs
2	LOCK WASHER	 5/16"	8 pcs	7	FLAT WASHER	 1/4"	6 pcs
3	FLAT WASHER	 5/16"	8 pcs	8	ALLEN	 1/4"	1 pc
4	ALLEN	 5/16"	1 pc	9	TIPPING-RESTRAINT		2 set
5	BOLT	 ø1/4"*1"	6 pcs	10	LONG FELT FABRIC	 1440mm*45mm	1 pc

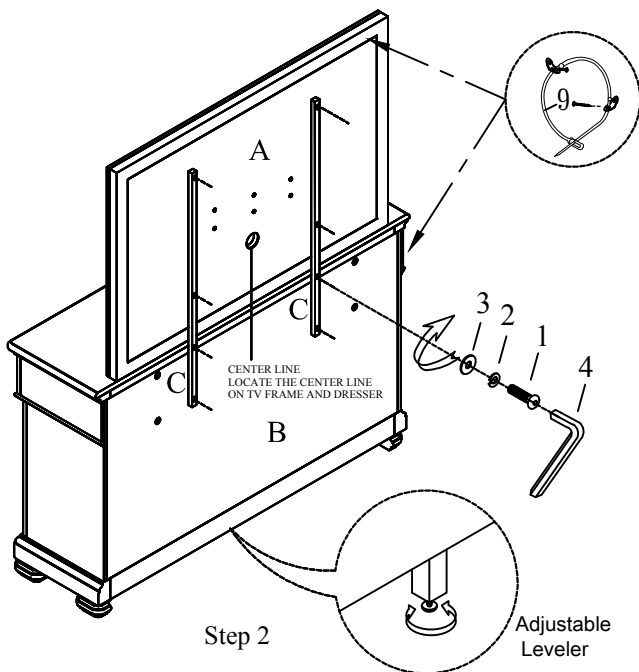

Step 2

Adjustable Leveler

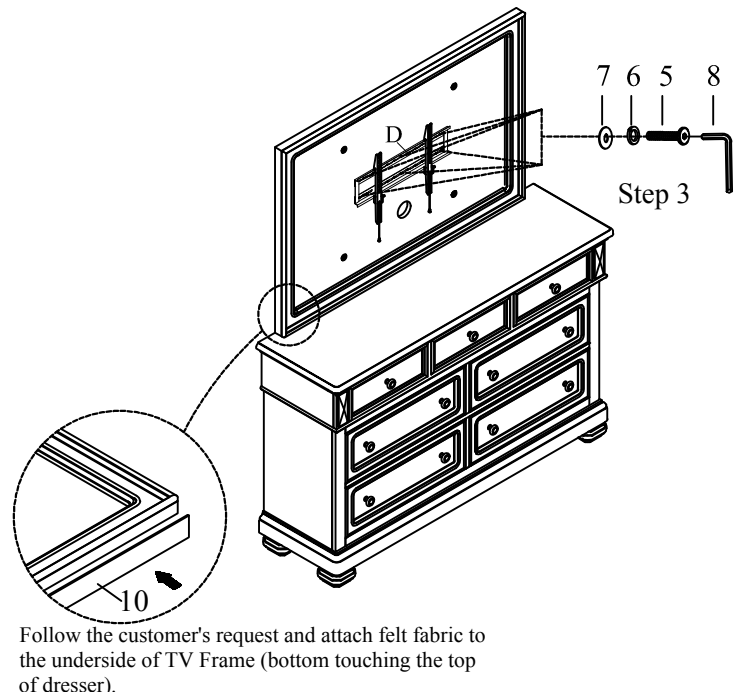

Step 3

Assembly Procedures :

Step 1: Lay out all parts and hardware on a clean protective surface to protect the furniture and floor during assembly. Make sure the quantity of each is correct and the feet are free of stain, staples, screws and nails.

Step 2: Place the TV frame (A) back down on a clean soft flat surface such as a blanket and ensure the surface is clean without any objects that could scratch or damage the TV frame.

Assemble the TV frame (A) to dresser (B) using hardware (1, 2, 3, 4) & metal supports (C) as shown.

Step 3: Assemble the TV mount bracket (D) to the TV frame (A) using hardware (5, 6, 7, 8) as shown. Use adjustable leveler as necessary. The center leg support leveler needs to touch the floor to support the weight of this unit.

Assembly is complete.