For Style 1099W17 Assembly Instruction Sheet #S- 1099W17


is Required: Fistheed ecrewither, Phillips ecrewither, pliers, who callers, who etippers, electical tops, eatily glasses it Source: (3) E12 Base Buth 60W Mischum(Not Include). Includ Assembly Time: 30-40 minutes


ration: Identify and inspect all parts before beginning installation. Check package content lat and diagrams below to be sure all parts are it. If any parts are miseing or damaged, do not attempt to assemble, install, or operate the ficture. Context customer service for replacement.

Warnings and Cautions

These instructions are provided for your safety. It is very important you read them completely before installing the titulure. We strongly recommend that a licensed, professional electricism perform the installation. 'um off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

Disconnect fixture from power source before repiscing builbs. Make sure builbs are given sufficient time to cool before remove

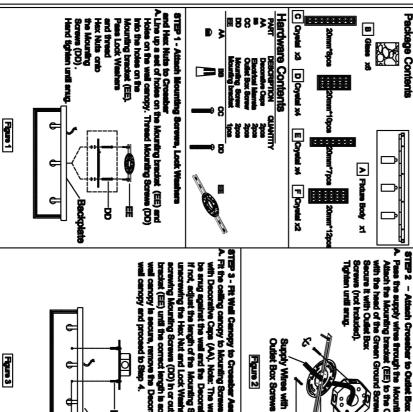

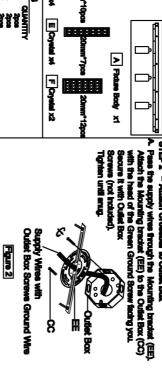

STEP 3 - Fit Wall Canopy to Grosebur Assembly
A. Fit the ceiling canopy to Mounting Screws (DD) and secure
with Decorative Caps (AA), Note: The wall canopy should
be anua gainst the wall and the Decorative Caps (AD).
If not, adjust the length of the Mounting Screws (DD) by
unacrewing the Hax Nut and Lock Wester and then acrewing Mounting Screws (DD) in or out of the Mounting bracket (EE) until the correct length is achieved. Once the I canopy is secure, remove the Decorative Caps (AA) and

