

INSTALLATION INSTRUCTIONS







For single hole installations, place deck gasket (F) on the underside of the faucet body (A). Insert faucet into sink




and insert faucet body (A) into opening.

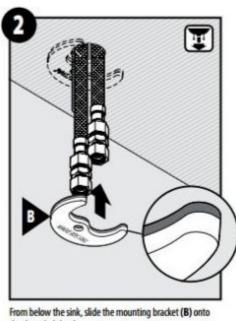


the threaded shank.

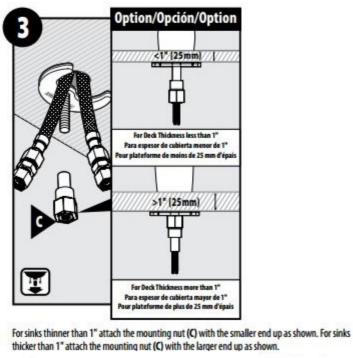


thicker than 1" attach the mounting nut (C) with the larger end up as shown.

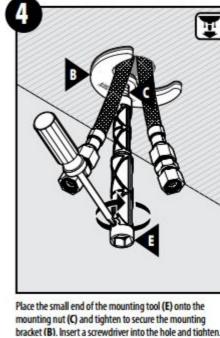


bracket (B). Insert a screwdriver into the hole and tighten.

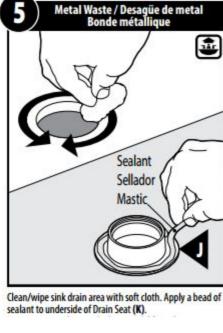


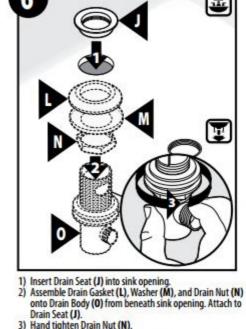

 3) Hand tighten Drain Nut (N).







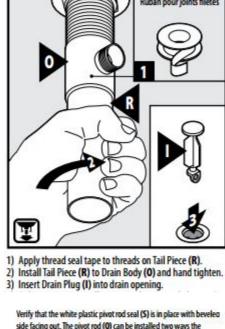



Verify that the white plastic pivot rod seal (S) is in place with beveloo side facing out. The pivot rod (Q) can be installed two ways the illustration shows the pivot rod in the EASY CLEAN position which allo

the plug to be pulled out for deaning. The other option (Illustrated in the inset) shows the pivot rod installed in the VANDAL PROOF position. The end of the pivot rod (Q) is inserted into the opening at the bottom

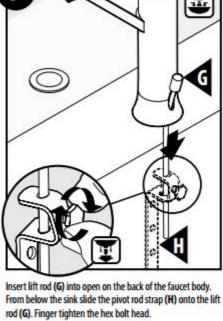

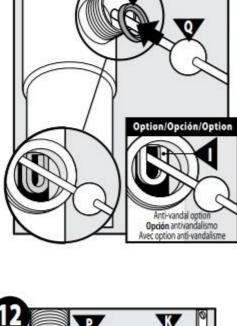


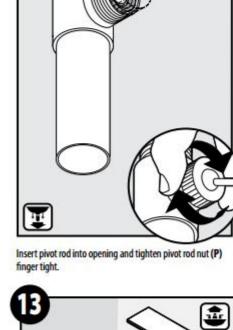


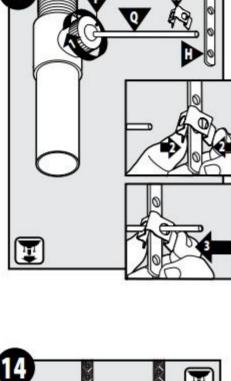

the positioning and let go to lock.


Slide one side of the pivot rod dip (K) onto the pivot rod (Q). Position the pivot rod strap (H) so the pivot rod (Q) passes through one side of the clip (K), through the closet hole on the pivot rod strap (H) and through the hole on the other side of the clip (K). Squeeze the ends of the clip (K) to adjust

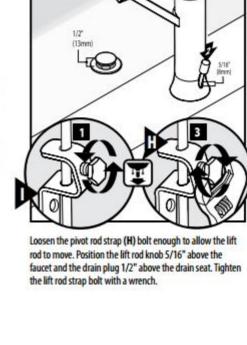


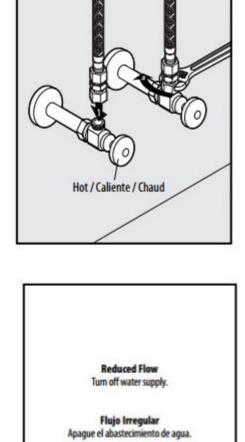

Hot Caliente Chaud T Turn on the water supply line valves on and check for leaks.

Cold Frio Froid

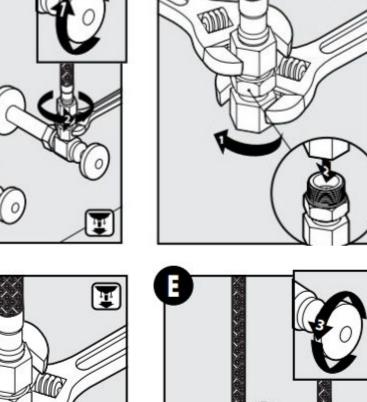

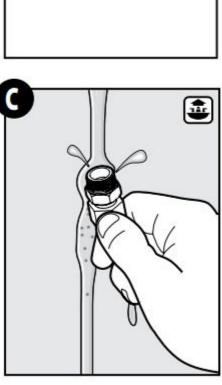

Débit Irrégulier Arrêtez l'approvisionnement en eau.

