

Claylight Boomerang Four Shades

- Bulb Type: Larger shades: 3 x Standard screw base up to 150W.
Smaller shade: 1 x candelabra bulb up to 60W. for maximum light textures, use clear bulbs.
- Cleaning of the clay shades and ceiling plate can be done with a clean dry/moist cloth, for stains use the supplied sand paper or a clean fine / medium sand paper
- Box includes: fixture, 4 bulbs, 2 wire nuts, 2 cross bar screws, sand paper for cleaning.
- UL sticker in on the largest shade's socket.

Installation instructions:

Should be installed by an electrician.


- The white clay is sensitive to dirt. Use clean hands while installing. If the ceramics got dirty during installation, you can sand them clean with the supplied sand paper.
- We highly recommend keeping the shades in their boxes for the beginning of the installation

Preparation:

1. Shut off power at the fuse box or circuit breaker box. If necessary, remove old fixture and all mounting hardware from old junction box.
2. The junction box in the intended installation spot should be able to hold 18lb of weight or more.

Installation:

1. Take the cross bar (it will hold the whole fixture) and screw the cross bar into the junction box using the supplied screws.
2. Connect the ground wire coming from the electrical junction box (if there is one) to the screw in the cross bar.

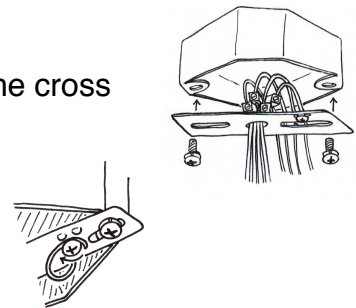

3. You can now carefully take the shades out of their wrappers.
4. The shades are set at their proportional height relative to one another (see picture) You can slide the boomerangs (and the ceiling plate using the threaded pipe) up or down on the cords to reach a balanced position. If you wish to set the fixture to a different height, see section 5.
5. Holding on to the cord, so that the shade won't fall, use the flat head screw on the plastic strain reliefs that are now in the junction box to adjust the shades to the desired height. The larger shade requires two black strain reliefs and the dot



pattern shades have white strain reliefs. (pull the strain relief out of the junction a bit so it will be easier to reach the screw.) once adjusted, screw in the strain relief tightly and see that the shade hangs securely.

6. Adjust and level the boomerangs to their desired height by pulling the boomerangs gently up or down on the cords.
7. Once the shades height is set to a desirable position, cut the ends of the cords about four inches above the strain reliefs. Then carefully cut the cord's braided sleeving about one inch below the wires end without harming the wires. Expose the ends of the cords.
8. Connect the fixture's wires to the wires in the electrical junction box this way: One wire (ribbed) from each shade connects to the neutral and the other wire (smooth) from each shade connects to the hot. Use the appropriate wire nuts. Make sure that there are no expose wires and that the wire nuts are secure and do not easily pull off with a slight tug.
9. With clean hands, take the ceramic ceiling plate up all the way until it covers the electrical box. Take the white white ring that is on the cords all the way up until there is no gap between the ceiling and the ceiling plate and tighten the ring's set screw gently. (If the plate got dirty during installation, you can sand it clean with the supplied sand paper.)
10. Install the bulbs.
11. If the shades need balancing, their top hole is larger than the cord. You can lift the shade up and place it differently on the cord so it levels.
12. See that all the wrappers are removed, return the power to the junction box and test the fixture. Make sure the switch responsible for the junction box is on.

