INSTRUCTIONS FOR MODELS

SA-2003 TOWEL RACK SA-2004 TOWEL RING SA-2005 PAPER HOLDER SA-2006 ROBE HOOK SA-2007 TOWEL BAR SA-2010 DOUBLE PAPER HOLDER



NEED HELP?

For additional assistance or service please contact:

SPEAKMAN® Company 400 Anchor Mill Road New Castle, DE 19720

وَنَنَ 800-537-2107

🔀 customerservice@speakman.com

www.speakman.com

92-SA-2000-04

If the Mounting Plate(s) (1) come pre-installed in the Accessory (2), remove the Mounting Plate(s) by loosening the pre-installed set screw at bottom TOOLS AND SUPPLIES Pencil Level Phillips Phillips with the included Hex Key. Screwdriver Drive Bit Hex Kev Drill Drill Bit (included) Ø3/16″ 2 At the selected height, mark center point of mounting locations onto wall referencing the rough in diagram. IMPORTANT /• Do not over-tighten any connections or damage may occur. • Be sure to read instructions thoroughly before beginning installation. SAFETY TIPS ♥ Cover your drain to prevent loss of parts. Be sure to wear eye protection while cutting pipe. MAINTENANCE \bullet 3 Align Mounting Plate over center point marked in previous step. Mounting Plate should be Your new Speakman Product is designed for years of trouble-free performance. Keep it looking new by vertical as shown below. Mark Mounting Screw locations onto the wall surface. Remove items cleaning it periodically with a soft cloth. The use of harsh after marking mounting locations. chemicals and abrasives on any of the Speakman custom finish products may damage the finish and void the product warranty. Please be sure to only use approved cleaners. Please contact Speakman for any clarification of acceptable cleaners. WARRANTY V Additional warranty information can be found at: www.speakman.com



