


## WARM SHAKER / NORFOLK / LEXINGTON

---

### 72 INCH TV MEDIA STAND

MODEL # AXWSH003-72

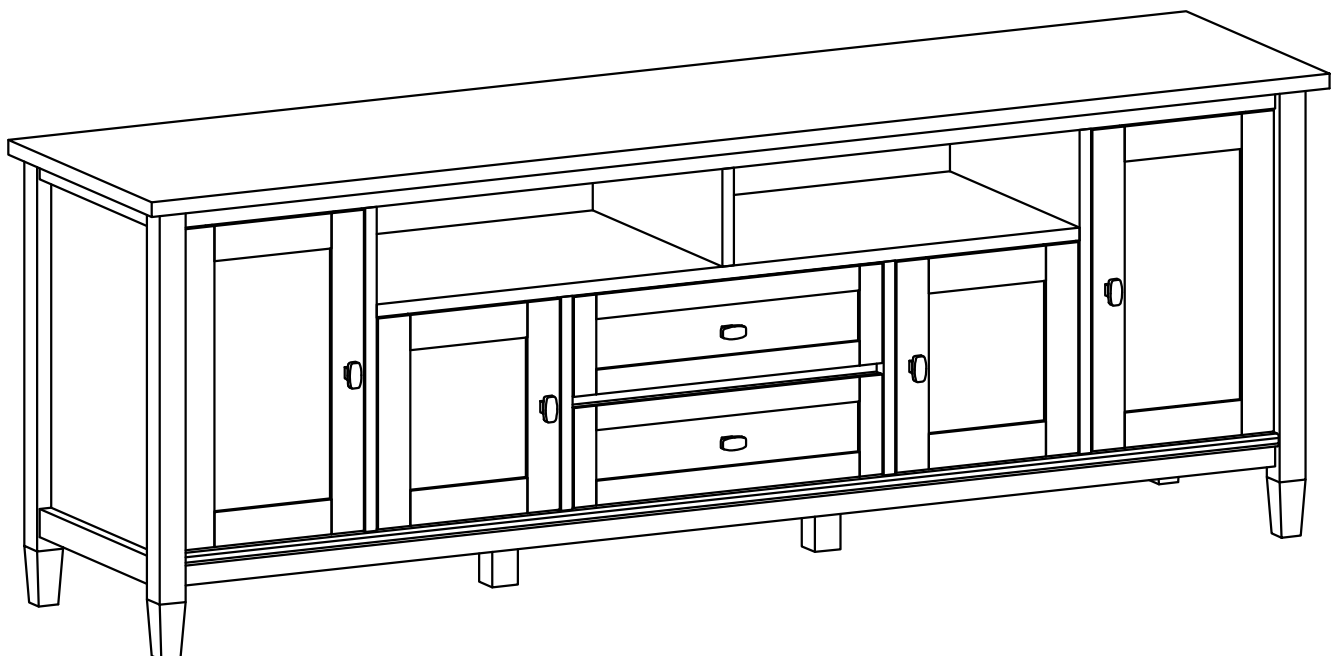



FOR REPLACEMENT PARTS OR HELP WITH  
ASSEMBLY PLEASE CONTACT US AT:

[simpli-home.com/customer-support](https://simpli-home.com/customer-support)

PLEASE ENSURE TO HAVE THE MODEL #  
FROM THE PACKAGING OR INSTRUCTION BOOKLET

TO RETURN THE PRODUCT:  
PLEASE CONTACT THE RETAILER  
WHERE THE ITEM WAS PURCHASED FROM

**ENTER  
TO WIN**

Upload an image of our furniture  
in your home with a short review  
to our facebook page for a chance to

**Win up to \$3000 of  
Simpli Home furniture!!!**

[www.facebook.com/simplihomefurnishings](http://www.facebook.com/simplihomefurnishings)



**IMPORTANT :** Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

## SAFETY INFORMATION

**CAUTION:** Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help. If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

**WARNING:** This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

**May require 2 people for ease of assembly.**










## CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place furniture in direct sunlight. Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

## PART DESCRIPTION

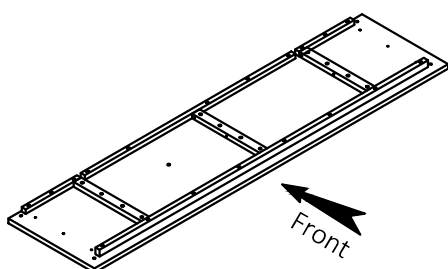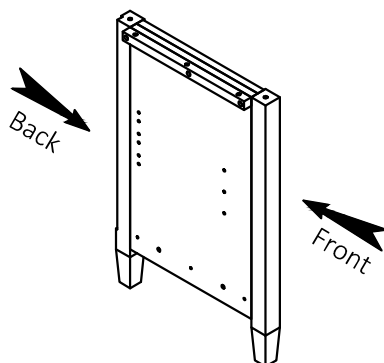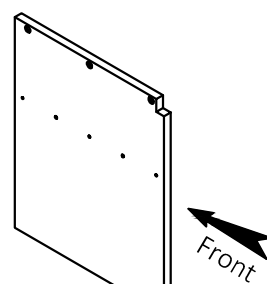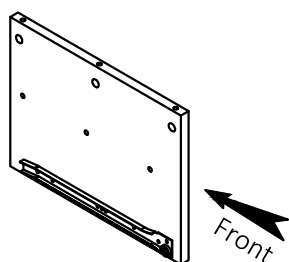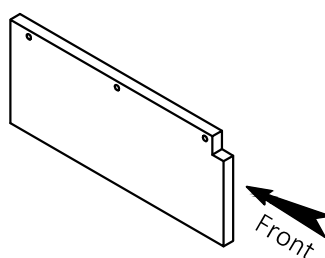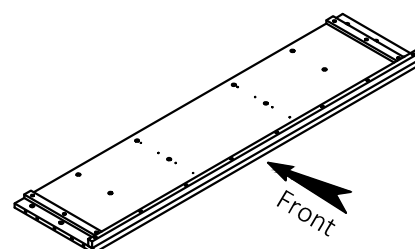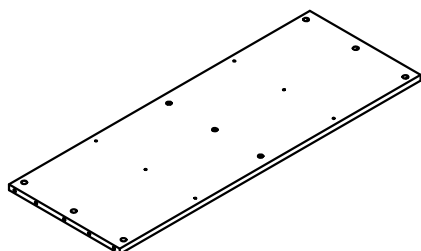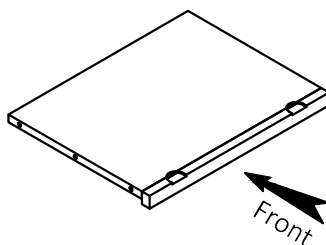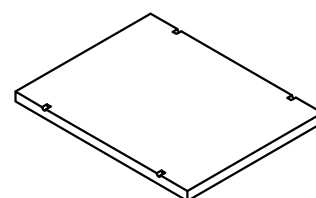**A**TOP  
QTY 1**B**SIDE  
QTY 1 PAIR**C**DIVIDER  
QTY 1PAIR**D**MIDDLE DIVIDER  
QTY 1 PAIR**E**TOP DIVIDER  
QTY 1**F**BOTTOM SHELF  
QTY 1**G**TOP SHELF  
QTY 1**H**CENTRE SHELF  
QTY 1**I**SHELF  
QTY 2


**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

# PRE-ASSEMBLY INFORMATION

MODEL # AXWSH003-72


## PART DESCRIPTION

J

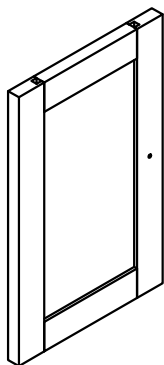


LARGE DOOR  
QTY 2

K

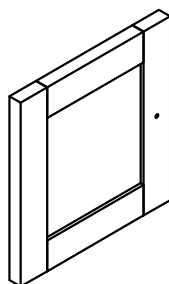


SMALL DOOR  
QTY 2

L

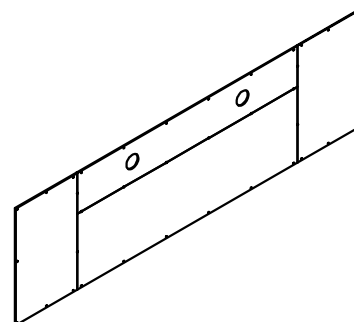


BACK PANEL  
QTY 1 SET

M

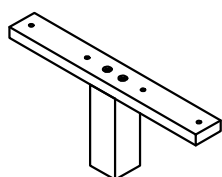


BOTTOM SUPPORT LEG  
QTY 2

N

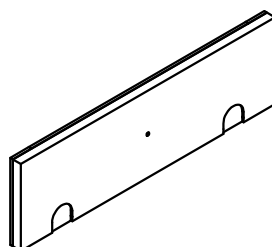


FLIP DOWN DOOR  
QTY 1

O

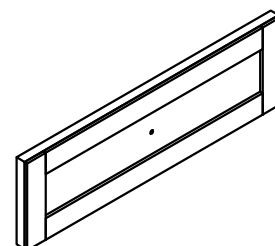


DRAWER FRONT  
QTY 1

P

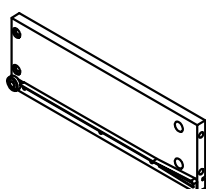


DRAWER SIDE  
QTY 1PAIR

Q

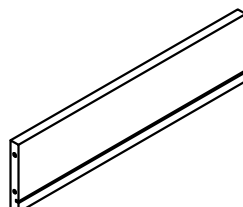

DRAWER BACK  
QTY 1

R

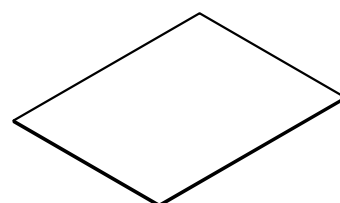

DRAWER BOTTOM  
QTY 1

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)


## HARDWARE DESCRIPTION

 1



ALLEN KEY SCREW  
M6 X 30mm  
QTY 34

2




CAM LOCK PIN  
CAM LOCK  
QTY 22 SETS

3




WOOD DOWEL  
Ø8 X 30mm  
QTY 28

 4




ALLEN KEY  
QTY 1

 5




PHILLIPS SCREW  
ROUND HEAD  
M4 X 15mm  
QTY 36

6

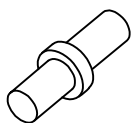


SHELF SUPPORT  
QTY 12

7

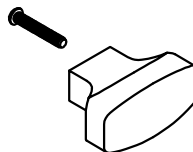


HANDLE  
M4 X 25 mm  
QTY 6 SETS

 8




PHILLIPS SCREW  
M3 X 15mm  
QTY 16

9

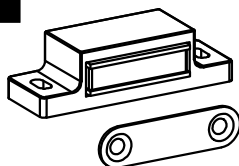


MAGNET AND PLATE  
QTY 4 SETS

 10



PHILLIPS SCREW  
M4 X 15mm  
QTY 48

11

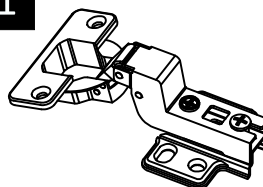


ADJUSTABLE HINGE  
QTY 8

12



PHILLIPS SCREW  
M3.5 X 15mm  
QTY 12

13

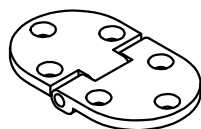


HINGE  
QTY 2

14




PHILLIPS SCREW  
M3 X 12mm  
QTY 4

15

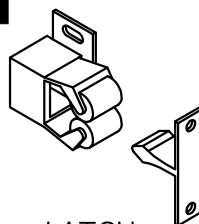


LATCH  
QTY 1

 16



PHILLIPS SCREW  
M4 X 25mm  
QTY 8

17

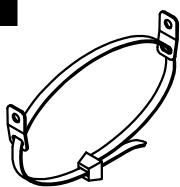


- a. M4 X 25mm - QTY 1
- b. M4 X 15mm - QTY 1
- c. M4 X 25mm - QTY 1

FURNITURE ANTI-TIPPING RESTRAINT  
QTY 1 SET




Required -  
Flathead screwdriver  
Phillips screwdriver  
Rubber mallet  
**Not Included**

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

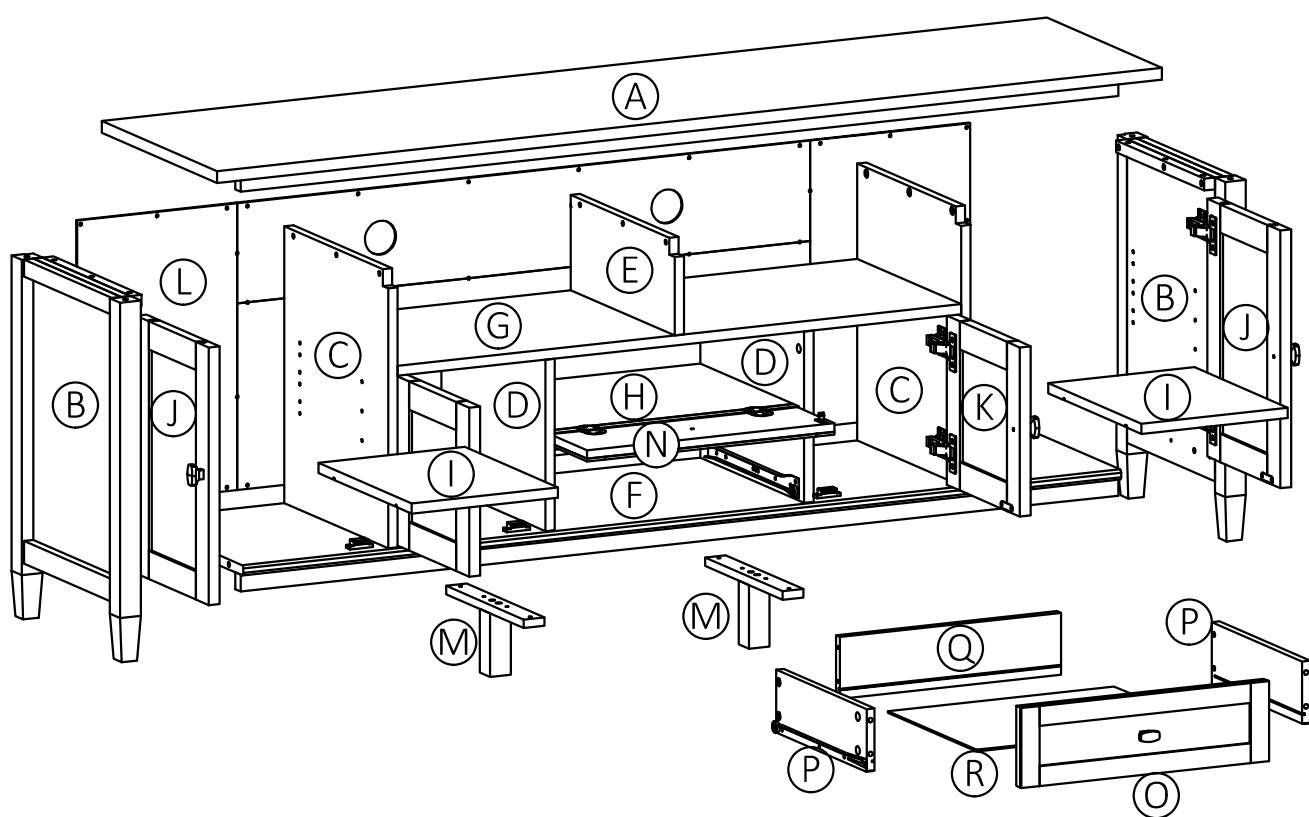




## STEP-1

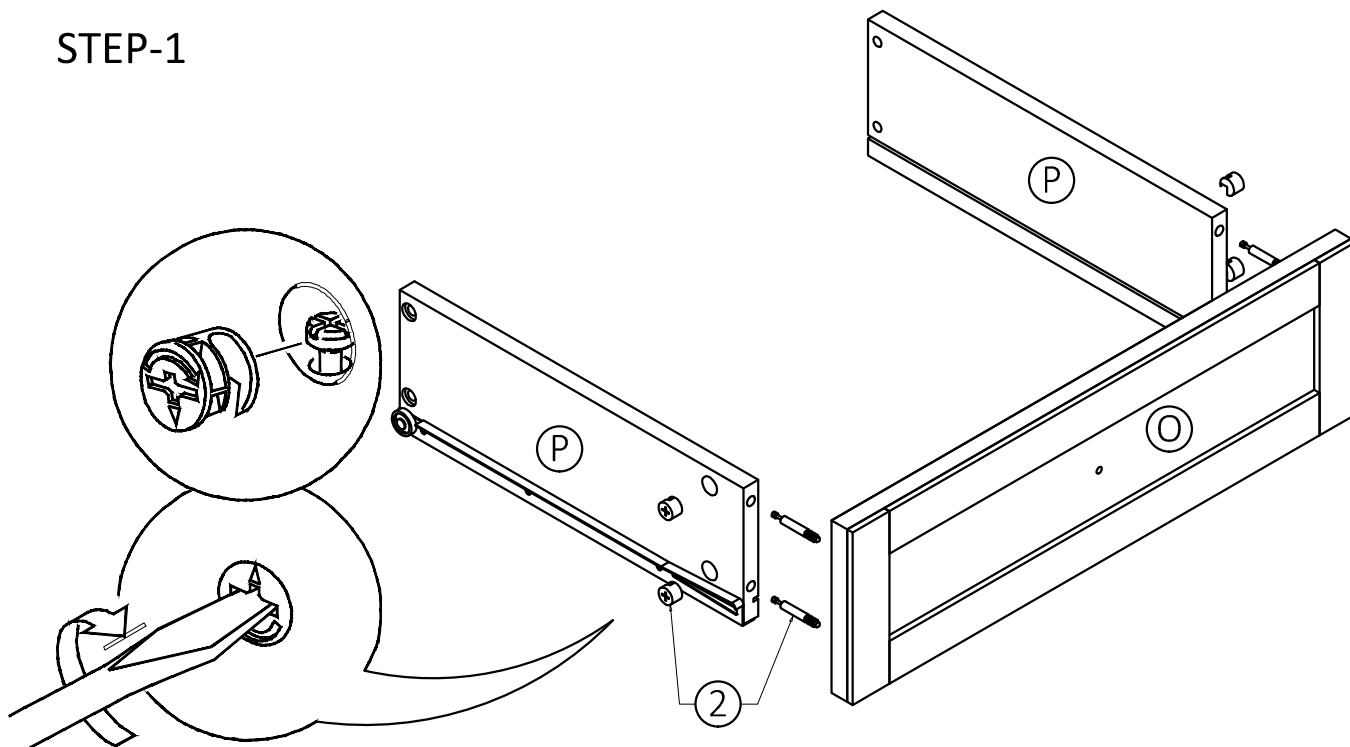


1. Attach 4 Cam Lock Pins (2) to pre-drilled holes at back of Drawer Front (O).
2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Side (P).
3. Insert 2 Cam Locks (2) into pre-drilled holes on each Drawer Side (P).
4. Use flathead screwdriver secure Cam Locks.

## STEP-2

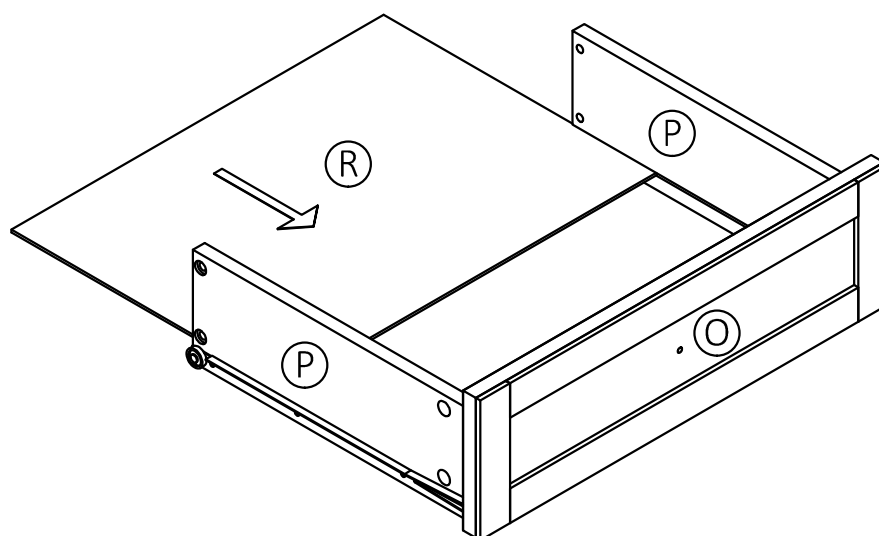


1. Slide Drawer Bottom (R) firmly into slots on Drawer Sides (P) and Drawer Front (O).

## STEP-3

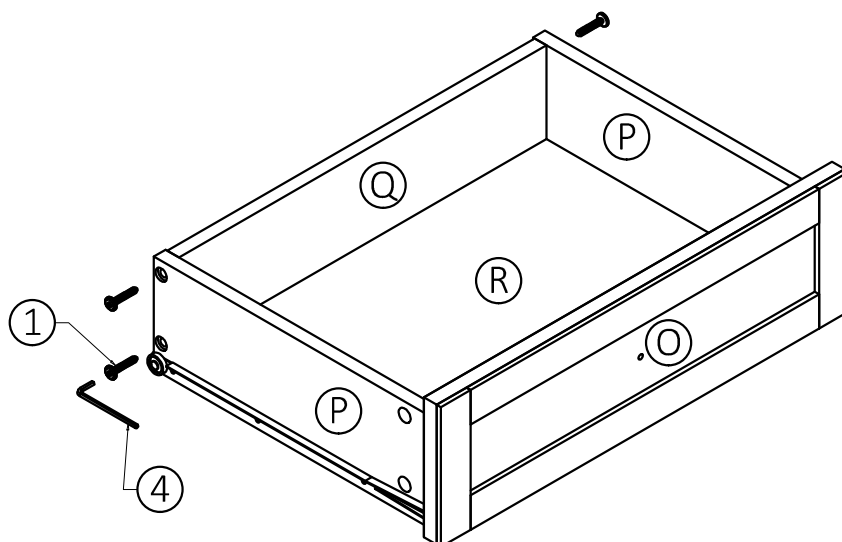


1. Align Drawer Back (Q) with Drawer Bottom (R) and press firmly into slot.
2. Attach Drawer Back (Q) using 2 Allen Key Screws (1) through pre-drilled holes on each Side (P).
3. Use Allen Key (4) to tighten screws. Do not over-tighten.

## STEP-4

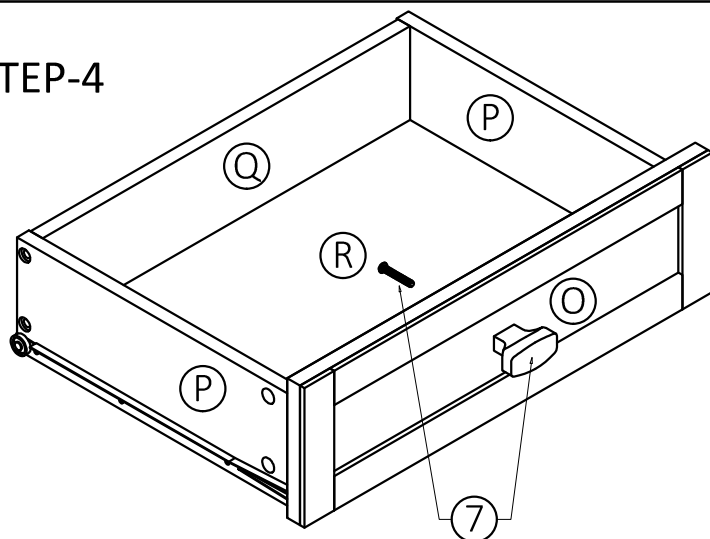


**NOTE:** The screwdriver is not included in the hardware pack.

1. Use Phillips screwdriver to attach Handle (7) to Drawer Front (O).

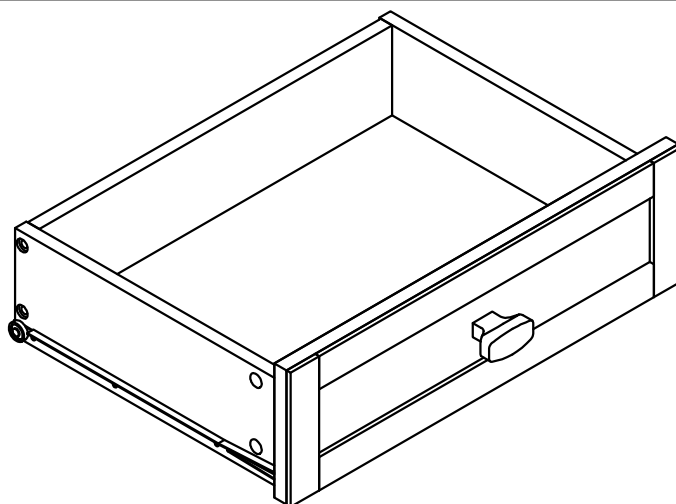


## STEP-5

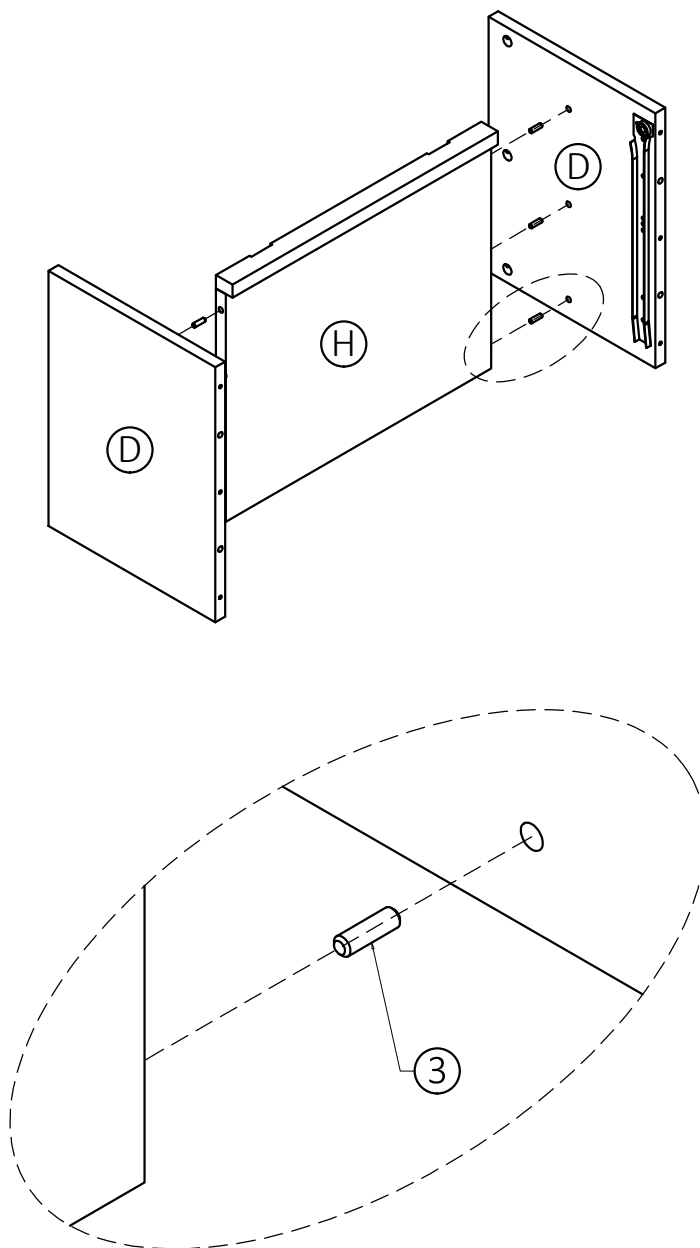


1. Insert 6 Dowels (3) into pre-drilled holes on Centre Shelf (H).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach Centre Shelf (H) to Middle Dividers (D).
4. Use rubber mallet to tap Middle Dividers (D) into Centre Shelf (H).

## STEP-6

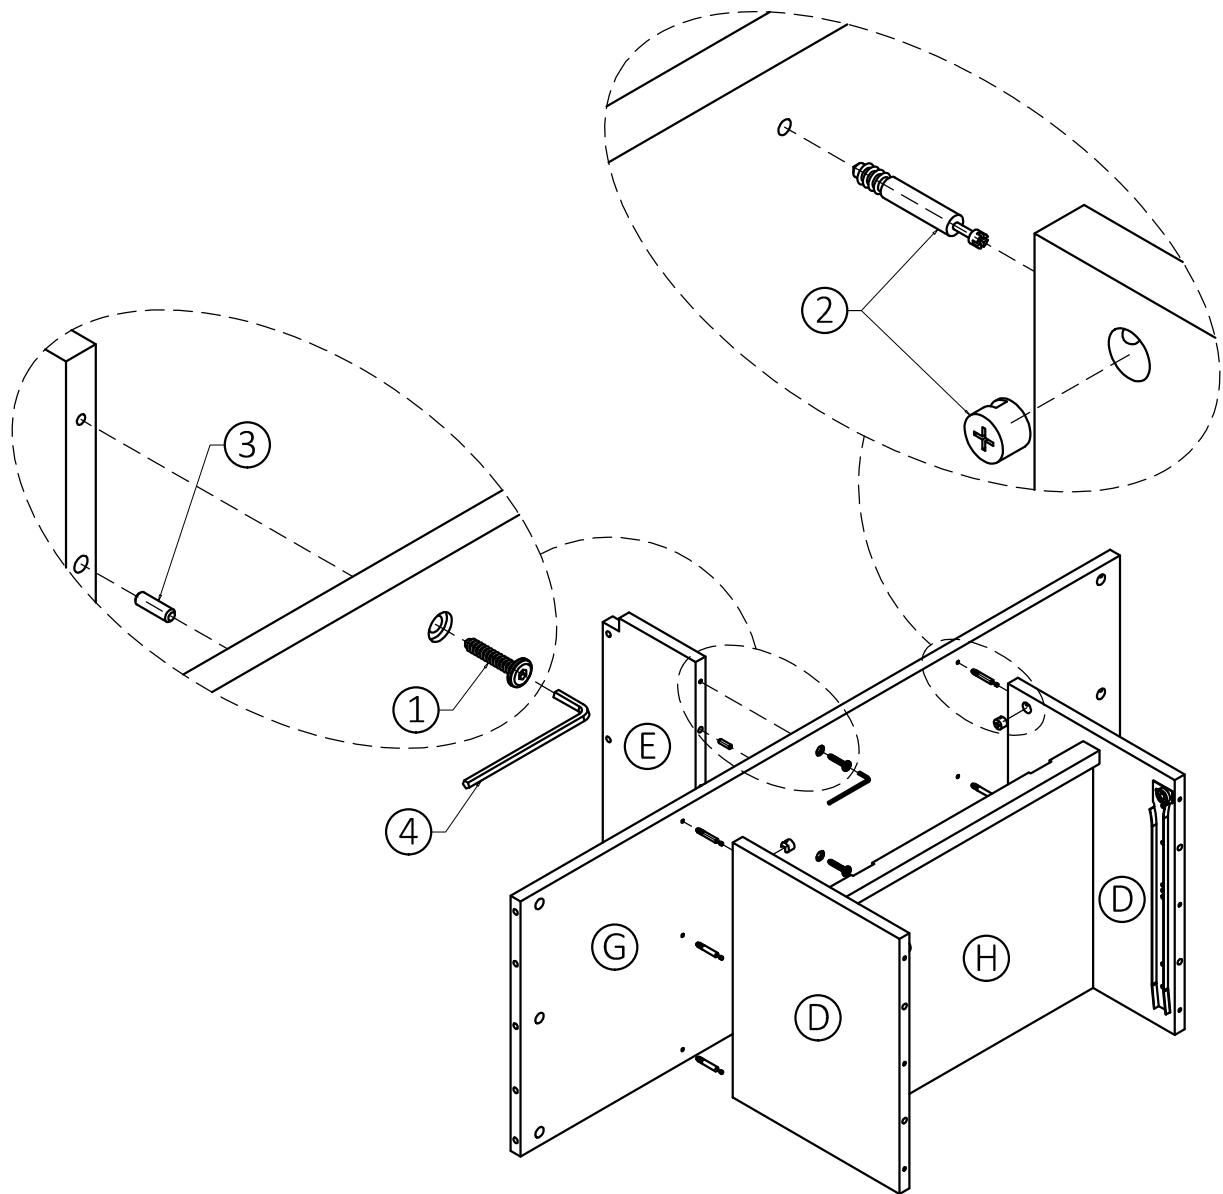


1. Insert 2 Dowels (3) into pre-drilled holes on bottom of Top Divider (E).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach Top Shelf (G) to Top Divider (E) using 3 Allen Key Screws (1).
4. Use Allen Key (4) to tighten Screws. Do not over-tighten.
3. Attach 6 Cam Lock Pins (2) to Top Shelf (G) using guide holes.
4. Align Cam Lock Pins with pre-drilled holes on Middle Dividers (D).
5. Insert 6 Cam Locks (2) into pre-drilled holes on Middle Dividers (D) (3 Cam Locks on each Middle Divider).
6. Use flathead screwdriver secure Cam Locks.

## STEP-7

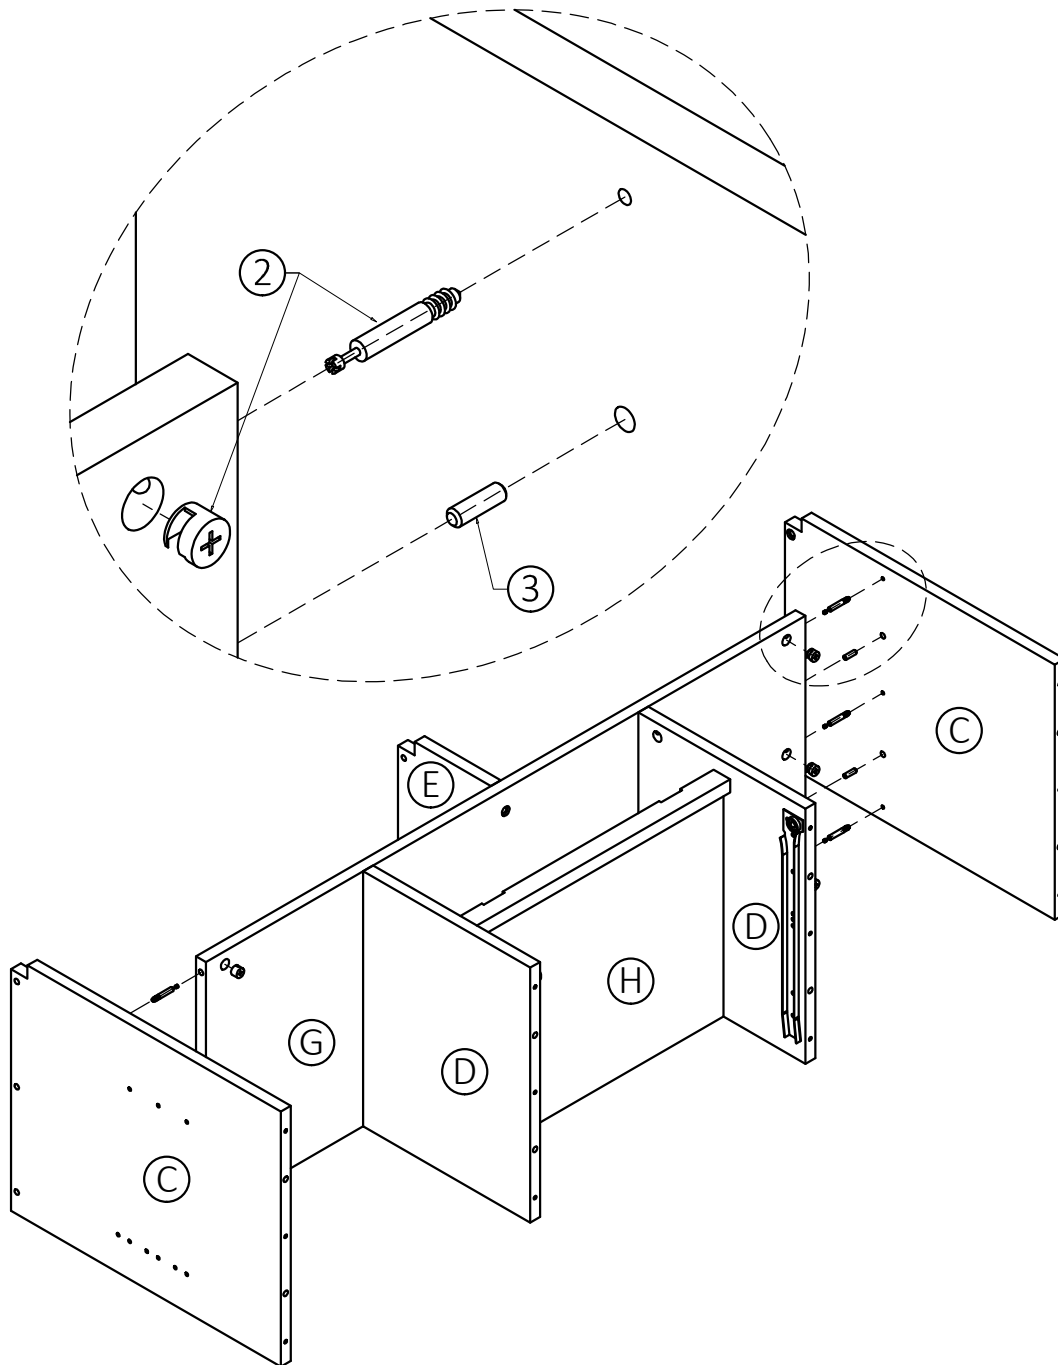


1. Insert 4 Dowels (3) into pre-drilled holes on Top Shelf (G) (2 dowels on each side).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 6 Cam Lock Pins (2) to Dividers (C) using guide holes (3 pins on each Divider).
4. Align Cam Lock Pins with pre-drilled holes on Top Shelf (G).
5. Insert 6 Cam Locks (2) into pre-drilled holes on Top Shelf (G) (3 Cam Locks on each side).
6. Use flathead screwdriver secure Cam Locks.

## STEP-8

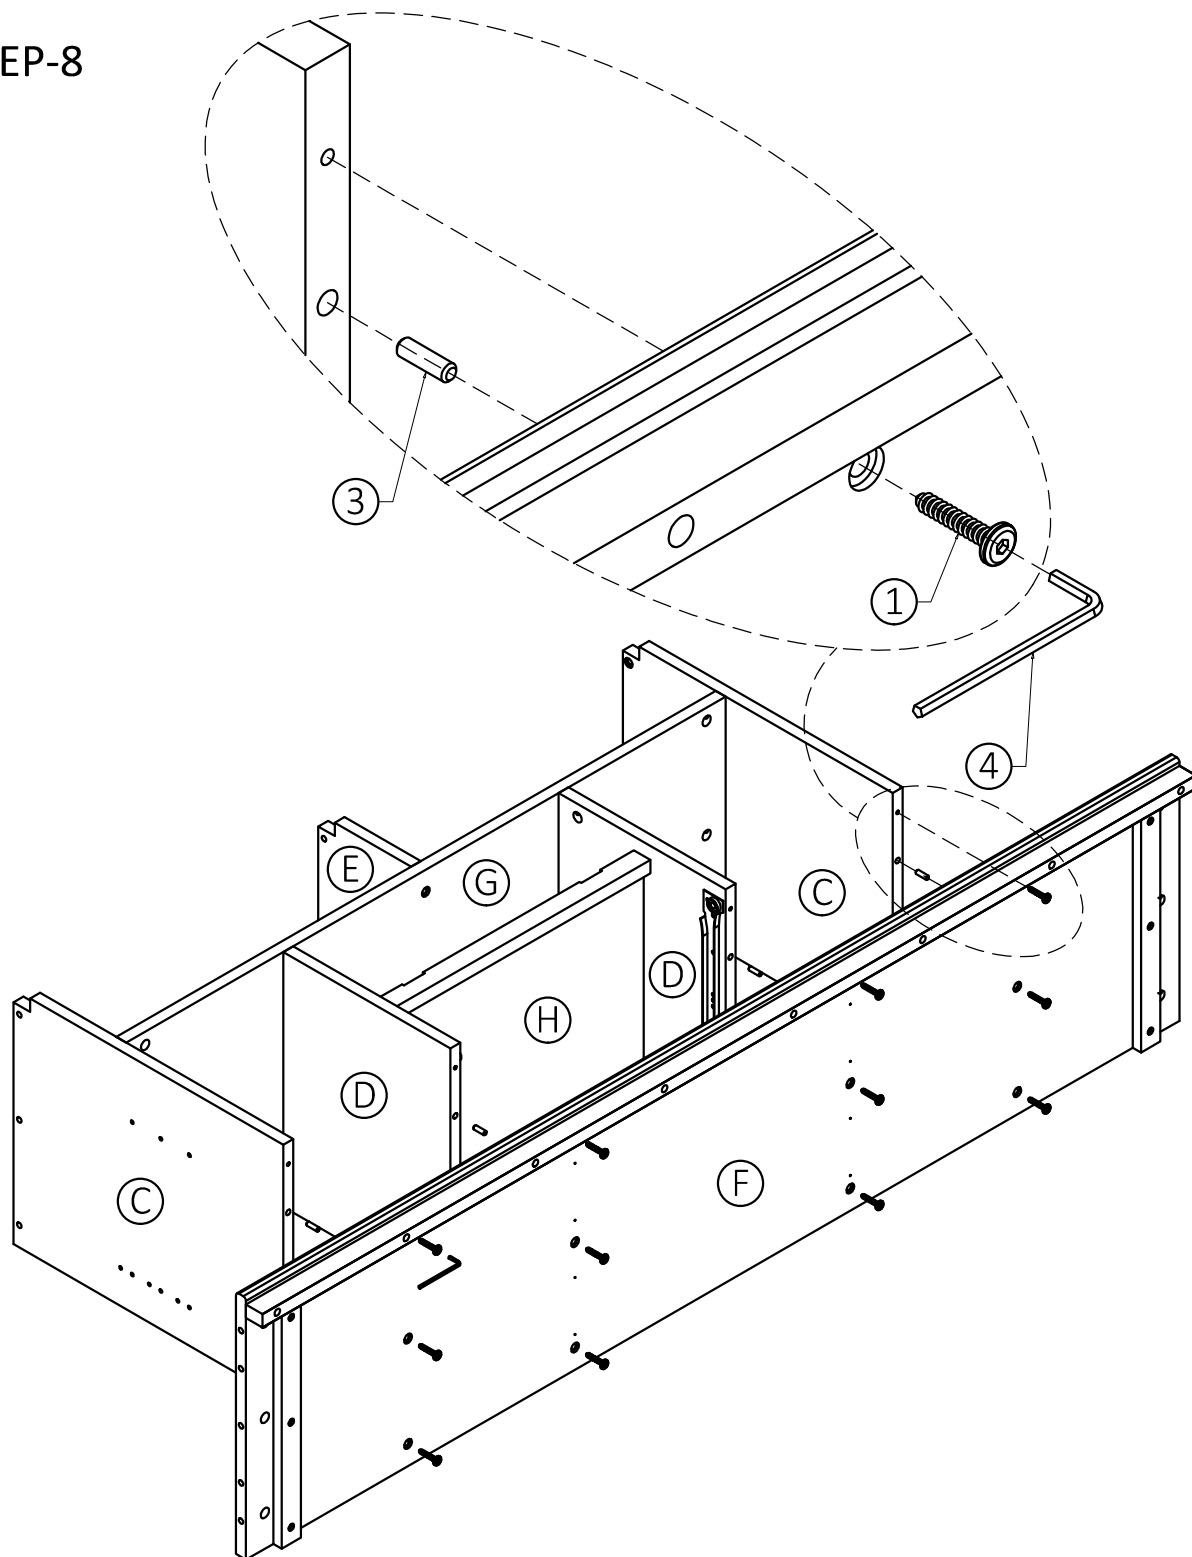


1. Insert 2 Dowels (3) into pre-drilled holes on bottom of each Divider (C) and Middle Divider (D).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach Bottom Shelf (F) to Dividers (C) and Middle Dividers (D) using 12 Allen Key Screws (1).
4. Use Allen Key (4) to tighten Screws. Do not over-tighten.

## STEP-9

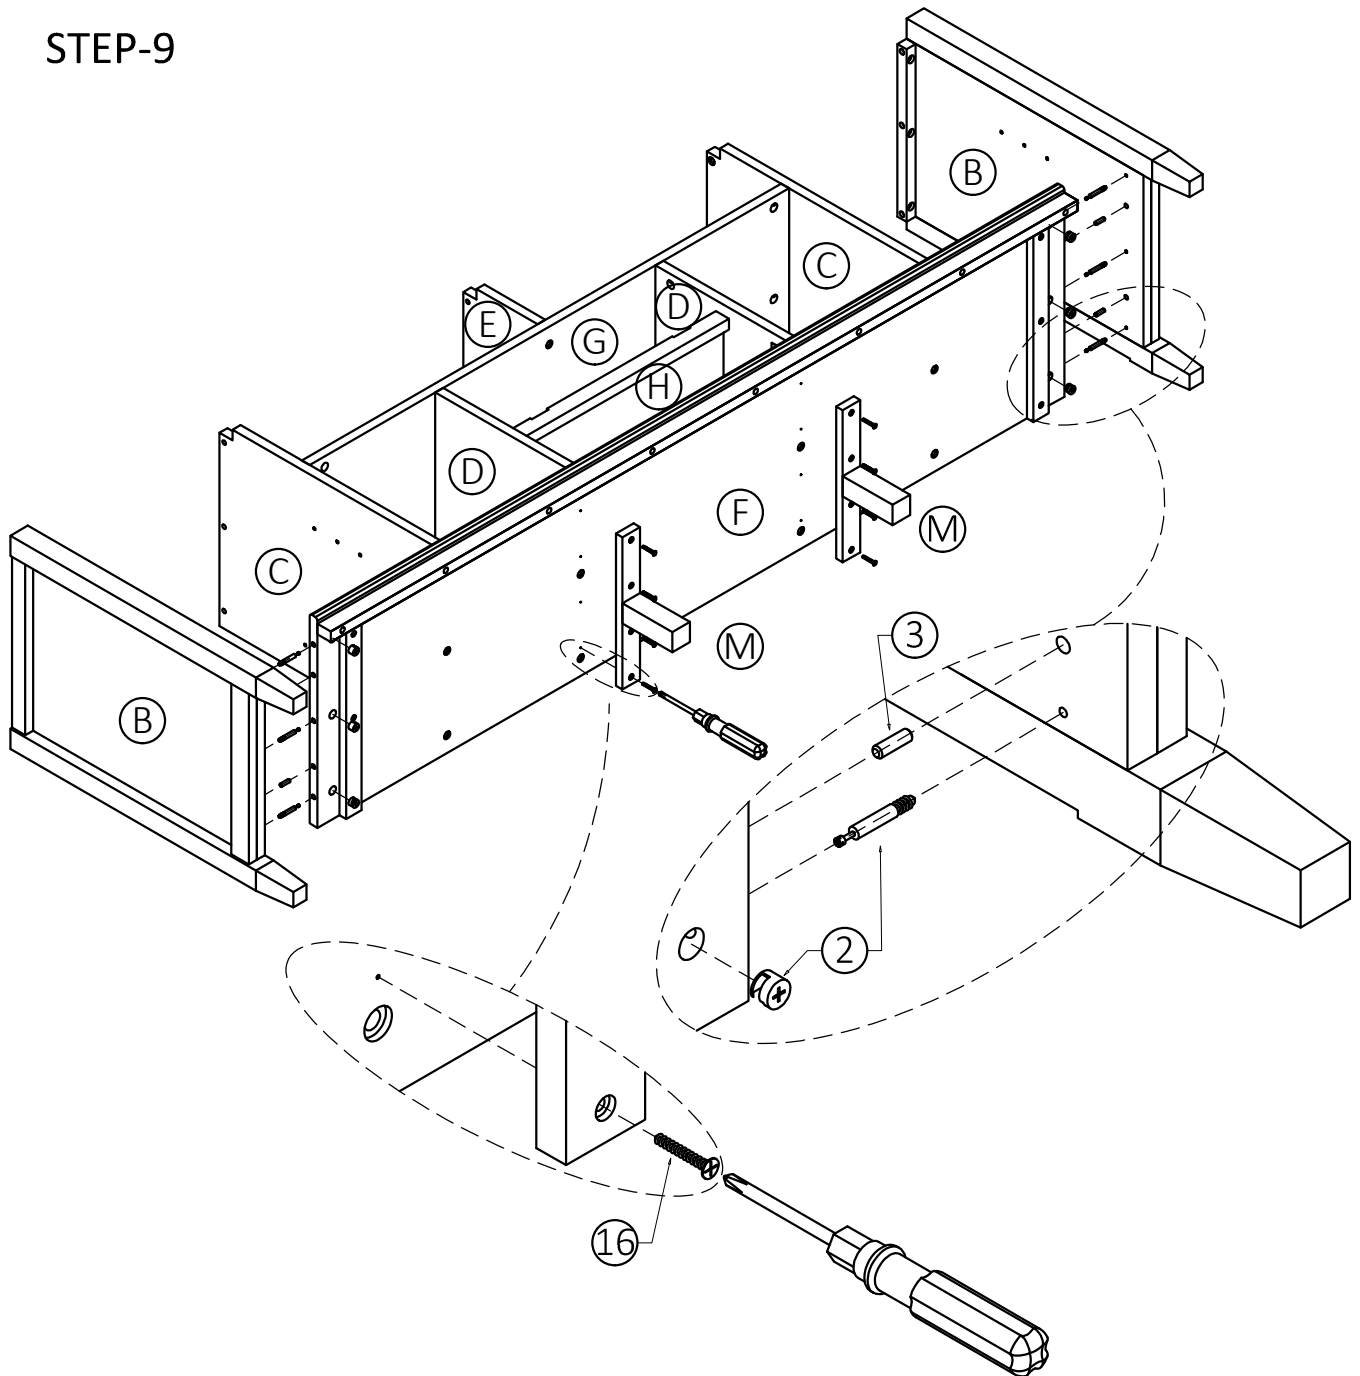

1. Insert 4 Dowels (3) into pre-drilled holes on Bottom Shelf (F).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 3 Cam Lock Pins (2) to each Side (B) using guide holes.
4. Align Cam Lock Pins with pre-drilled holes on Bottom Shelf (F).
5. Insert 6 Cam Locks (2) into pre-drilled holes on Bottom Shelf (F).
6. Use flathead screwdriver secure Cam Locks.
7. Attach Bottom Support Legs (M) to Bottom Shelf (F) using 8 Phillips Screws (16) (4 Phillips Screws on each Bottom Support Leg).
8. Use Phillips screwdriver to snugly tighten screw.


## STEP-10

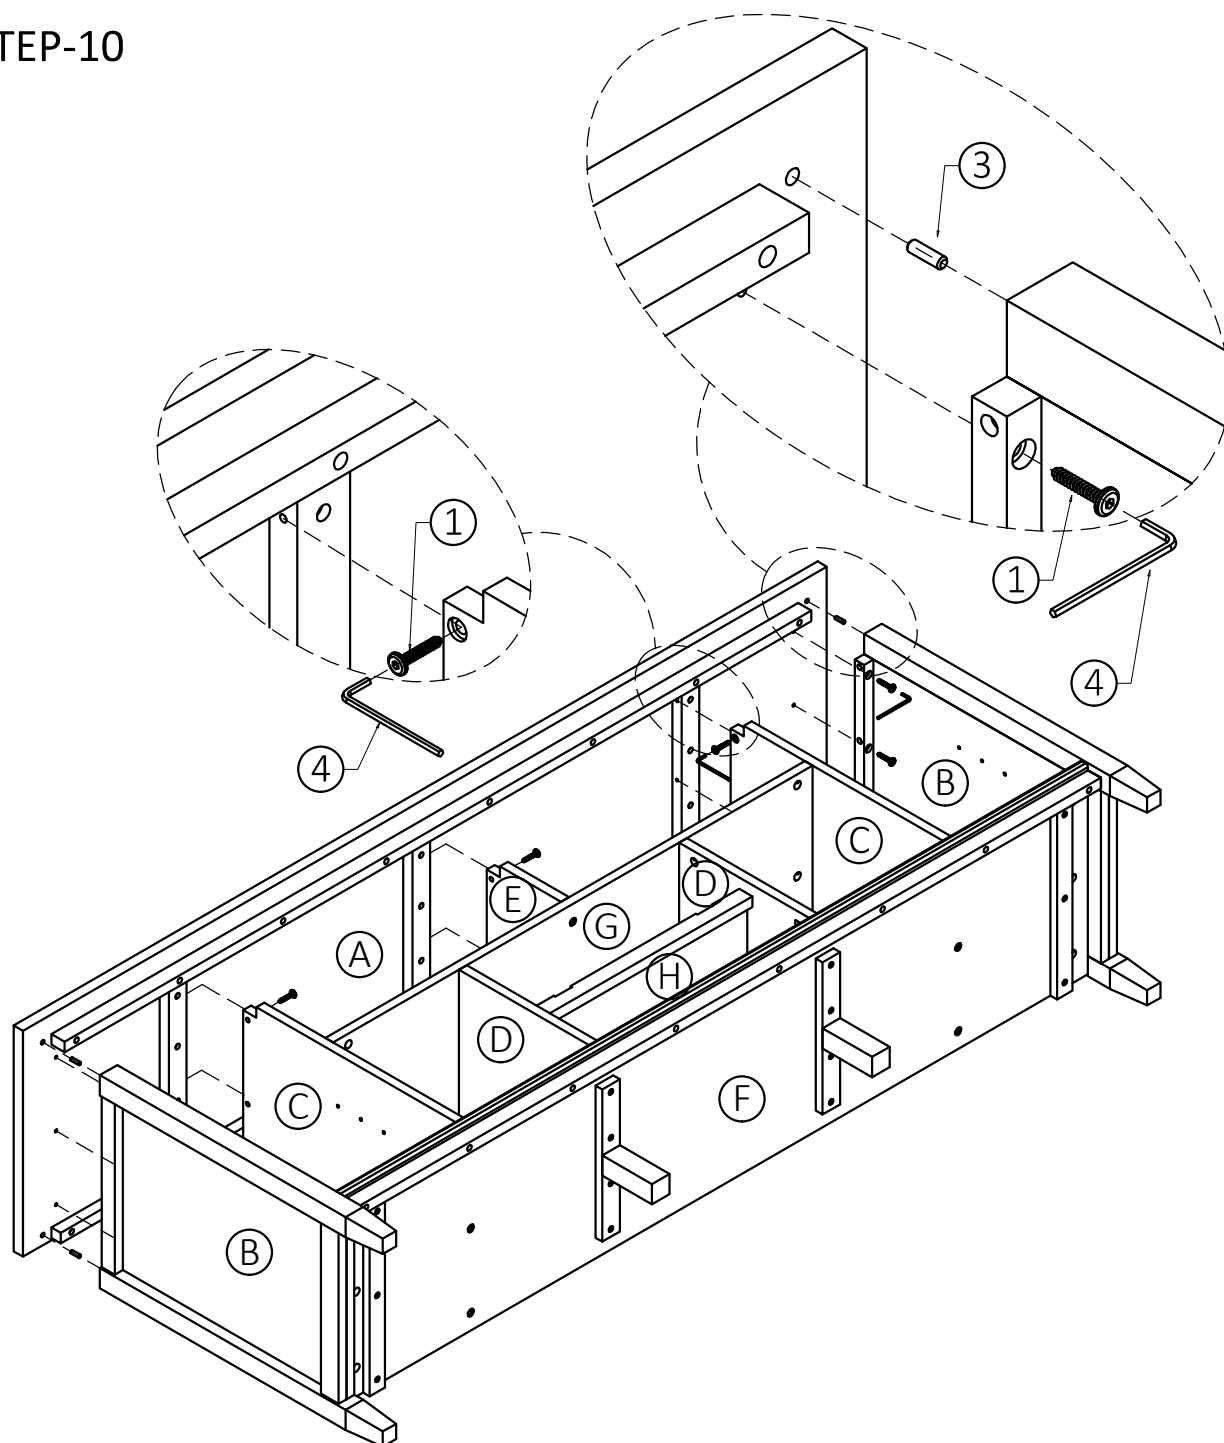

1. Insert 2 Dowels (3) into pre-drilled holes on each Side (B).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach Top (A) to Sides (B), Dividers (C) and Top Divider (E) using 15 Allen Key Screws (1) (3 screws on each Side and Divider).
4. Use Allen Key (4) to tighten Screws. Do not over-tighten.




## STEP-11

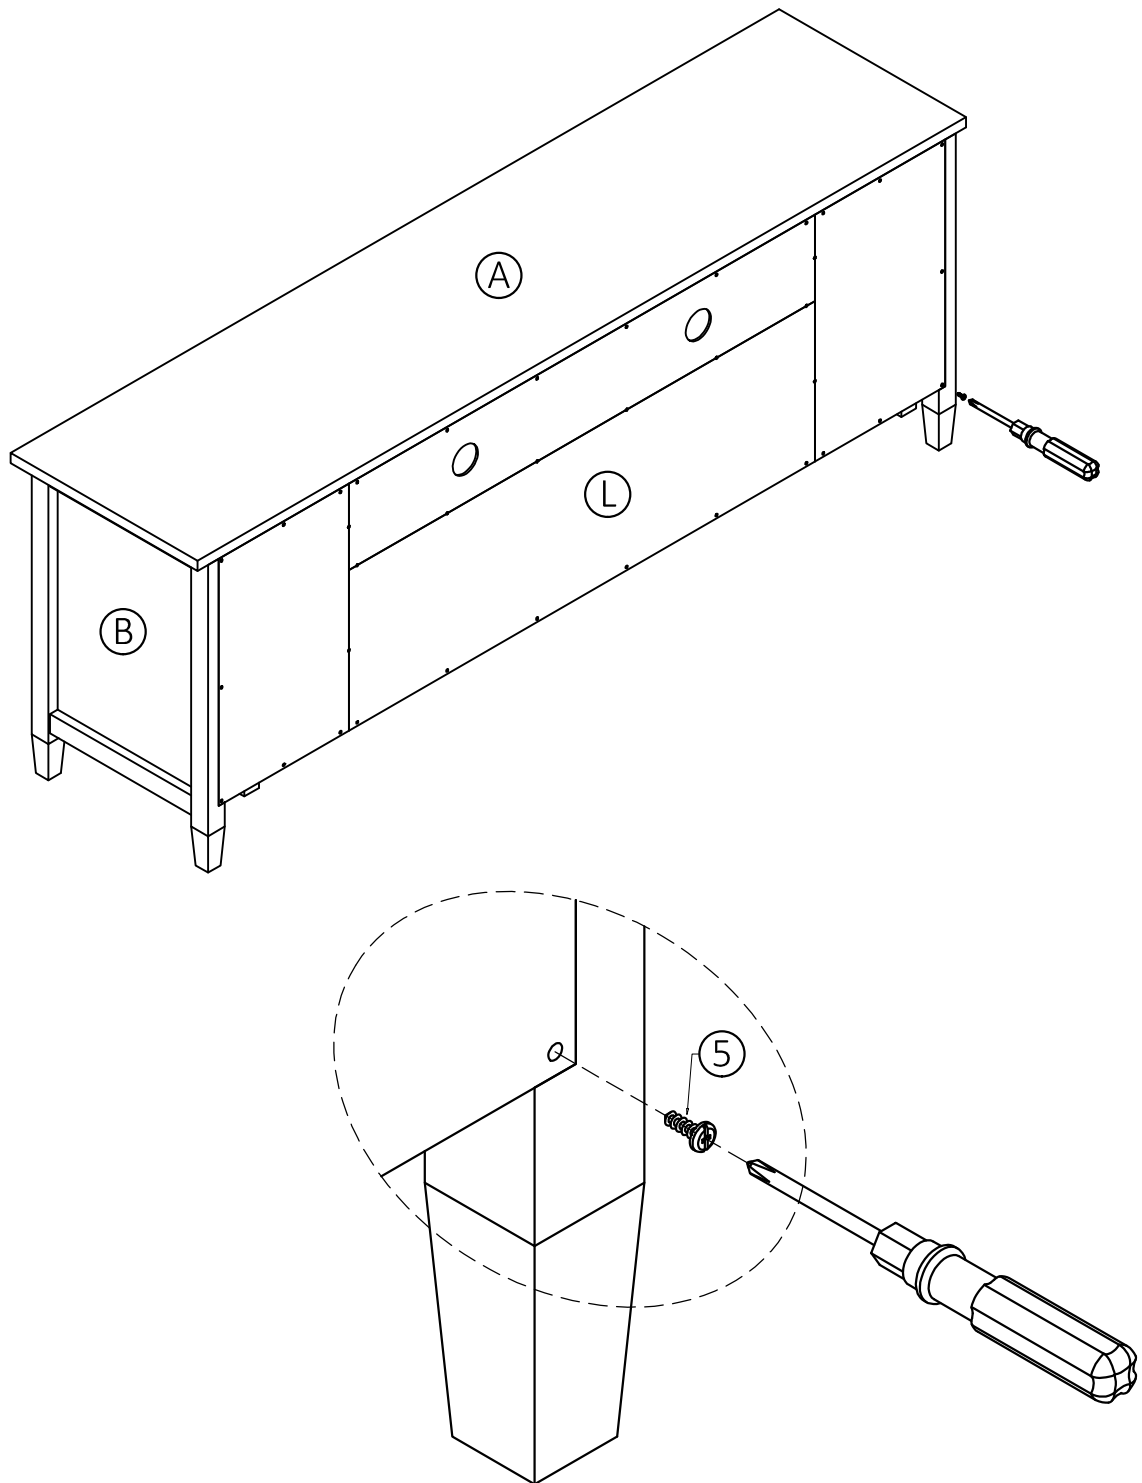


1. Attach Back Panels (L) to back frame of TV using 36 Phillips Screws Round Head (5) through pre-drilled holes.
2. Use Phillips Screwdriver to tighten screws.

STEP-12

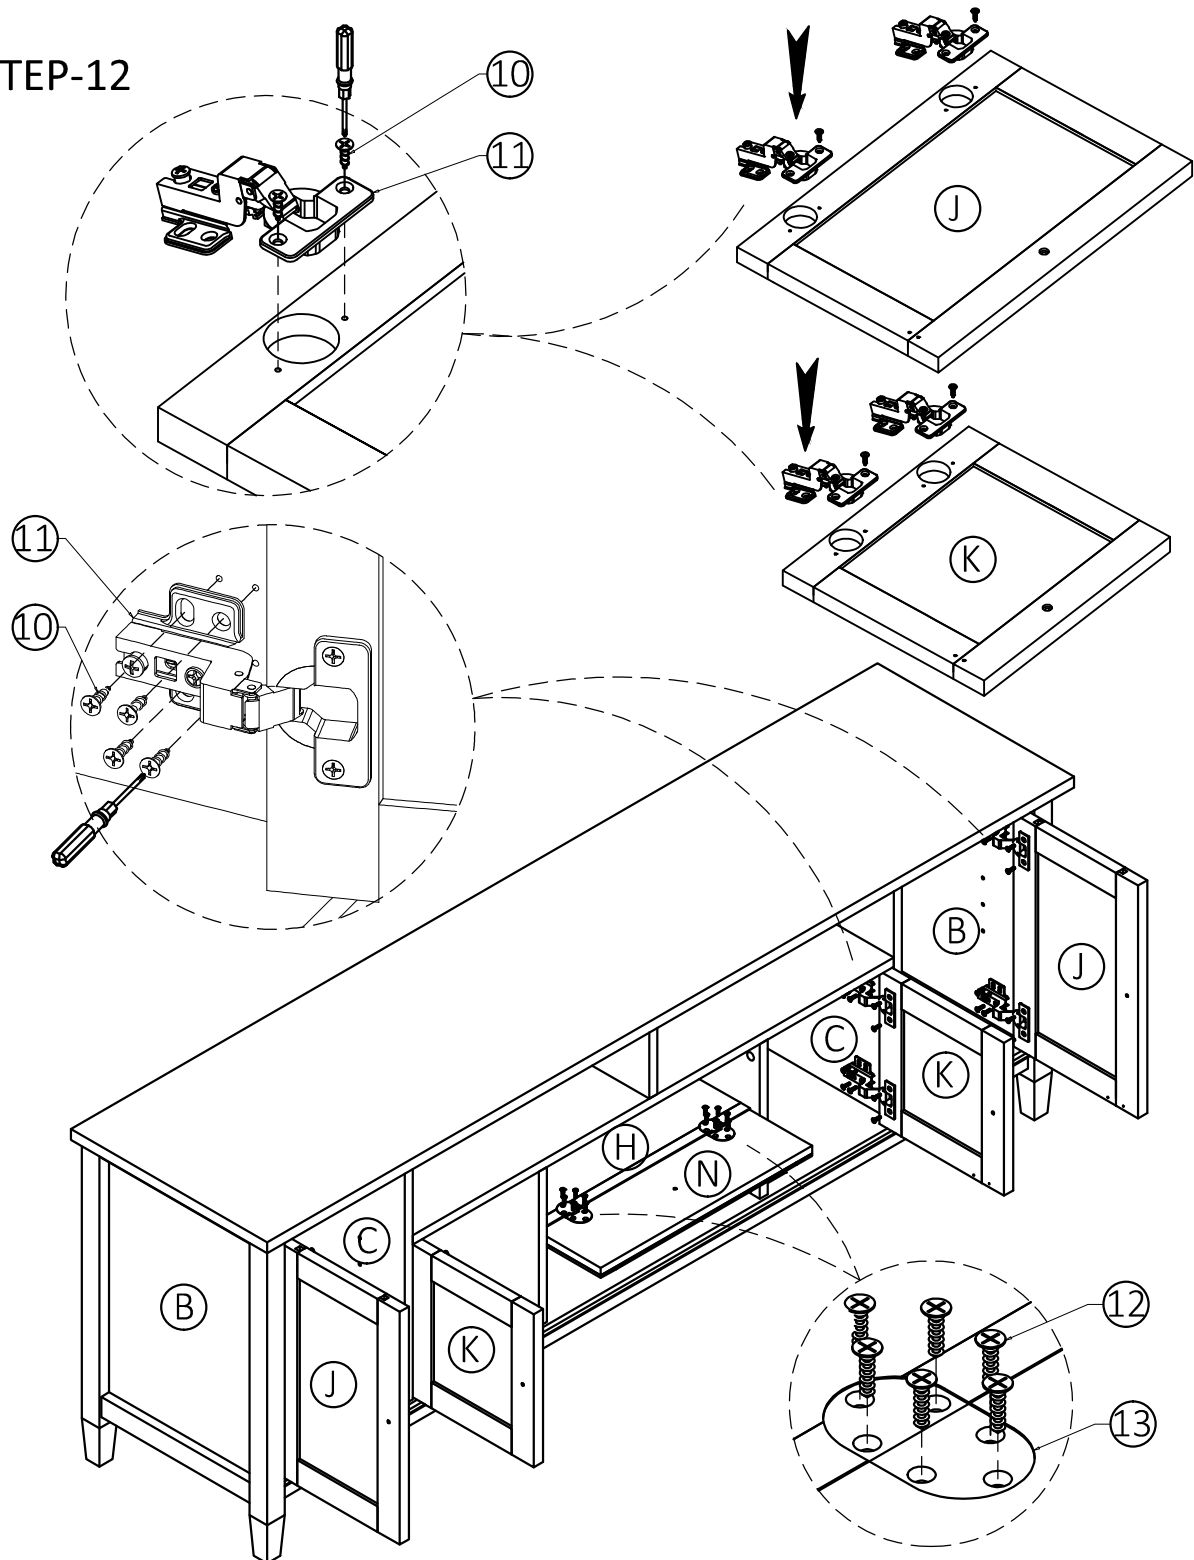

1. Attach Adjustable Hinges ⑪ to Doors ⑪ and ⑫ using Phillips Screws ⑩ into guide holes on Doors ⑪ and ⑫.
2. Attach Adjustable Hinges on Doors ⑪ to Sides ③ using Phillips Screws ⑩ into guide holes on Sides ③.
3. Attach Adjustable Hinges on Doors ⑫ to Dividers ④ using Phillips Screws ⑩ into guide holes on Dividers ④.
4. Attach Hinges ⑬ to Centre Shelf ⑧ and Flip Down Door ⑨ using Phillips Screws ⑫ into guide holes.
5. Use Phillips Screwdriver to tighten screws.

## STEP-13

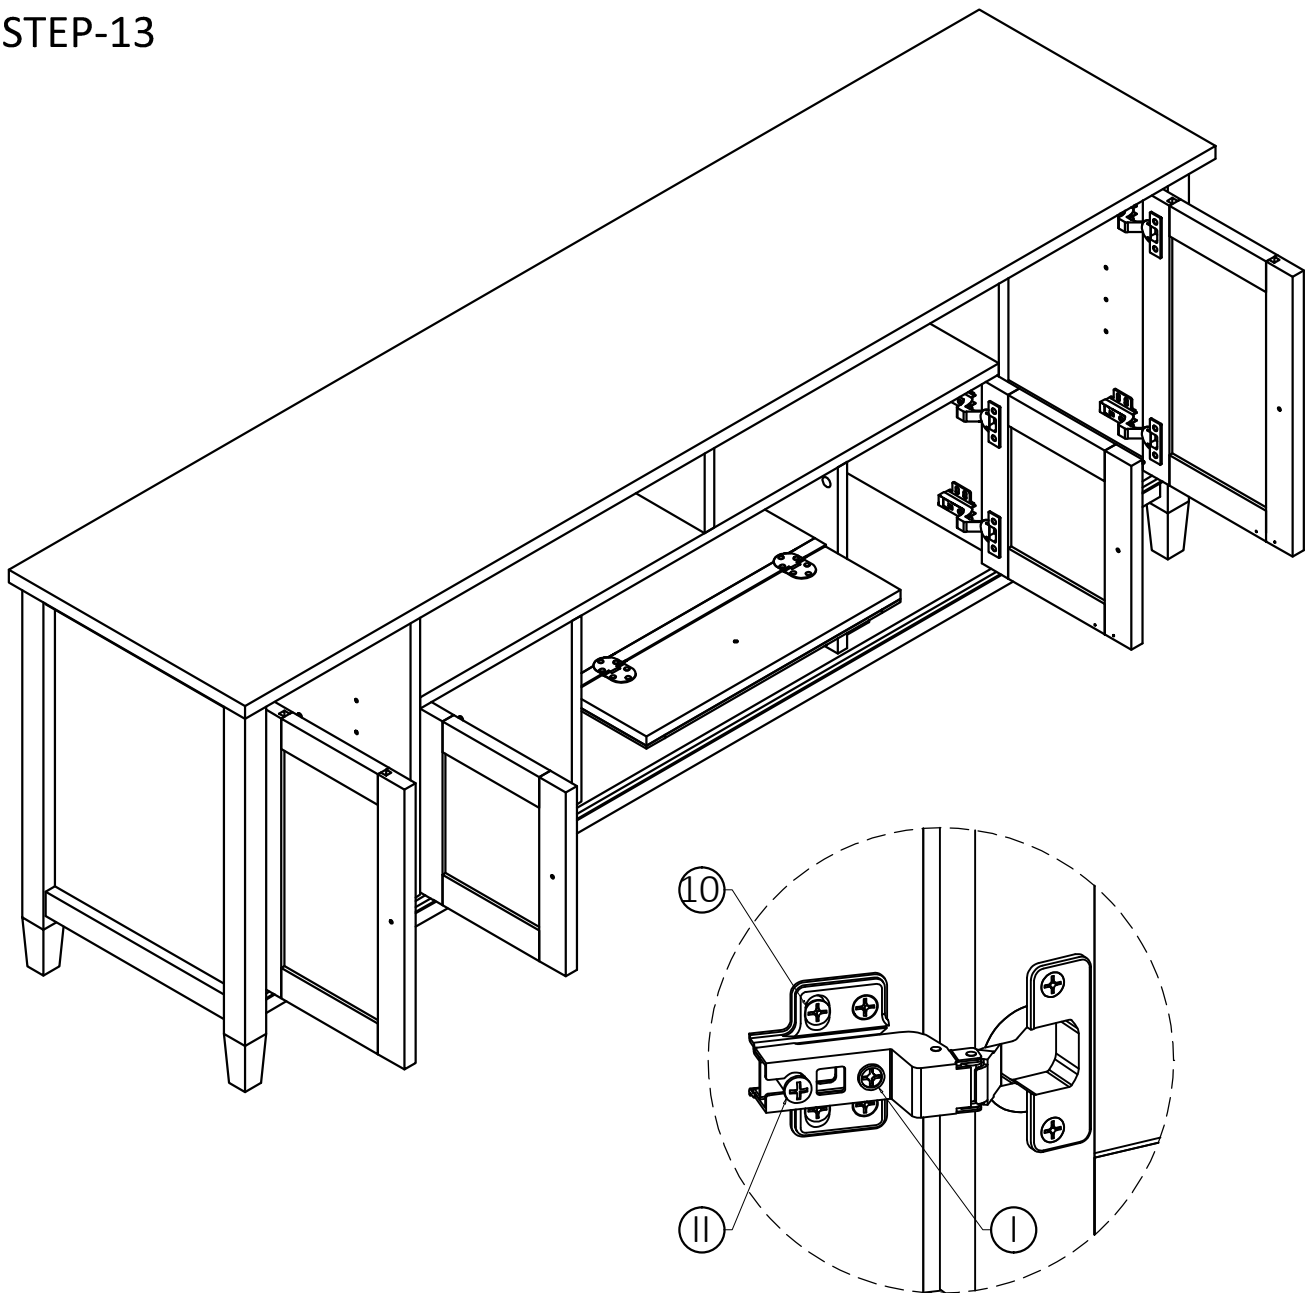

Tighten the Screw marked ⑪ to fasten hinge. The door may need to be adjusted so that all the spaces between the door and the unit sides are equal. To adjust, follow instructions:

1. Side adjustment 4 mm

To move the door towards the side panel, loosen screw ① and tighten screw ⑪.

To move the door away from the side panel, loosen screw ⑪ and tighten screw ①.


2. Depth adjustment 4 mm

Loosen screw ⑪ ( just one turn ), adjust door to desired position, re-tighten screw .

3. Height adjustment


Loosen screw ⑩, adjust door to desired position, re-tighten screw .

STEP-14

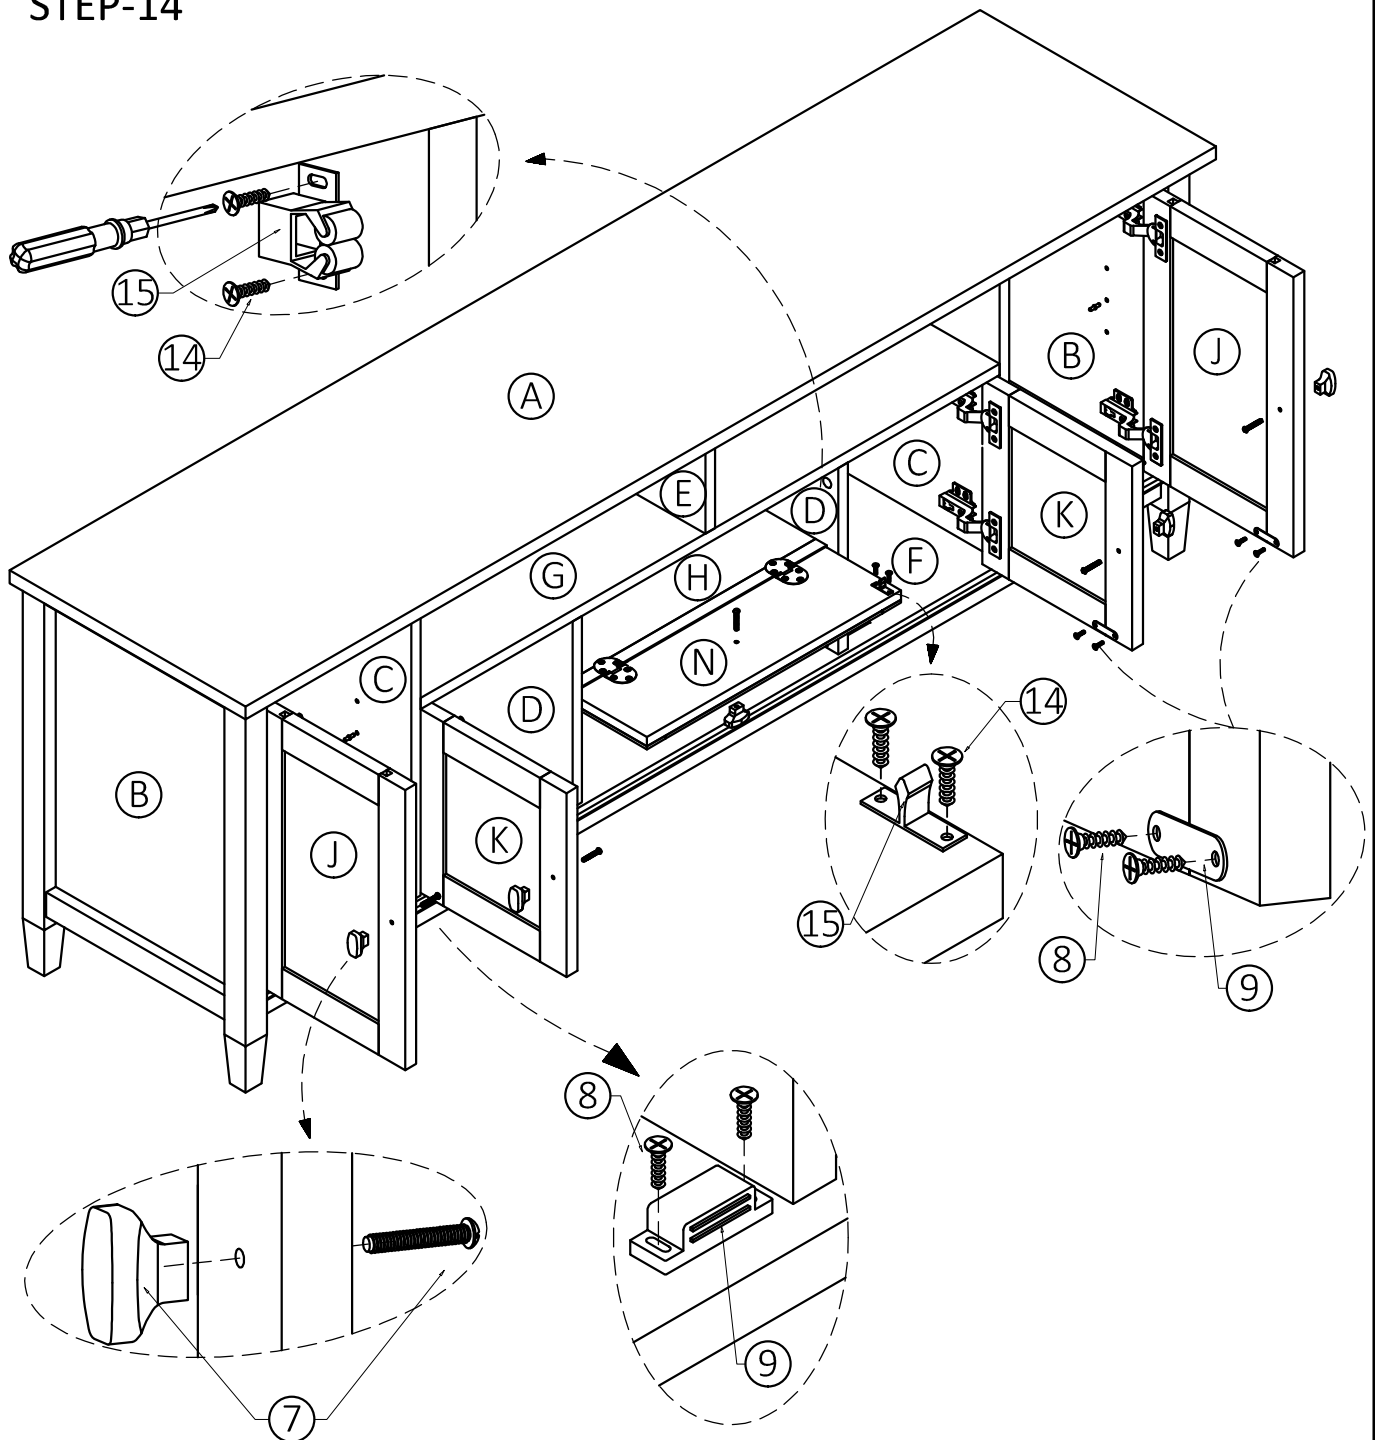

1. Attach Magnet Plates (9) to bottom corner of Large Doors (J), Small Doors (K) using Phillips Screws (8) into guide holes on Large Doors (J), Small Doors (K).
2. Attach Magnets (9) using Phillips Screws (8) into guide holes on Bottom Shelf (F).
3. Attach Latch (15) to Flip Down Door (N) using Phillips Screws (14) into guide holes.
4. Attach Latch (15) to Middle Divider (D) using Phillips Screws (14) into guide holes.
5. Use Phillips screwdriver to snugly tighten screw.
6. Use Phillips screwdriver to attach Handles (7) to Large Doors (J), Small Doors (K), Flip Down Door (N).


STEP-15

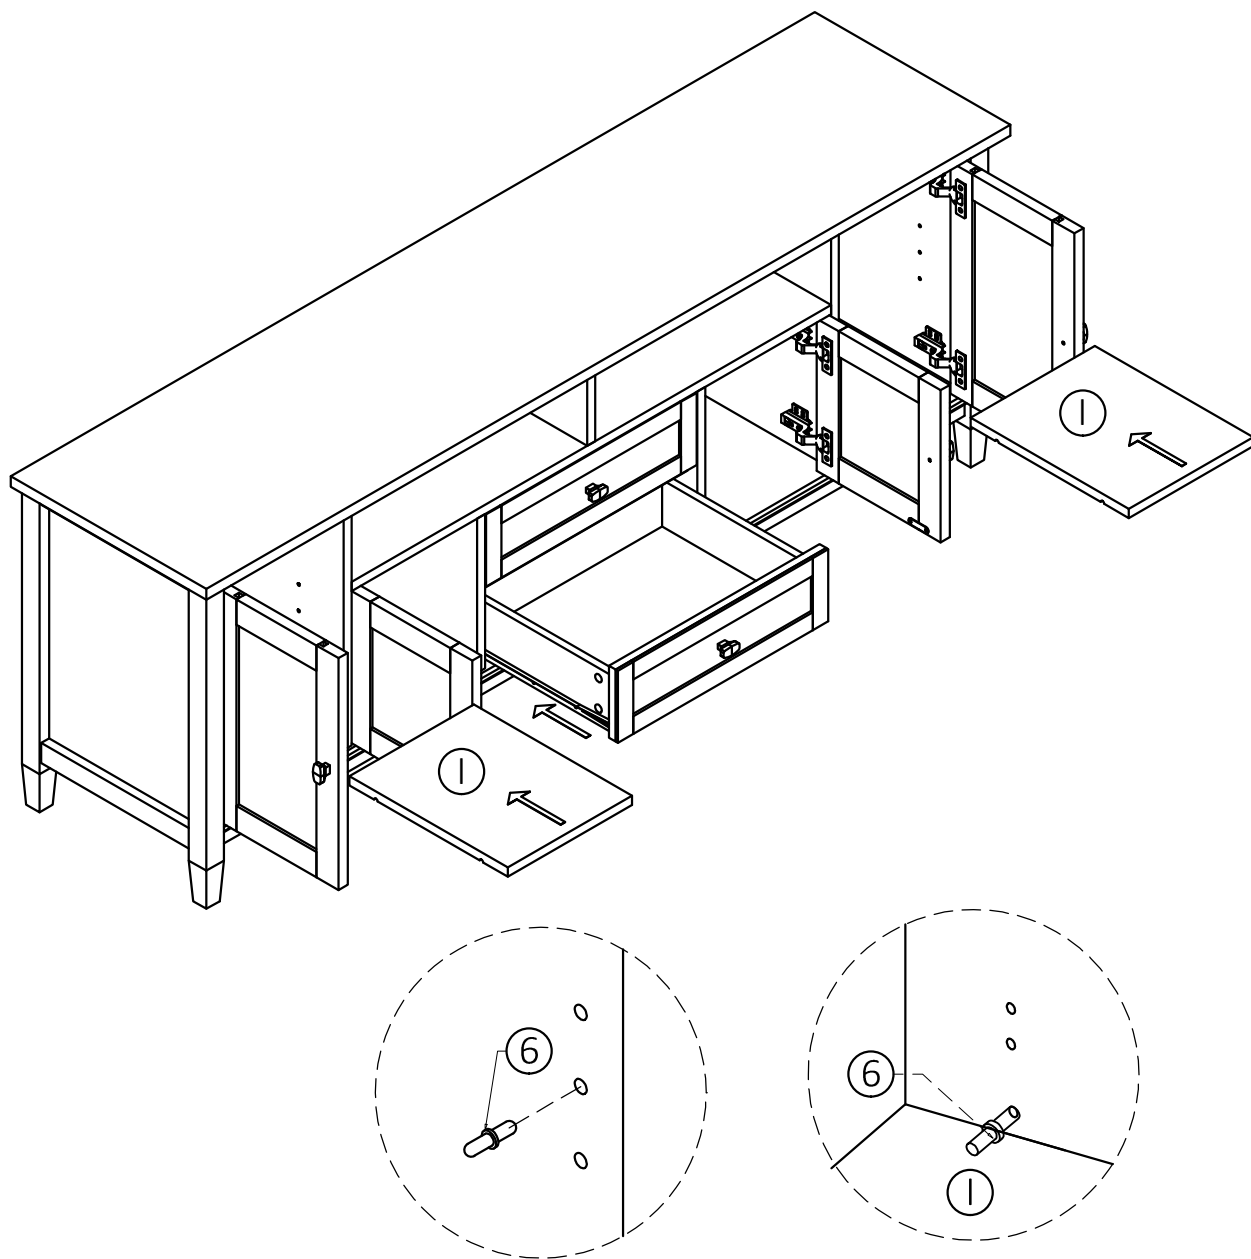

1. Use 4 Shelf Supports (6) for each Shelf (1) in desired location.
2. 2 Shelf Supports (6) may be used on back top of each Shelf (1) as a tipping restraint.
3. Insert assembled drawer into glides on assembled sideboard.


## FURNITURE ANTI-TIPPING RESTRAINT ASSEMBLY

 **NOTE:** Injuries and damage can occur from furniture tip-over. It is important to use the safety bracket included. If the tipping restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.



**NOTE:** The screwdriver is not included in the hardware pack.


### STEP-16

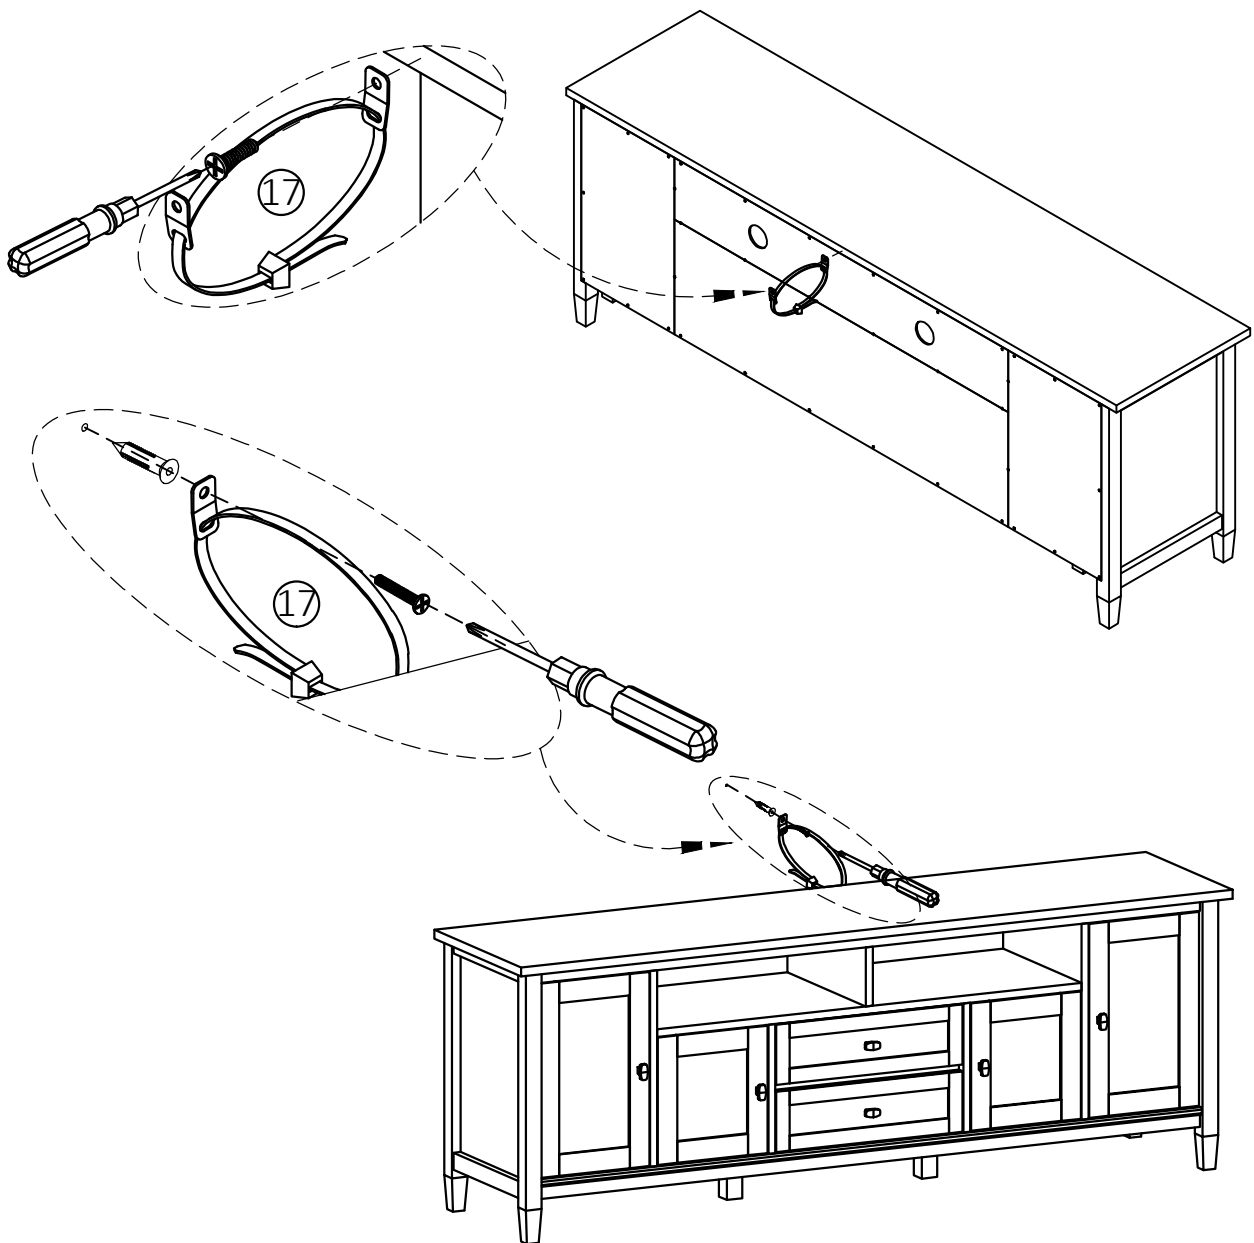

## FURNITURE ANTI-TIPPING RESTRAINT ASSEMBLY

### Furniture Anti-Tipping Restraint Instructions:

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.
  2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches below the bracket mounted to the furniture.
  3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
  4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
  5. Place the furniture so the back edge is in line with the bracket on the wall.
  6. Lace an end of the nylon restraint down through each bracket. Bring both ends together and slide the beaded end of the strap through the keyhole shaped slot in the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
  7. To double lock, return the beaded end back through the keyhole as shown.
  8. Check to make sure the strap is securely laced and locked to the brackets.
- 
- **DO NOT** place heavy objects in top drawers
  - **DO NOT** let children climb or hang on drawers, doors or shelves

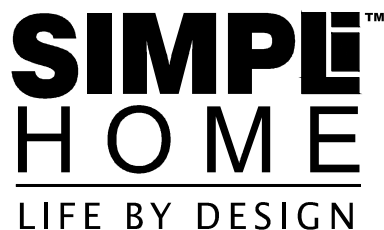

## WARRANTY

Thank you for purchasing a Simpli Home – Wyndenhall – Brooklyn + Max product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.


In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at [simpli-home.com/customer-support](https://www.simpli-home.com/customer-support).

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.



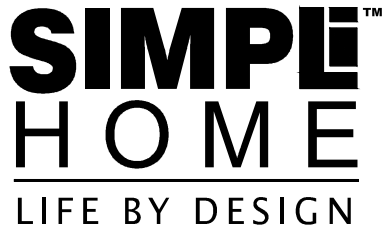

Question, problems, missing parts?

Before returning your product  
please email Customer Support at  
[simpli-home.com/customer-support](mailto:simpli-home.com/customer-support)

or call

Customer Support at 1-866-518-0120 ext. 262  
Monday to Friday between 9 am – 4 pm EST

For more information visit us on our website  
[www.simpli-home.com](http://www.simpli-home.com)

Like us on facebook  
[www.facebook.com/simplihomefurnishings](http://www.facebook.com/simplihomefurnishings)