

# INSTRUCTION MANUAL



PRODUCT CODE: 75049

# HADEN MICROWAVES



## How Can We Help?

The Haden team is always interested in what you have to say, so why not get in touch?



Call us

**California: +1 562 942 0492**

**Outside California: +1 866 942 0492**

**Available Monday - Friday**

**8:00am - 4:30pm P.T.**



Email us

**service@hadenusa.com**



Write to us

**Team Haden | Studio Designs**

**6027 Bandini Blvd,  
Commerce, CA 90040**



Visit us

**www.hadenusa.com**

# CONTENTS

INTRODUCTION	4
SAFETY INSTRUCTIONS	5
INSTALLATION	12
USING YOUR MICROWAVE	13
OPERATION / FUNCTIONS	15
COOKING TIPS	20
CLEANING	22
MAINTENANCE	24
TECHNICAL SPECIFICATION	26
WARRANTY	27

# INTRODUCTION

Thank you for purchasing this product, please take time to read these instructions before use. They have been written to ensure you get the very best from your purchase.

## SAFETY

To ensure your safety and the safety of others, please ensure you read all these instructions paying particular attention to the Safety information before you operate product.

Keep this information in a safe place for future reference.

## UNPACKING

Retain packaging in which the microwave oven was supplied so that in the event that the equipment needs to be returned it can be suitably repacked.

Open the packaging carefully and remove each item for inspection. Remove any protective film covering the microwave. Do not use a knife or sharp object otherwise you risk damaging the surface.

Check that all items have been supplied. The items supplied for this model of microwave oven are:

- Microwave oven
- Glass turntable
- Rotating axis
- Instruction manual (this publication)

Inspect the microwave oven and power lead for any damage. If any damage is found do not use the oven. Contact the dealer where the product was purchased.

# SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

**WARNING** – To reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy:

- Read all instructions before using the appliance.
- Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY"
- This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS".
- Install or locate this appliance only in accordance with the provided installation instructions.
- Some products such as whole eggs and sealed containers – for example, closed glass jars – are able to explode and should not be heated in this oven.
- Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
- As with any appliance, close supervision is necessary when used by children.
- Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.
- Do not cover or block any openings on the appliance.
- Do not store this appliance outdoors. Do not use this product near water – for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
- Do not immerse cord or plug in water.

- Keep cord away from heated surfaces.
- Do not let cord hang over edge of table or counter.
- When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergents applied with a sponge or soft cloth.
- To reduce the risk of fire in the oven cavity:
  - a.** Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
  - b.** Remove wire twist-ties from paper or plastic bags before placing bag in oven.
  - c.** If materials inside the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
  - d.** Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
- Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID.
- Notice for extension cord:
  - a.** A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
  - b.** Longer cord sets or extension cords are available and may be used if care is exercised in their use.
  - c.** If a long cord or extension cord is used:
- The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
- The extension cord must be a grounding-type 3-wire cord;
- The longer cord should be arranged so that it will not drape

over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

- Make sure the voltage in your living area corresponding to the one shown on the rating label of the appliance. And the wall socket is properly grounded.
- To reduce the risk of fire in the oven cavity:
  - a.** DO not overcook the food.
  - b.** Remove wire twist -ties from paper or plastic bags before placing bags in the oven.
  - c.** Do not heat oil or fat for deep drying as the temperature of oil cannot be controlled.
  - d.** After use wipe the waveguide cover with a damp cloth, followed by dry cloth to remove any food splashes and grease. Built -up grease may overheat and begin to cause smoke or catch fire.
  - e.** If materials inside the oven should smoke or ignite, keep oven door closed, turn oven off and disconnect the power supply.
  - f.** Close supervision is necessary when using disposable containers made from plastic, paper or other combustible material.
- To reduce the risk of explosion and sudden boiling:
  - a.** Do not place sealed containers in the oven. Baby bottles fitted with a screw cap or teat are considered to be sealed containers.
  - b.** When boiling liquid in the oven, use the wide -mouthed container and stand about 20 seconds at the end of cooking to avoid delayed eruptive boiling of liquids.
  - c.** Potatoes, sausage and chestnut should be peeled or pierced before cooking. Eggs in their shell, whole hard -boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
  - d.** The cooked liquid should not be removed out immediately. Several moments should be waited before removing. In order to avoid possible hazards caused by delayed

eruptive boiling of liquids.

- e.** The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns.
- Never operate the oven further if the door or door seals is damaged or the oven is malfunctioned or supply cord is damaged. Return the appliance to the nearest authorized service center for repair and maintenance. Never try to adjust or repair the oven yourself.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a qualified technician in order to avoid a shock hazard.
- After cooking, the container is very hot. Using gloves to take out the food and avoid steam burns by directing steam away from the face and hands.
- Slowly lift the furthest edge of dishes cover and microwave plastic wrap and carefully open popcorn and oven cooking bags away from the face.
- To prevent the turntable from breaking:
  - a.** Let the turntable cool down before cleaning.
  - b.** Do not place hot foods or utensils on the cold turntable.
  - c.** Do not place frozen foods or utensils on the hot turntable.
- Make sure the utensils do not touch the interior walls during cooking.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Only use utensils that are suitable for use in microwave ovens.
- Do not store food or any other things inside the oven.
- Do not operate the oven without any liquid or food inside the oven. This would do damage the oven.
- This appliance is not intended for use by young children or infirm persons without supervision.
- When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.



- Any accessories not recommended by the manufacturer may cause injuries to persons.
- Do not use outdoors.
- **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person;
- **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy;
- **WARNING:** Liquids and other foods must not be heated sealed container since they are liable to explode;
- **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use;
- Only use utensils that are suitable for use in microwave ovens;
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames;
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container;
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns ;
- Eggs in their shell and whole hard -boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended;
- The oven should be cleaned regularly and any food deposits removed;
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation;
- During use the appliance becomes hot. Care should be taken

- to avoid touching heating elements inside the oven.
- **WARNING:** Accessible parts may become hot during use. Young children should be kept away.
  - Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
  - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
  - Children should be supervised to ensure that they do not play with the appliance.
  - The appliances are not intended to be operated by means of an external timer or separate remote -control system.
  - The temperature of accessible surfaces may be high when the appliance is operating.



## **CAUTION: HOT SURFACE**

### **PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**

- Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces. (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

### **PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**

- Do not operate or allow the oven to be operated with the door open.
- Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary: (1) interlock operation, (2) proper door closing, (3) seal and sealing surfaces (arcing, wear, and other damage), (4) damage to or loosening of hinges and latches, (5) evidence of dropping or abuse.
- Before turning on microwave power for any service test or inspection within the microwave generating compartments, check the magnetron, wave guide or transmission line, and cavity for proper alignment, integrity, and connection.
- Any defective or misadjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.
- A microwave leakage check to verify compliance with the Federal Performance Standard should be performed on each oven prior to release to the owner.

## GROUNDING INSTRUCTIONS

 
This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

**WARNING** – Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded, and either:

If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance, or


Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

# INSTALLATION

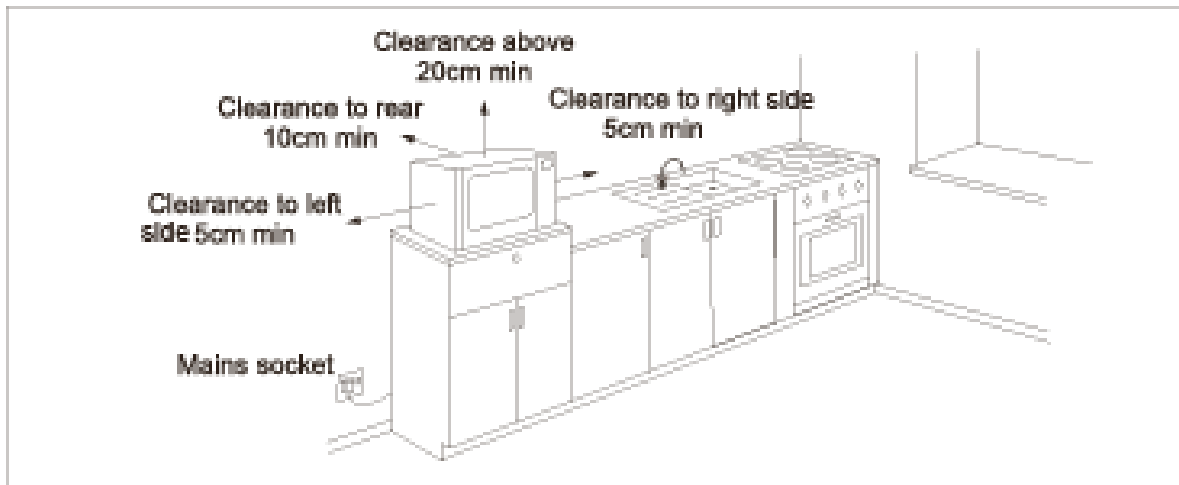

- Microwave ovens must be placed under dry and non-corrosiveness environments, kept away from heat and humidity, such as gas burner or water tank.
- To ensure sufficient ventilation, the distance of the back of microwave to the wall should be at least 10 cm, the side to the wall should be at least 5 cm, the free distance above the top surface at least 20 cm. the distance of the microwave to the ground should be at least 85 cm.
- The position of the oven shall be such that it is far from the TV, Radio or antenna as picture disturbance, or noise may occur.
- The appliance must be positioned so that the plug is accessible, and must ensure a good grounding in case leakage, ground loop can be formed to avoid electric shock.
- The microwave oven must be operated with the door closed.
- The microwave oven shall not be placed in a cabinet.
- The back of the oven must be placed against a wall.
- As there is manufacturing residue or oil remained on the oven cavity or heat element, it usually would smell the odor, even a slight smoke, It is normal case and would not occur after several times use, keep the door or window open to ensure good ventilation. So it is strongly recommended to place a cup of water in the turntable, setting at high power and operate for several times.

# USING YOUR MICROWAVE

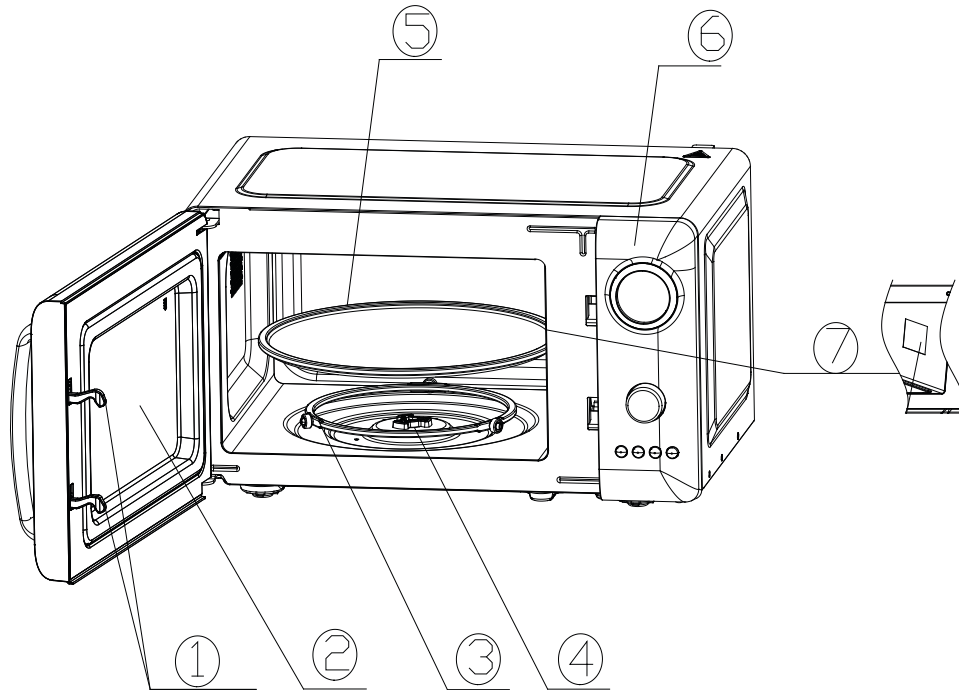 

## 1) Door lock

Microwave oven door must be properly closed in order for it to operate.

## 2) Viewing window

Allow user to see the cooking status.

## 3) Rotating axis

The glass turntable sits on the axis; the motor underneath it drives the turntable to rotate.

## 4) Rotating ring

The glass turntable sits on its wheels; it supports the turntable and helps it to balance when rotating.

## 5) Turntable

The food sits on the turntable, its rotation during operation helps to cook food evenly.

## CAUTION

- Place the rotating ring first.
- Fit the turntable onto the rotating axis and make sure that it is geared in properly.

## 6) Control panel

See below in details

 
## 7) Waveguide cover

It is inside the microwave oven, next to the wall of control panel.

# ! WARNING

Never remove the waveguide cover

## OPERATION OF CONTROL PANEL

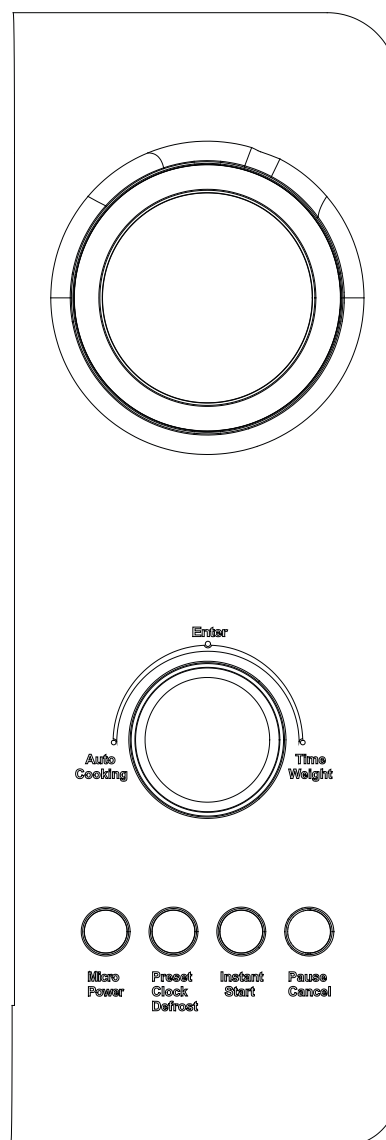

## BEFORE COOKING

The display will flash 3 times when plugged in power, then enter the standby state.

## MICROWAVE FUNCTION

There are five firepower levels, 100P, 80P, 60P, 40P and 20P.

- Press the “**Micro Power**” button continuously and select the desired microwave power.
- Turn the “**Time**” knob to select cooking time, the time range can be selected is from 0:10 to 60:00.
- After selecting the time, press “**Instant/Start**” button to start work. An buzzing sound to notify completion of the operation.

High	100% power output	(Applicable for quick and thorough cooking)
M. High	80% power output	(Applicable for medium express cooking)
Med	60% power output	(Applicable for steaming food)
M. Low	40% power output	(Applicable for defrosting food)
Low	20% power output	(Applicable for keeping warm)

## CAUTION

- a. The max time which can be set is 60 minutes
- b. Never operate the oven empty. Do not use metal utensils to avoid damage to the microwave oven or danger.
- c. At the maximum microwave power, the oven will automatically lower the power after a certain time of cooking to lengthen the service life.
- d. If you turn the food during operation, press the **Instant/Start** button once and the preset cooking procedure will continue.
- e. If you intend to remove the food before the preset time, you must press **Pause/Cancel** button once to clear the preset procedure to avoid unintended operation of next time use.

## DEFROST

There are three defrost mode, d.1, d.2 and d.3.

- Press "**Defrost**" button continuously to select the defrost mode
- Then turn the "**Weight**" knob to choose the food weight.
- After selecting, press the "**Instant/Start**" button start to work. During the operation, it will have a beeping sound to prompt the food to be turned over during defrosting. An buzzing sound to notify completion of the operation.

d.1	Defrosting meat, weight range 3.5 - 70.0oz
d.2	Defrosting poultry, weight range 7.0 - 98.0oz
d.3	Defrosting seafood, weight range 3.5 - 31.5oz

## CAUTION

- a. It is necessary to turn over the food during operation to obtain uniform effect.
- b. Usually defrosting will need longer time than that of cooking the food.
- c. If the food can be cut by knife, the defrosting process can be considered completed.
- d. Microwave penetrates around 4cm into most food
- e. Defrosted food should be consumed as soon as possible, it is not advised to put back to fridge and freeze again.

## CLOCK SETTING

In standby mode,

- Press the "**Clock**" button for 3 seconds to enter the clock setting state,
- Turn the "**Time**" knob and enter the hour.
- Press the "**Clock**" button again to enter the minute setting, turn the "**Time**" knob and enter the minute.
- Finally, press the "**Clock**" button to confirm, and the clock setting is completed.



## AUTO COOKING

There are twelve automatic menus, from A-01 to A-12.

- Turn the “**Auto Cooking**” knob to select the desired menu.
- Then press the “**Enter**” button to enter the weight selection.
- Turn the knob to select the “**Weight**”.

After selecting the weight, press “**Instant/Start**” button to start work.

Display	Kind	Method
A-01	<b>Popcorn</b>	The optional weights are 3.0oz and 3.5oz.
A-02	<b>Potato</b>	The optional weights are 1.0lb and 1.5lb.
A-03	<b>Vegetable</b>	The optional weight range is 3.5oz-18.0oz.
A-04	<b>Meat</b>	The optional weight range is 0.4lb-1.5lb.
A-05	<b>Fish</b>	The optional weight range is 0.4lb-1.5lb.
A-06	<b>Chicken</b>	The optional weight range is 0.4lb-1.5lb.
A-07	<b>Reheat</b>	The optional weight range is 7.0oz-35.0oz.
A-08	<b>Beverage</b>	The optional weights are 8.5oz and 17.0oz.
A-09	<b>Rice</b>	The optional weight range is 3.5oz-18.0oz.
A-10	<b>Pasta</b>	The optional weight range is 3.5oz-18.0oz.
A-11	<b>Bread</b>	The optional weight range is 3.5oz-18.0oz.
A-12	<b>Pizza</b>	The optional weights are one portion and two portions.

- a. The temperature of food before cooking would be 20-25°C. Higher or lower temperature of the food before cooking would require increase or decrease of cooking time.
- b. The temperature, weight and shape of food will largely influence the cooking effect. If any deviation has been found to the factor noted on above menu, you can adjust the cooking time for best result.

## PRESET

If you don't want the cooking procedure to start immediately, you can preset the desired start-up time. When the preset time is reached, the microwave oven will automatically start the preset procedure. The setting steps are as follows:

- Press the "**Micro Power**" button to select microwave power.
- Turn the "**Time**" knob to set the cooking time.
- Press the "**Preset**" button for 3 seconds to enter the preset state.
- Turn the "**Time**" knob to set the hour. After setting the hour, press the "**Preset**" button to enter the minute setting, and turn the "**Time**" knob to set the minute.
- After setting for minutes, finally press the "**Preset**" button to complete the setting, and the buzzer will sound for a long time to prompt the completion of the setting.
- After setting, the microwave oven starts counting down, during which you can press the "**Preset**" button to view the preset time. When the clock runs to the preset time, the microwave oven starts automatically. If you don't want to wait any longer and want to start the microwave oven immediately, you can press the "**Instant/Start**" button.

## MULTI-STAGE COOKING

In order to obtain better cooking effect, some recipes need different power setting or times to cook. You may use this setting to create a personalized menu.

For example, cook with 100% microwave power for 3 minutes and then cook with 20% power for 9 minutes is set as follows.

- Press the **"Micro Power"** button to set the microwave power 100%.
- Turn the **"Time"** knob to set the microwave cooking time for 3 minutes.
- Press the **"Micro Power"** button 5 times to set the microwave power 20%.
- Turn the **"Time"** knob to set the microwave cooking time for 9 minutes.
- Press the **"Instant/Start"** button to start cooking.

The microwave oven will run 100% firepower for 3 minutes. After 3 minutes, it will automatically change to 20% firepower for another 9 minutes. After that, there will be a beep sound prompt.

## CHILD LOCK FUNCTION

This feature is primarily intended to prevent children from using the microwave oven without adult guidance or to protect the control panel when cleaning. When in child safety lock mode, all buttons will be locked.

- Set child lock: Hold **Pause/Cancel** button for about 3 seconds.
- Cancel child lock: Hold **Pause/Cancel** button for about 3 seconds.

# COOKING TIPS

## FOOD ARRANGEMENT

Place thicker areas towards outside of dish, the thinner part towards the center and spread it evenly. Do not overlap if possible.

## COOKING TIME

Start cooking with a short time setting, evaluate it after it times out and extend it according to the actual need. Over cooking may result in smoke and burns.

## COOKING FOOD EVENLY

Food such as chicken, hamburger or steak should be turned once during cooking. Depending on the type of food, if applicable, stir it from outside to center of dish once or twice during cooking

## STANDING TIME

After cooking times out, leave the food in the oven for an adequate length of time, this allows it to complete its cooking cycle and cooling it down in a gradual manner

## WHETHER FOOD IS COOKED

Color and hardness of food help to determine if it is done, these include:

- Steam coming out from all parts of food, not just the edge
- Joints of poultry can be moved easily
- Pork or poultry shows no signs of blood
- Fish is opaque and can be sliced easily with a fork

## BROWNING

When using a browning dish or self-heating container, always place a heat-resistant insulator such as a porcelain plate under it to prevent damage to the turntable and rotating ring.

## MICROWAVE SAFE PLASTIC WRAP

When cooking food with high fat content, do not allow the plastic wrap come into contact with food as it may melt.

## MICROWAVE SAFE PLASTIC COOKWARE

Some microwave safe plastic cookware might not be suitable for cooking foods with high fat and sugar content. Also, the preheating time specified in the dish instruction manual must not be exceeded.

## CONTAINER GUIDELINE

It is strongly recommended to use the containers which are suitable and safe for microwave cooking. Generally speaking, the containers which are made of heat-resistant ceramic, glass or plastic are suitable for microwave cooking. Never use the metal containers for microwave cooking and combination cooking as spark is likely to occur. You can take the reference of below table.

Material of container	Microwave	Notes
Heat-resistant ceramic	Yes	Never use the ceramics which are decorated with metal rim or glazed
Heat-resistant ceramic	Yes	Can not be used for long time microwave cooking
Heat-resistant glass	Yes	
Grill rack	No	
Plastic film	Yes	It should not be used when cooking meat or chops as the over-temperature may do damage to the film

# CLEANING

## MICROWAVE OVEN CARE

### CAUTION

The oven should be cleaned regularly and any food deposits removed.

### WARNING

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

- Remove the power cord from the wall outlet before cleaning
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation
- The oven should be cleaned regularly and any food deposits removed
- Details for cleaning door seals, cavities and adjacent parts.
- Never use hard detergent, gasoline, abrasive powder or metal brush to clean any part of the appliance
- Do not remove the waveguide cover
- When the microwave oven has been used for a long time, there may be some strange odors exist in oven, Following 3 methods can get rid of them:
  - Place several lemon slices in a cup, then heat with high power for 2-3 min.
  - Place a cup of red tea in oven, then heat with high power.
  - Put some orange peel into oven, and then heat them with high power for 1 minute.

## **TIPS FOR CLEANING**

### **Exterior:**

- Wipe the enclosure with a dampened soft cloth

### **Door:**

- Using a dampened soft cloth, wipe clean the door and window.
- Wipe the door seals and adjacent parts to remove any spill or spatter.
- Wipe the control panel with a slightly dampened soft cloth.

### **Interior walls:**

- Wipe clean the interior surfaces with a dampened soft cloth.
- Wipe clean the waveguide cover to remove any food splashed.

### **Turntable / Rotation ring / Rotation axis:**

- Wash with mild soap water
- Rinse with clean water and allow drying thoroughly.

# MAINTENANCE

## SERVICING

Please check the following before calling for services.

1. Place one cup of water (approx.150ml) in a glass measure in the oven and close the door securely. Oven lamp should go off if the door is closed properly. Let the oven work for 1 min.
2. Does the oven lamp light?
3. Does the cooling fan work?  
(Put your hand over the rear ventilation openings.)
4. Does the turntable rotate?  
(The turntable can rotate clockwise or counter clockwise. This is quite normal.)
5. 5. Is the water inside the oven hot?

If "NO" is the answer to any of the above questions, please check your wall socket and the fuse in your meter box.

If both the wall socket and the fuse are functioning properly,  
CONTACT YOUR NEAREST SERVICE CENTER APPROVED.

## SERVICING SAFEGUARDS

### MICROWAVE RADIATION



## WARNING

It is hazardous for anyone, other than a qualified service technician, to carry out any service for repairing operation which involves removal of any cover which gives protection against exposure to microwave energy.

The temperature of accessible surfaces may be high when the appliance is operating



## **WARNING**

The high voltage capacitor remains charge after disconnection; short the negative terminal of H. V capacitor to the oven chassis (use a screwdriver) to discharge before touching.

During servicing below listed parts are liable to be removed and give access to potentials above 250V to earth.

1. Magnetron
2. High voltage transformer
3. High voltage capacitor
4. High voltage diode
5. High voltage fuse

## **WARNING**

The following conditions may cause undue microwave exposure during servicing.

- Improper fitting of magnetron;
- Improper matching of door interlock, door hinge and door;
- Improper fitting of switch support;
- Door, door seal or enclosure has been damaged.

## **ERROR CODES**

 
- Err0 - it indicates that sensor has been short circuit and you need replace it at the nearest repaired department.
- Err1 during working, it indicates that sensor has been open circuit and you need replace it at the nearest repaired department.

If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

# TECHICAL SPECIFICATION

<b>Model Number</b>	HMC208TC-US
<b>Power Supply</b>	120V / 60Hz
<b>Power Consumption (Microwave)</b>	1150W
<b>Rated Microwave Output</b>	700W
<b>Operation Frequency</b>	2450MHz

## CORRECT DISPOSAL OF THIS PRODUCT

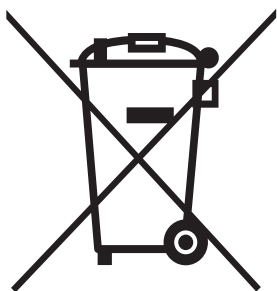

### **DISPOSAL:**

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

# LIMITED WARRANTY

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of original purchase in Canada and one (1) year from the date of original purchase in the U.S. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you.

If the product or component is no longer available, we will replace with a similar one of equal or greater value. This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse.

This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g. 120V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price.

Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights.

You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.



ESTD. ENGLAND 1958