


# ASSEMBLY INSTRUCTIONS

ITEM#:ORC001

## Important Safety Instructions:





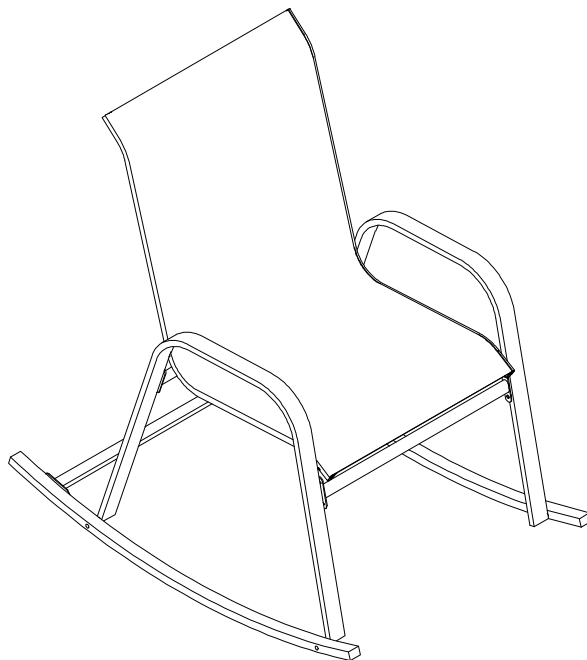







- Please read all instructions before beginning assembly
- Please make sure receive all the parcels to start the assembly
- For your safety and convenience, assembly by two people is recommended
- Use the parts and hardware lists to identify and separate each of the components included
- Save all packing materials until assembly is completed to avoid the accidental discarding of smaller parts or hardware



**Note:**You may find cushions placed underneath the table or between frames!



 THANK YOU FOR PURCHASING
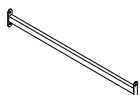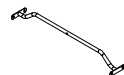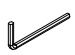
## PARTS LIST


<b>1</b>	<b>SEAT</b>	<b>1PC</b>	
<b>2</b>	<b>ARMREST-A</b>	<b>1PC</b>	 <b>Left</b>
<b>3</b>	<b>ARMREST-B</b>	<b>1PC</b>	 <b>Right</b>
<b>4</b>	<b>ROCKER-B</b>	<b>1PC</b>	 <b>Right</b>
<b>5</b>	<b>ROCKER-A</b>	<b>1PC</b>	 <b>Left</b>
<b>6</b>	<b>METAL TUBE-A</b>	<b>2PCS</b>	
<b>7</b>	<b>METAL TUBE-B</b>	<b>1PC</b>	
<b>8</b>	<b>ADJUSTABLE BAR</b>	<b>3PCS</b>	
<b>9</b>	<b>ALLEN KEY</b>	<b>1PC</b>	
<b>10</b>	<b>BOLT-A</b>	<b>24PCS</b>	 <b>M5*16</b>
<b>11</b>	<b>BOLT-B</b>	<b>8PCS</b>	 <b>M6*35</b>
<b>12</b>	<b>WASHER</b>	<b>32PCS</b>	

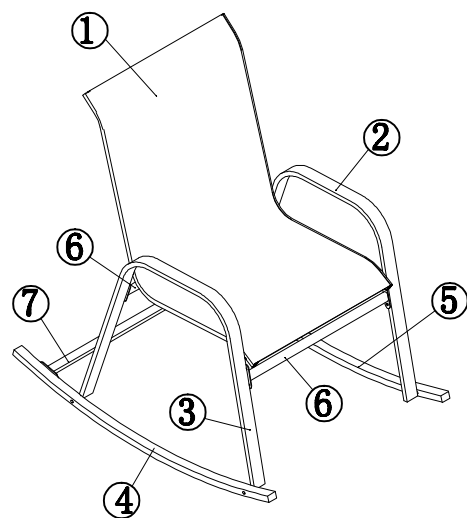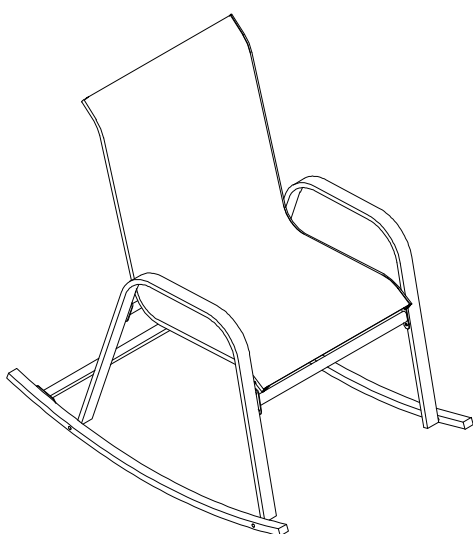

# ASSEMBLY INSTRUCTION STEPS


**Assembly Step** (NOTE: Please do not tighten the bolts till last step.)

## Step 1

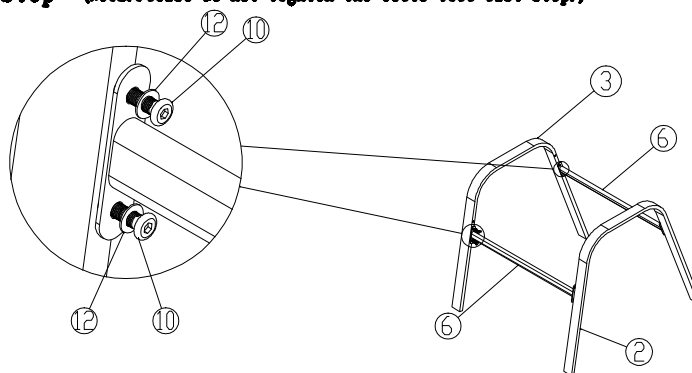


Assemble the metal tubes F to side bars C (Right) and B (Left) using washers L, bolts J and caps M.

## Step 2

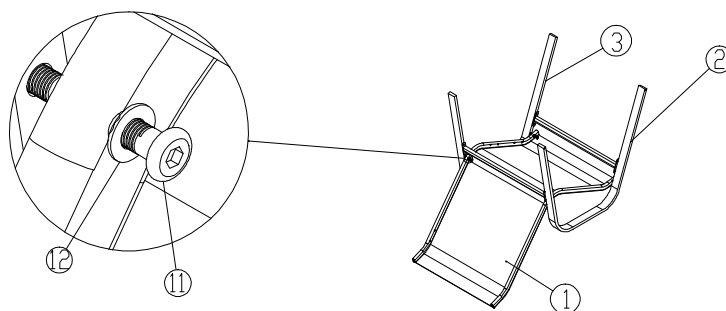

Assemble the back frame A with textile fabric to the side bars C and B using washers L, bolts X and caps M. Please DO NOT over-tighten the bolts!

## Step 3

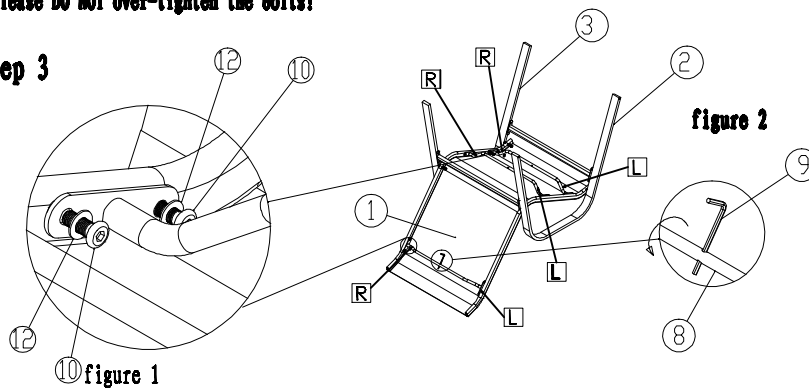


Assemble adjustable bars H to the back frame A using washers L, bolts J and cap M shown in figure 1. (Adjust turning tube in middle of bar H to adjust length to fit) Then put the plastic tube N onto the adjustable bars H to cover the exposed groove shown in figure 3.

NOTE: If the textile fabric on the back frame is too loose or tight, you can adjust the textile fabric with Allen Key I shown in figure 2.

Pls pay attention to the left side "L" & Right side "R" on the adjustable bar H, make sure you assemble it as the same direction as Figure 2.


## ASSEMBLY INSTRUCTION STEPS

### Step 4

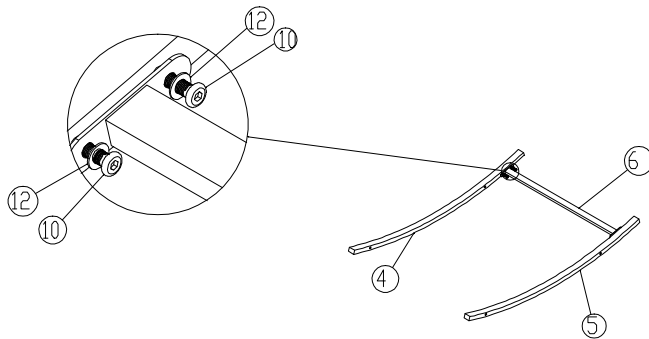


Assemble metal tube G to legs D and E using spring washers L, bolt J and caps M.

### Step 5

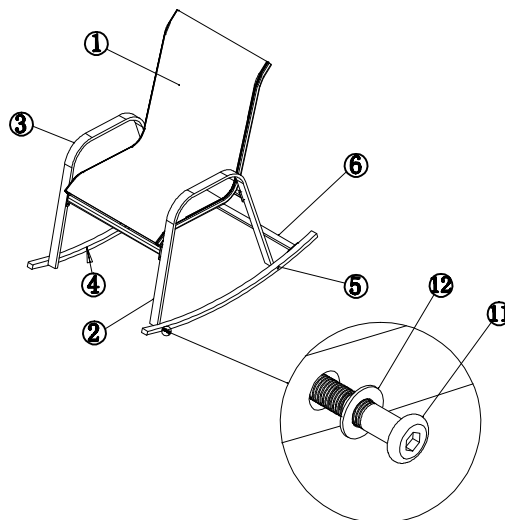

Assemble the legs D and E to side bars C and B using spring washers L, bolts K and cap M.

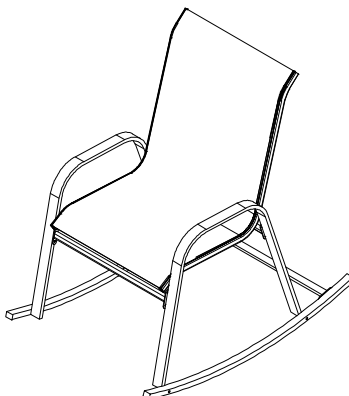

**Bestsign International Inc.**

**900 Canada Ct, City of Industry, CA 91748**

**Tel: (626) 330-2975 Fax: (626) 330-2829**

## **Furniture Care & Cleaning Instructions**

- Do not expose the furniture to strong sunlight, which causes discoloration and shorten the product lifetime.
- Do not expose the furniture to extreme heat, cold, or humidity, which may cause wood to swell or warp.
- Do not leave the furniture wet with beads of water standing on the furniture.
- Cover furniture with outdoor covers (sold separately) when left outside during inclement weather or when not in use.
- Wipe spills with a clean dry cloth. Do not use chemicals or abrasives for cleaning!
- TAKE NOTE: THE BOLTS MAY SLIGHTLY LOOSEN OVER TIME. IF YOUR FURNITURE FEELS "WOBBLY" OR LOOSE, PLEASE RE-TIGHTEN BOLTS.**

**Wicker Outdoor Furniture:** For daily care, wipe with a soft dry cloth. Wipe spills with a clean dry cloth. Avoid the use of harsh cleaners and abrasives. Store indoors during long periods of inclement weather. Make sure furniture is completely dry before storage. Cover furniture with outdoor covers (sold separately) when left outside during inclement weather or when not in use. Use a proper outdoor cover that allows for adequate ventilation without trapping moisture.

**Outdoor Furniture Cushions:** Extend the life of your cushions by keeping them free of dirt and foliage. Periodically shaking or rinsing the cushions is recommended. Thoroughly flush using a hose with cold water to remove all soil and residue. For deeper cleaning, spot clean with mild soap. Do not machine wash or use chlorine bleach. Stand cushions on end and dry completely in the sun before using or storing. Do not place in dryer. To prevent mildew, never wrap in plastic for storage and ensure the cushion is completely dry before storing. Store indoors when not in use for long periods of time or during inclement weather.

## **FURNITURE WARRANTIES**

### **ALL-WEATHER WICKER & FRAMES**

One-year warranty on all of our All-Weather Wicker Frames from date of delivery against manufacturer defects and structural failure (e.g., broken frame and welds) under normal use and conditions; One-year warranty from date of delivery against fading and cracking of wicker. Frames will be replaced, repaired or refinished in the original color and style, if available; a similar color and style will be offered if the original has been discontinued.

### **CUSHION INSERTS**

Limited One-year warranty from date of delivery against manufacturer defects or excessive deformity of cushions under normal use and conditions. Replacements and repairs will be in the original color and style, if available; a similar color and style will be offered if the original has been discontinued.

### **IMPORTANT LIMITATIONS**

Please note that our warranties do not cover failure due to any repairs or modifications to the product after purchase, accidental damage, abuse, misuse, commercial use, or normal wear and tear, including: fading, scratched or chipped finishes, weathering under normal weather conditions, staining or discoloration. The term "lifetime" as used in this statement of warranties shall mean a period of no longer than 30 years from the date of delivery of any item covered by a one-year warranty. The limited warranties described above are extended to the original purchaser of the product only.