

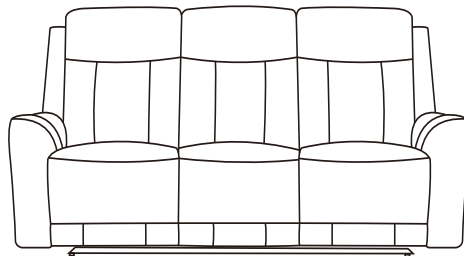


# Assembly Instructions



## Haywood

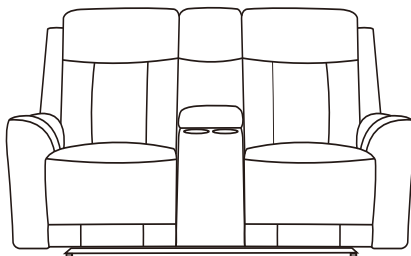

### BEFORE ASSEMBLY

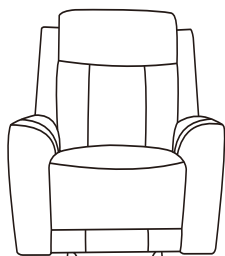

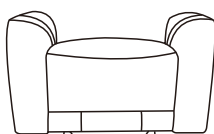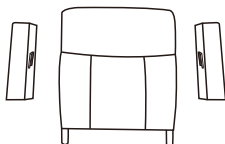

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

### Power Recliner



### Part List

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:


No	Description	Sketch	Qty
A	Body		1 PC
B	Back Cushion		1 PC
C	LAF Wing		1 PC
D	RAF Wing		1 PC

## Step 1

Install the Backrest into the Seat by positioning the female metal receiver brackets over the male metal posts. Ensure that female metal receiver brackets on each side of the backrest are positioned over the seat metal posts. Push down the female brackets over male posts simultaneously until each side is locked into place and an audible “click” is heard.


Connecting the wire.


Attention, there is a flap under backrest. Attach the flap to the seat frame.

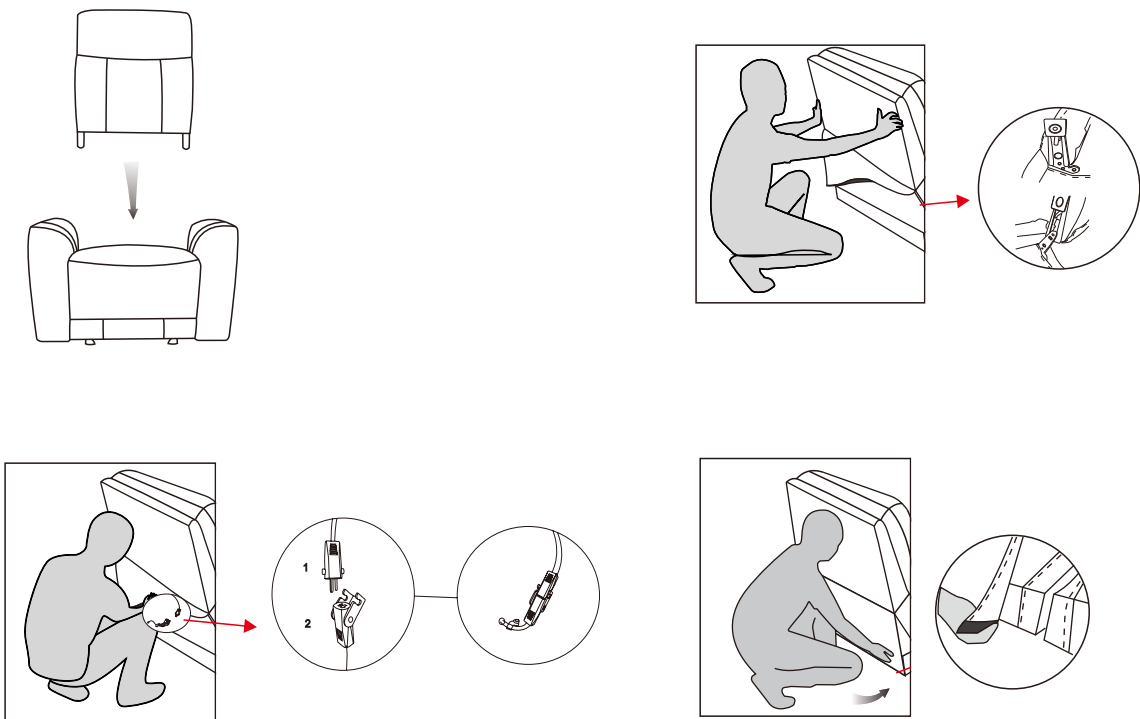

## Step 2

There are two wings under seat. Install RAF Wing and LAF Wing by inserting brackets.

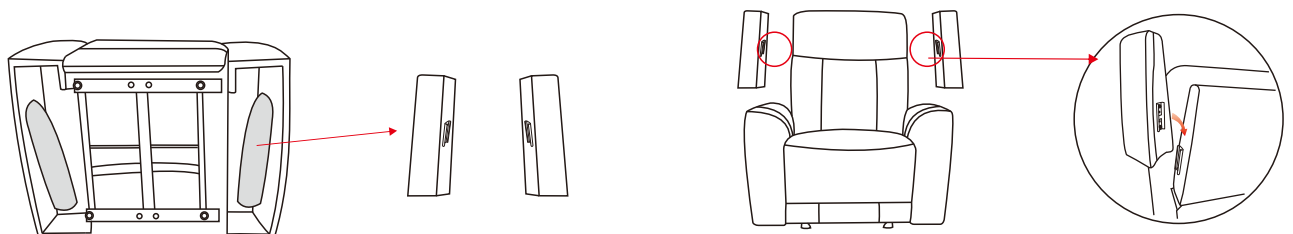

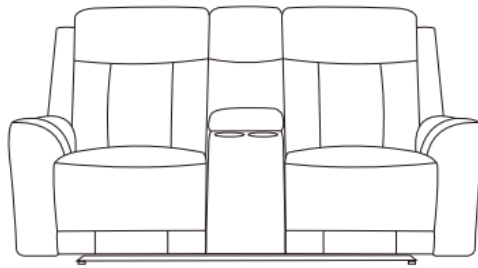

## Part List

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:


No	Description	Sketch	Qty
A	Body		1 PC
B	LAF Back Cushion		1 PC
C	Middle Back Cushion		1 PC
D	RAF Back Cushion		1 PC
E	LAF Wing		1 PC
F	RAF Wing		1 PC
G	Screws		3 PCS

## Step 1

Install the Backrest into the Seat by positioning the female metal receiver brackets over the male metal posts. Ensure that female metal receiver brackets on each side of the backrest are positioned over the seat metal posts. Push down the female brackets over male posts simultaneously until each side is locked into place and an audible “click ” is heard.


Connecting the wire.

Attention, there is a flap under backrest. Attach the flap to the seat frame.

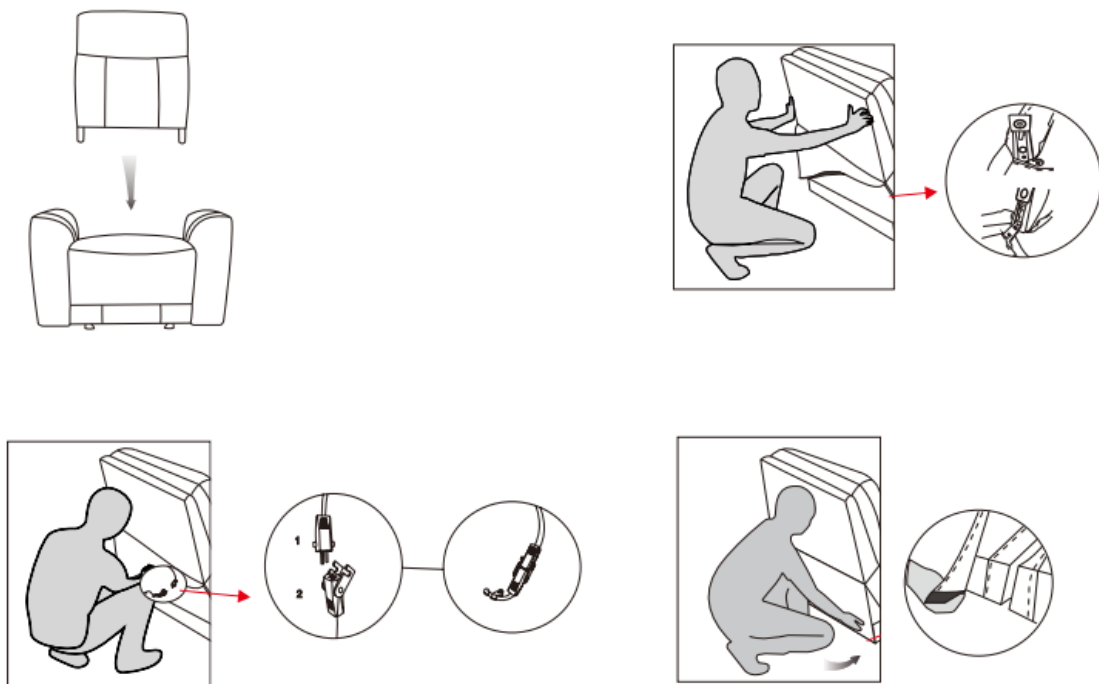


## Step 2


**Install Middle BackCushion by inserting 3 screws into pre-drilled holes on Console Body. Screw up from bottom to fix the console back.**

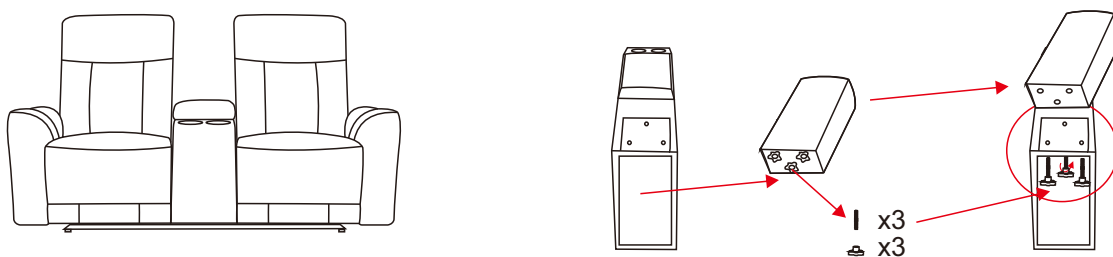

## Step 3



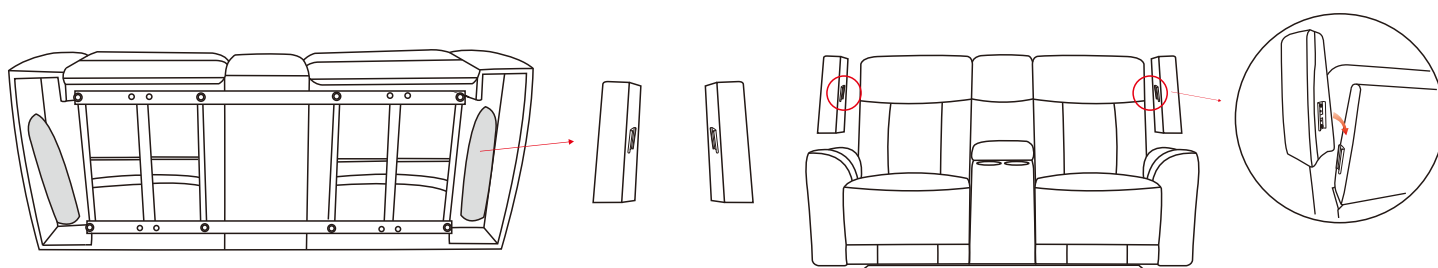

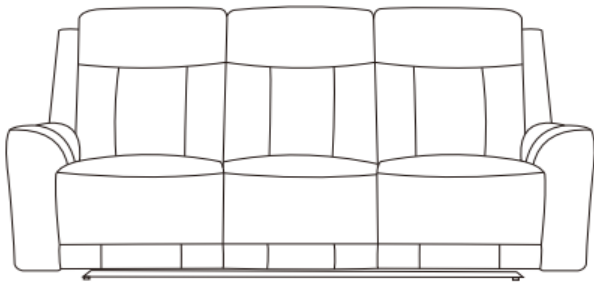

**There are two wings under seats. Install RAF Wing and LAF Wing by inserting brackets.**





Part List

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:





No	Description	Sketch	Qty
A	Body		1 PC
B	LAF Back Cushion		1 PC
C	Middle Back Cushion		1 PC
D	RAF Back Cushion		1 PC
E	LAF Wing		1 PC
F	RAF Wing		1 PC

Step 1

Install the Backrest into the Seat by positioning the female metal receiver brackets over the male metal posts. Ensure that female metal receiver brackets on each side of the backrest are positioned over the seat metal posts. Push down the female brackets over male posts simultaneously until each side is locked into place and an audible “click ” is heard.



Connecting the wire.

Attention, there is a flap under backrest. Attach the flap to the seat frame.

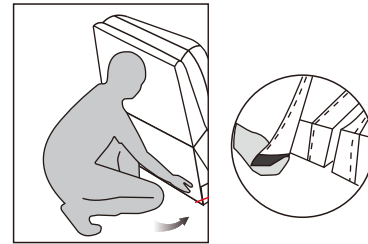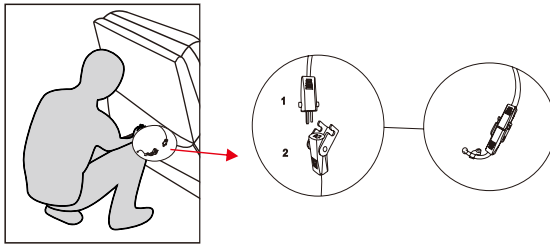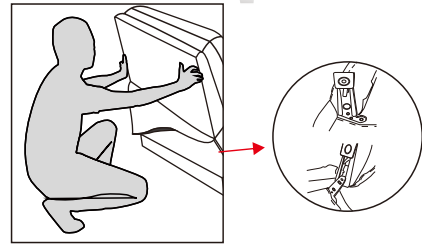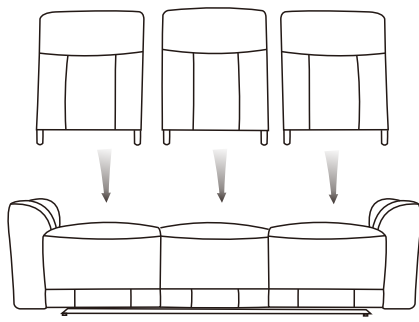

## Step 2

There are two wings under seat. Install RAF Wing and LAF Wing by inserting brackets.

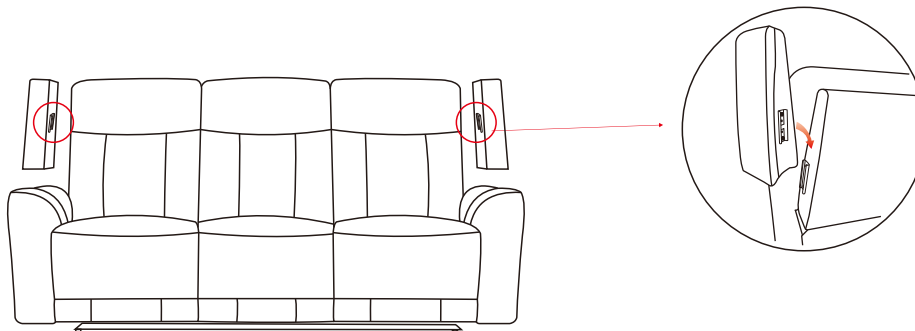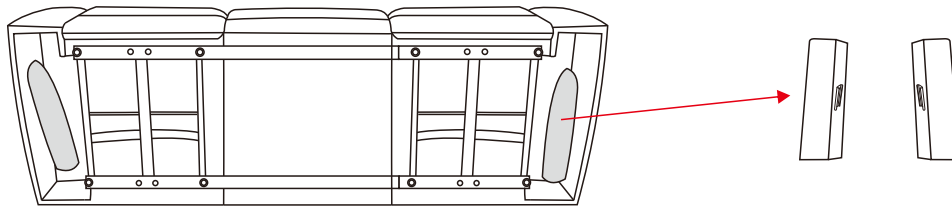

Seat contains 2.2 Density Foam, Back Cusion contains 100% Fiber.