


Item NO. SHO#480/481/482-EFW SHO#480/481/482-MDR


Part List		
No.	Description	
SHO#480-EFW	Desk Top	
SHO#481-EFW	Base Left (small)	
SHO#482-EFW	W Base Right (large)	

Hardware bag			1SET
Α	Bolt	Ø1/4"x32mmL	11PCS
В	Lock washer	1/4"xØ13mm	11PCS
С	Flat washer	1/4"xØ16mm	11PCS
D	Allen Wrench	4mm	1PC
Е	Desk Grommet	(F)	1PC
F	Touch Up Pen		1PC

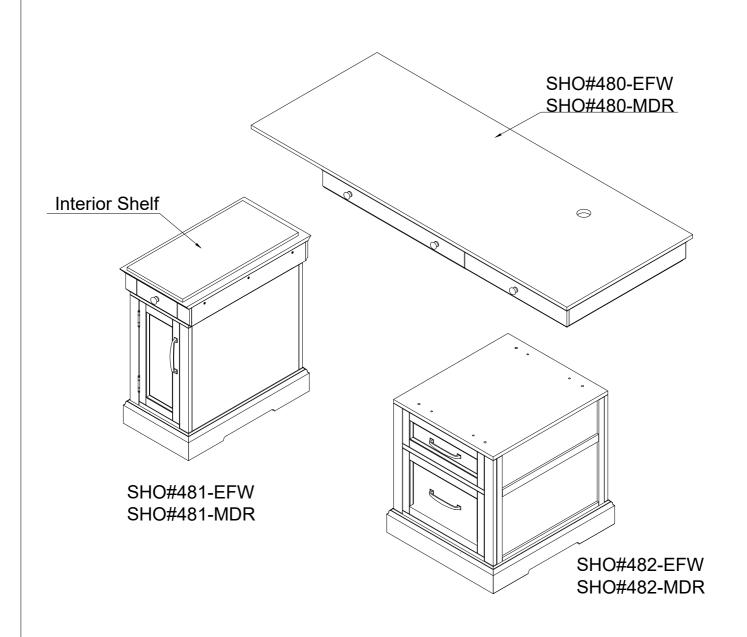



Item NO.SHO#480/481/482-EFW SHO#480/481/482-MDR

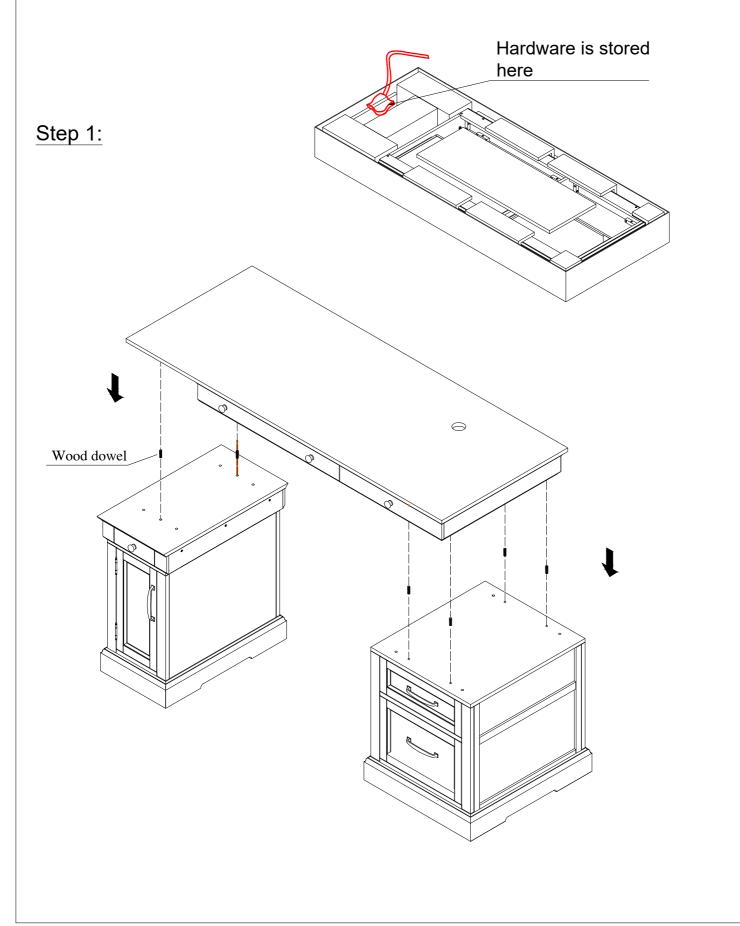





Item NO.SHO#480/481/482-EFW SHO#480/481/482-MDR

#### Step 2:

All drawers must be removed. To remove each drawer, press the tab down on the right side of the drawer and lift tab up on the left side of the drawer at the same time. Then pull slowly to disengage the latch and remove drawer.

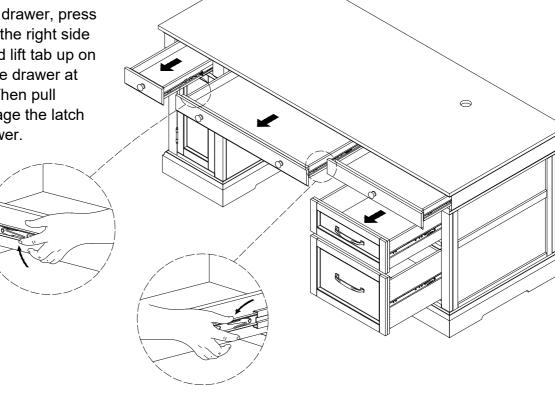

#### Step 3:

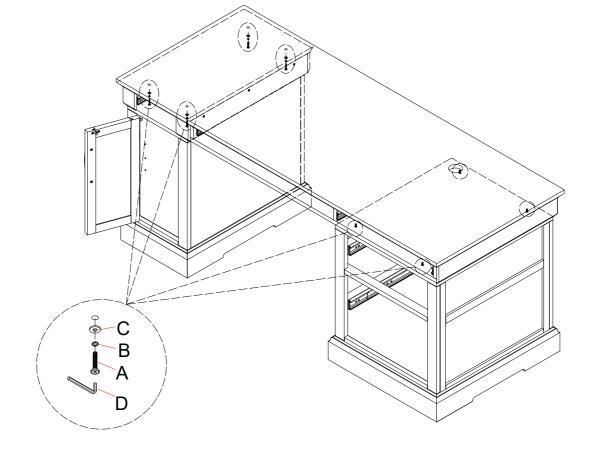




Item NO.SHO#480/481/482-EFW SHO#480/481/482-MDR



Step 5:

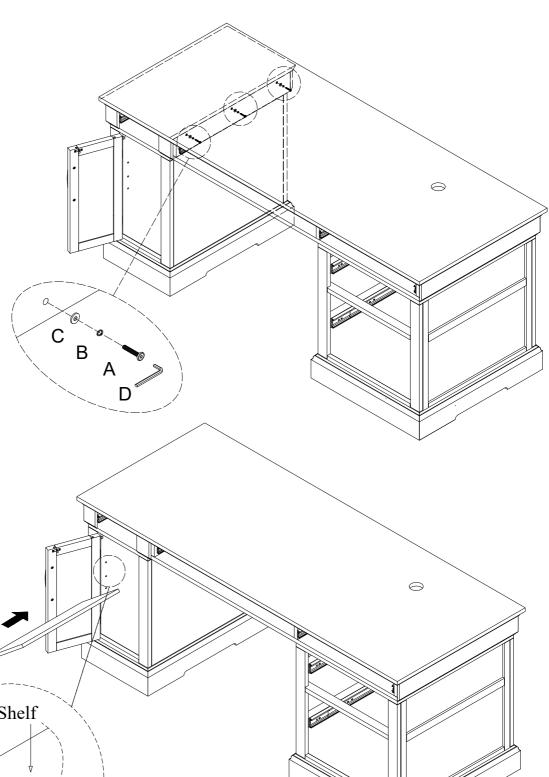


The shelf is adjustable



Item NO.SHO#480/481/482-EFW
SHO#480/481/482-MDR

#### Step 6:

Replace the drawers. Align the drawer rails with the receiving slides. Push drawer in all the way. Gently open and close the drawer to ensure it is seated properly on the slides.

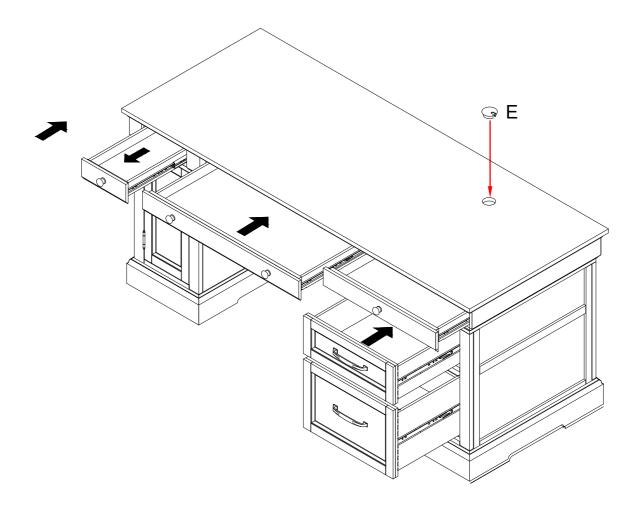



Item NO.SHO#480/481/482-EFW SHO#480/481/482-MDR

#### Step 9:

