


Thank you for purchasing our TV Stand. We have found it helpful to have a second person present in at least one step of the assembly.

TV Stand Assembly Instructions

Lay out all parts on a "non-abrasive" surface to avoid scratching furniture.

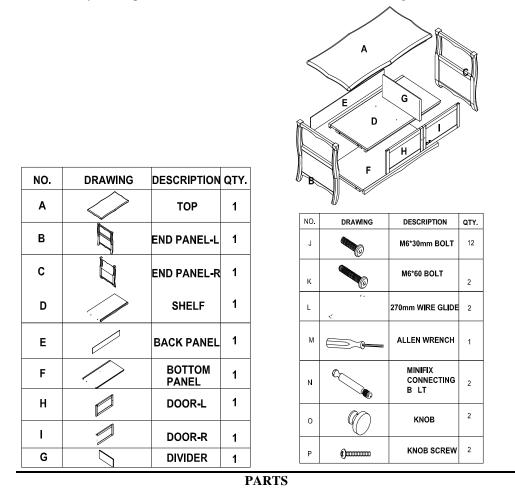

Step 1

Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when first assembling this product.

Step 2


Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface (like the carton or carpet) to prevent damage to the finish.

Step 3, 4 and 5

Note: It will help to have a second person at this time to assist in assembly.

Lay Top (A) upside down. Attach Left End Panel (B) to Top (A) with 2 Hex Bolts M6 x 30mm (J).Attach Shelf (D) to Left End Panel (B) with 2 Hex Bolts M6 x 30MM (J). Slide
Back Panel (E) into groove in Shelf (D) and Left End Panel (B).Note: Stand is upside-down
right panel is on left-hand side.

Attach Right End Panel (C) to Top (A) and Shelf (J) with 4 Hex Bolts M6 x 30mm (J).

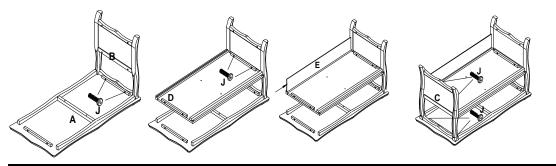


Step 6 and 7


Note: It will help to have a second person at this time to assist in assembly.

Attach Bottom Panel (F) to Left and Right End Assemblies (B + C) using 4 Hex Bolts M6 x 30 (J).

Put 2 Minifix Connecting Bolts (N) into Shelf (D)

Install Doors (H) and (I) with 2 Hex Bolts 6 x 60mm (K).

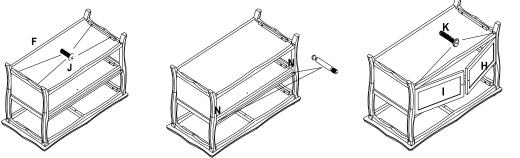

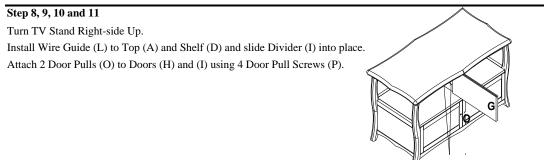

CARE

Clean with mild soap and wipe dry.

L