


Kooper Dining Arm Chair

Model: OP-AWTSAC-KPR-CHAIR

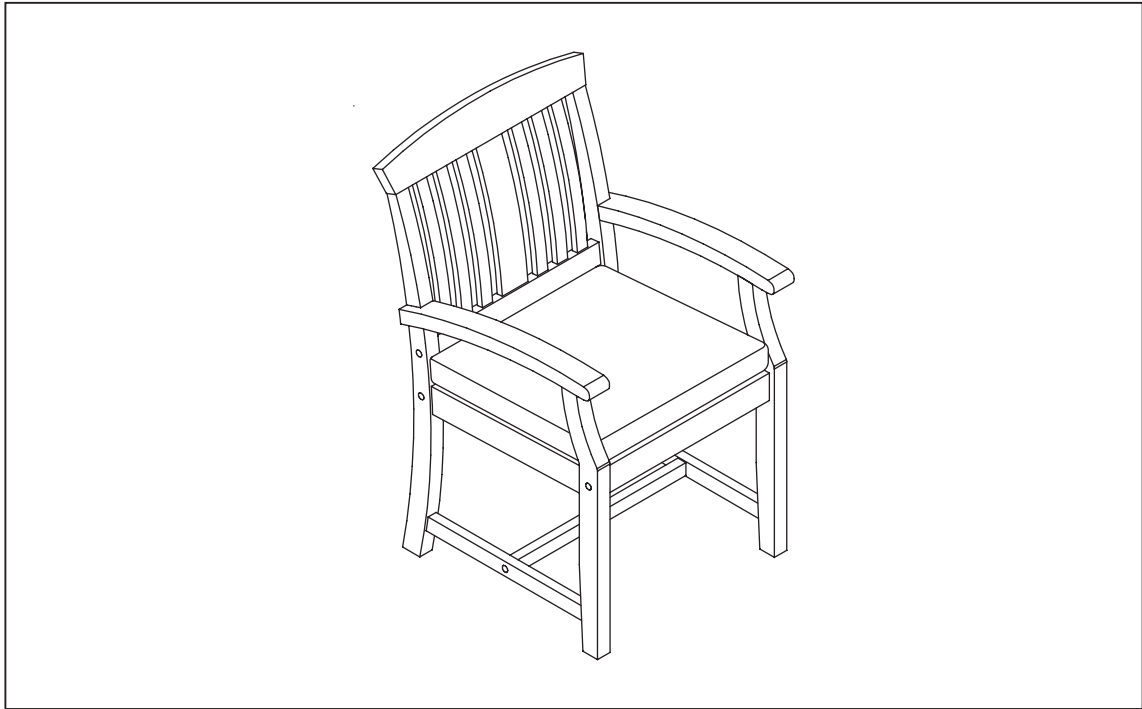









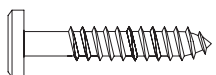
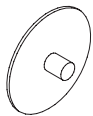

ASSEMBLY INSTRUCTIONS

**IMPORTANT, RETAIN FOR FUTURE REFERENCE.
READ CAREFULLY.**

For assistance with assembly or customer service,
call 1-877-924-2090 (English) Monday-Friday, 8 a.m. to 5 p.m. Mountain
Time, North America. Email: customerservice@rstbrands.com or visit
our website at www.rstbrands.com

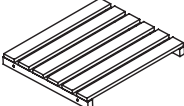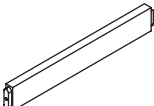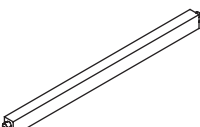


PARTS LIST

NO.	PICTURE	PART DESCRIPTION	QTY.
A		Chair back	1
B		Leg frame	2
C		Chair seat	1
D		Seat cross bar	2
E		Bottom cross bar	1
F		Bolt (M6 x 70)	6
G		Barrel nut	6
H		Screw (M7 x 70)	2
I		Screw (M6 x 40)	4
J		Plastic cap	8
K		Allen wrench	2

Step 1.


ATTACH CROSS BARS TO LEG FRAME

1. Attach seat cross bars (D) to the leg frame (B) using bolts (F), barrel nuts (G), and allen wrenches (K).
2. Attach the bottom cross bar (E) to the bottom of leg frame (B) using bolts (F), barrel nuts (G), and allen wrenches (K).

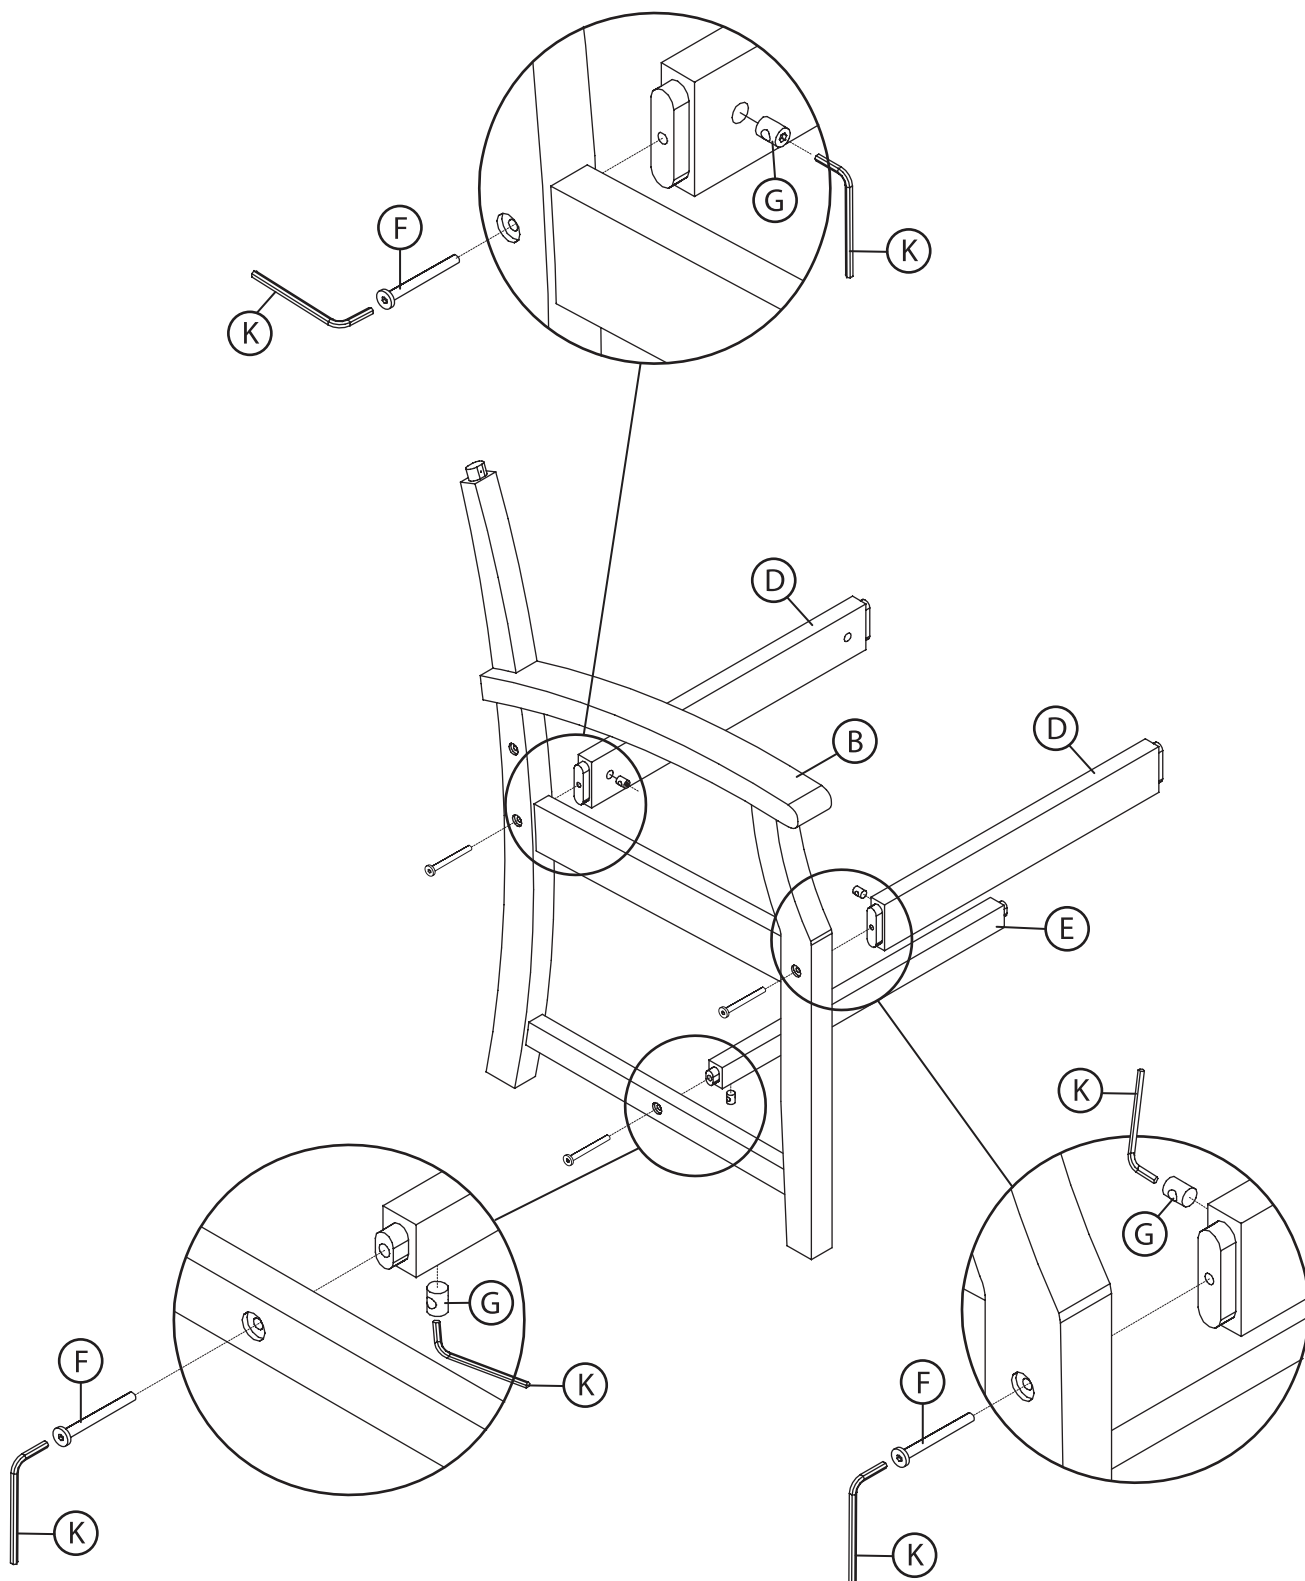




Step 2.

ATTACH REMAINING LEG FRAME TO CROSS BARS- Repeat the process in the same order from step one on the opposite side of the frame.

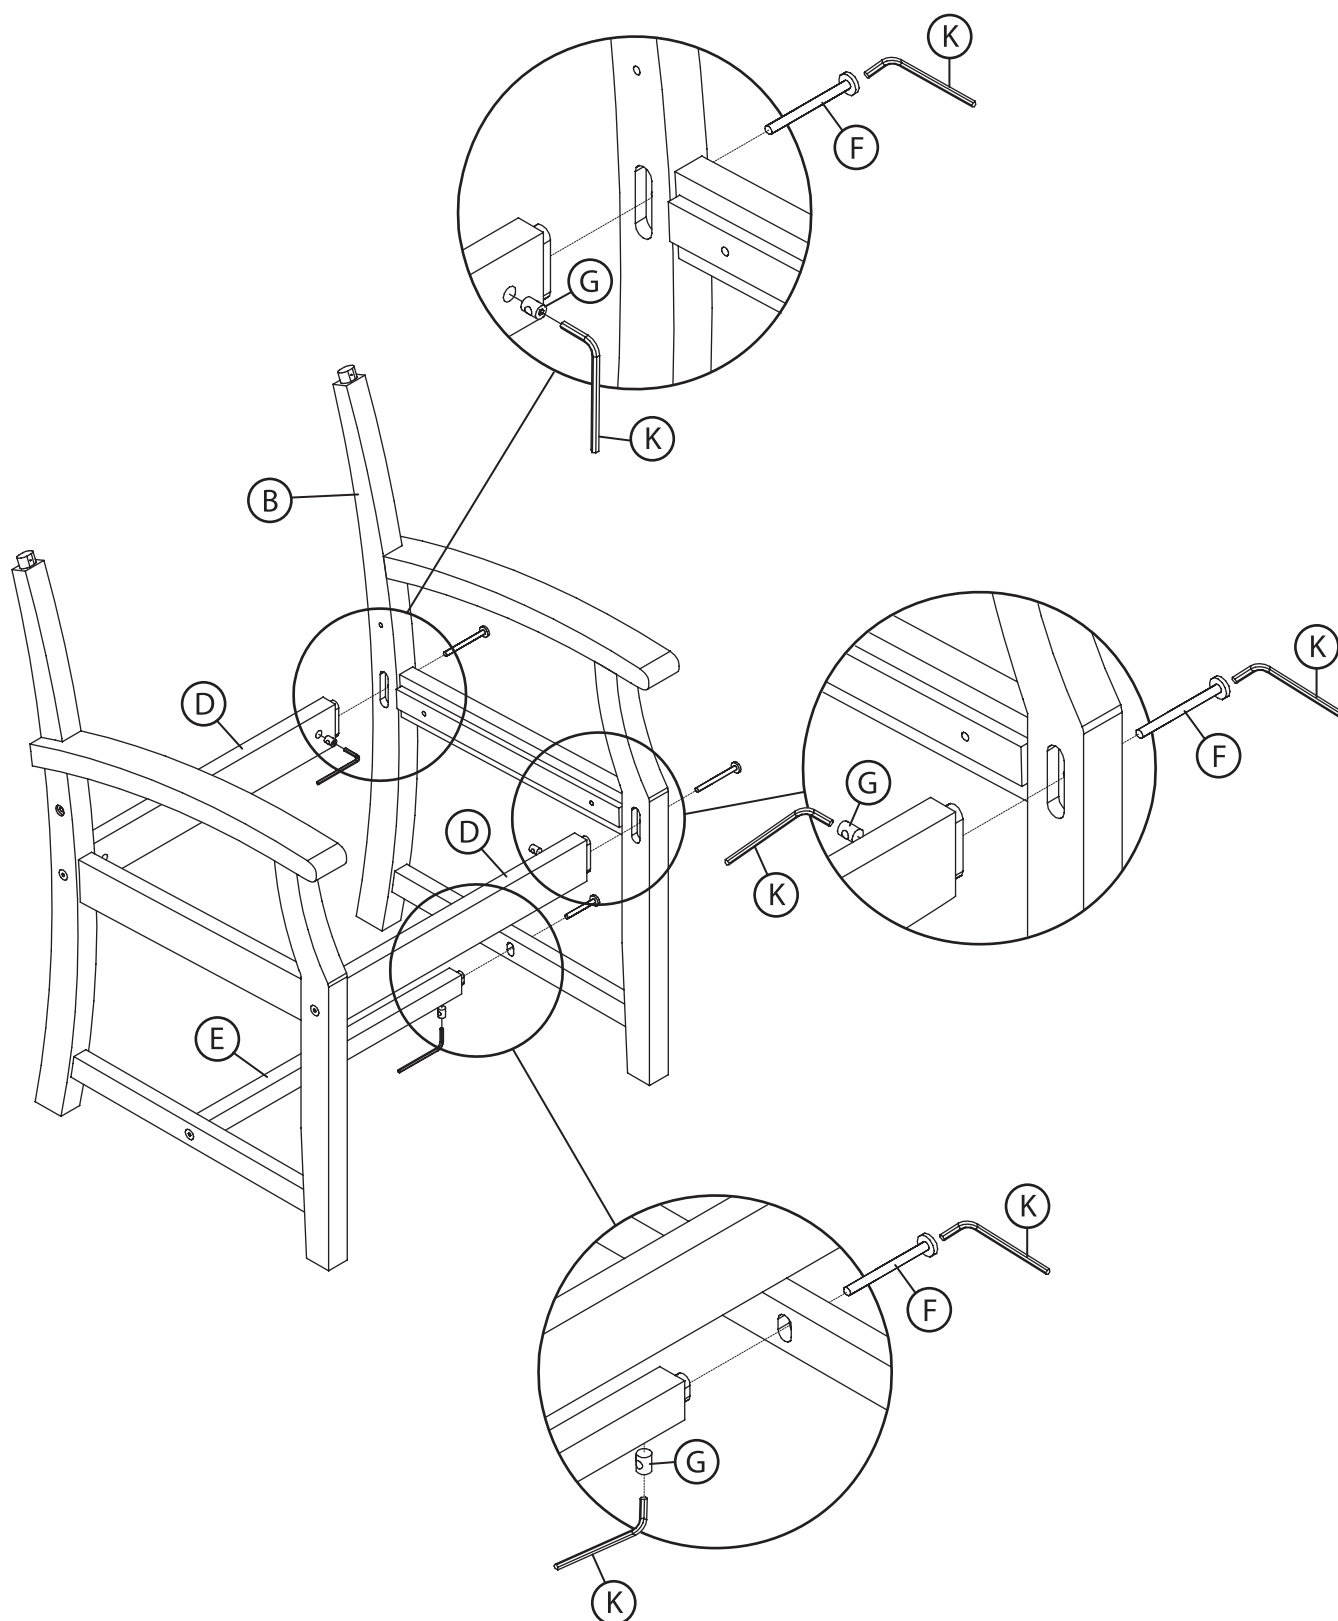




Step 3.

PLACE AND SECURE BACK- Place the chair back (A) into position between the frame legs (B) and secure with the wood screws (H) and allen wrench (K).

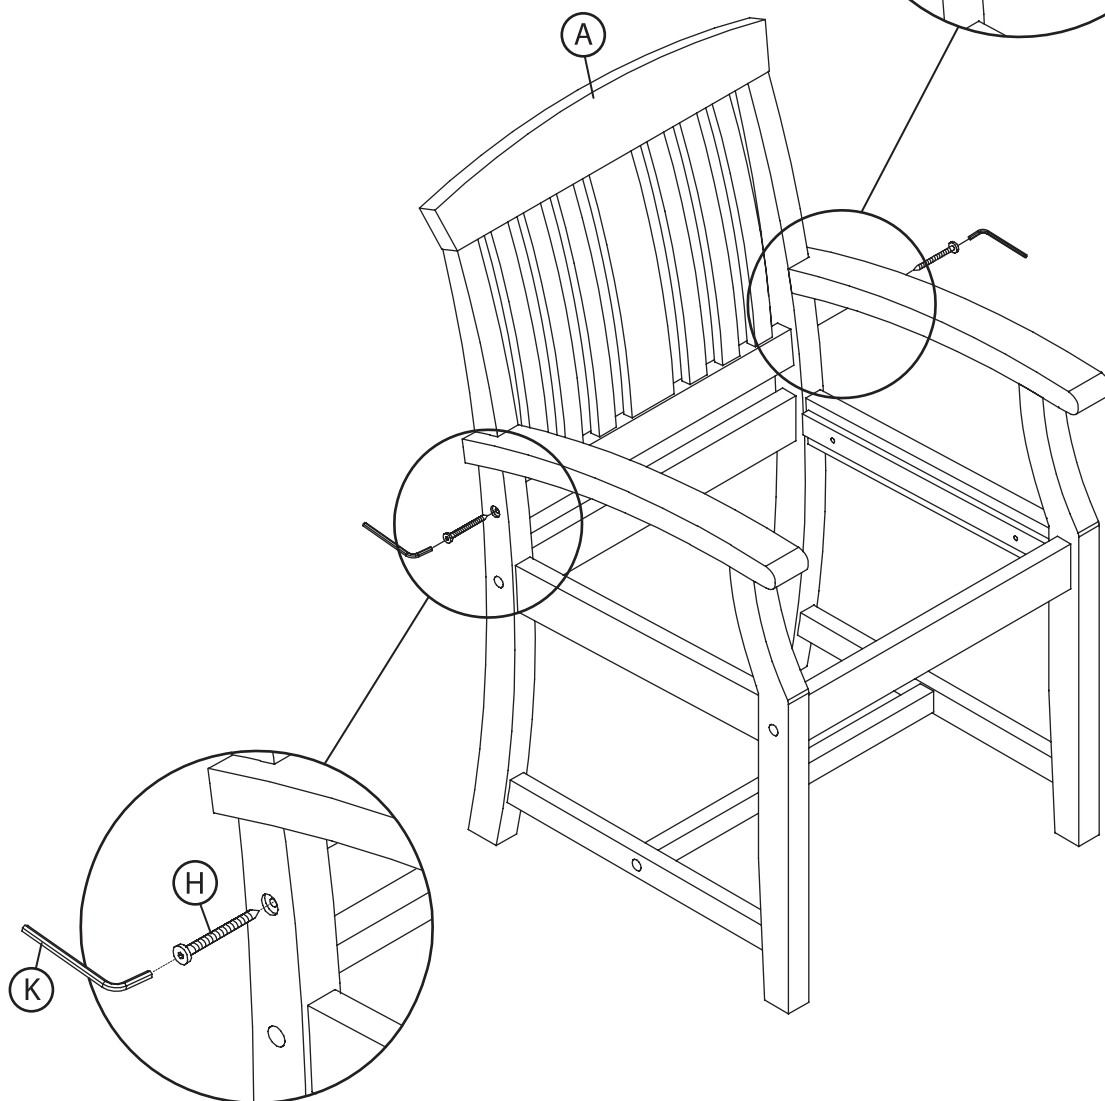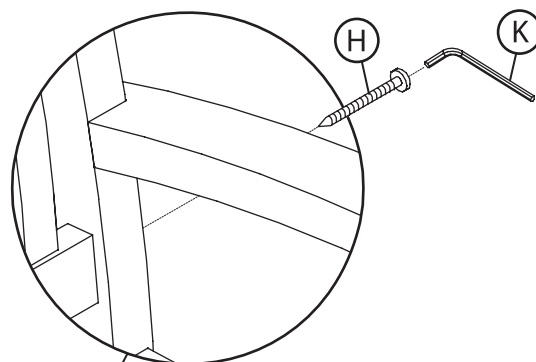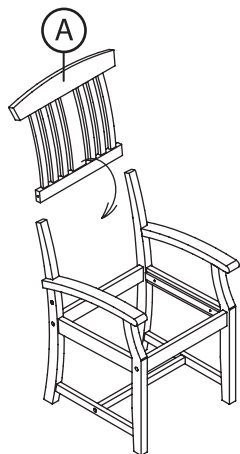


Step 4.

PLACE AND SECURE SEAT- Place seat (C) into position on top of frame legs (B) and secure by using wood screws (I) and allen wrench (K). (Note: Screws will screw into the leg frames from the bottom side of seat (C).)

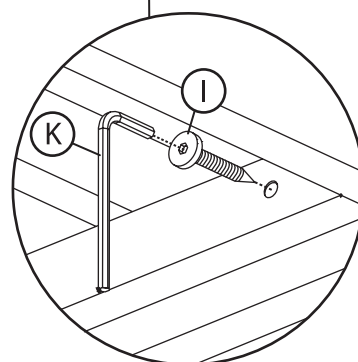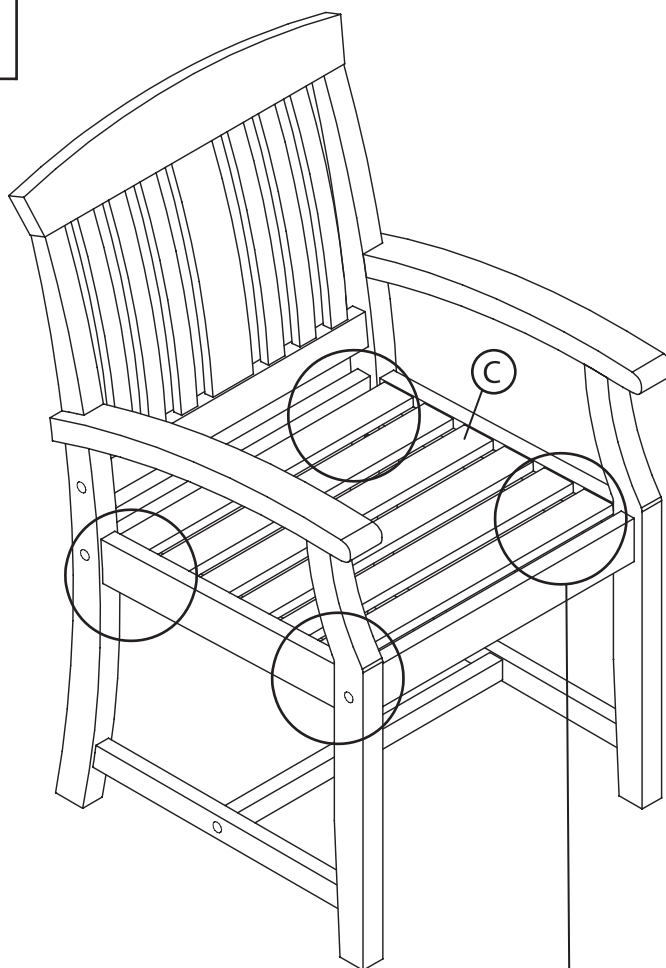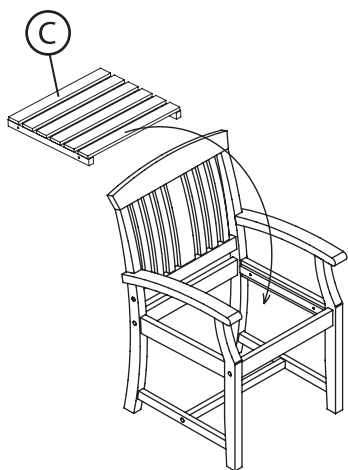


Step 5.

INSERT PLASTIC CAPS INTO BOLT HEADS- Insert plastic caps (J) into exposed bolt heads found on the chair's leg frame (B).

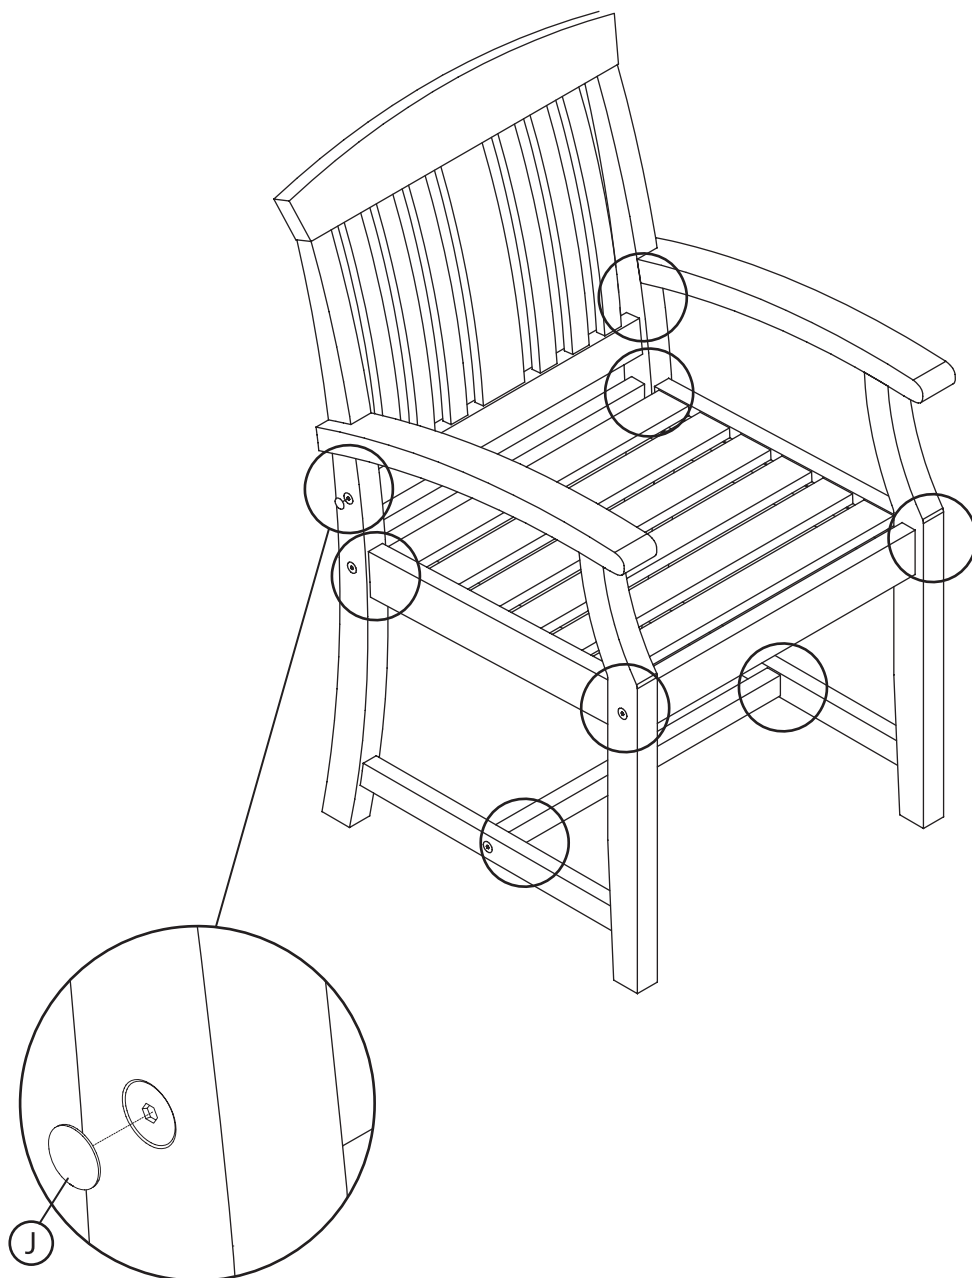


Care and Maintenance

All outdoor furniture is subject to UV rays and weather elements. In order to keep your furniture as long lasting and vibrant as possible, we advise using furniture covers or storing the furniture when not in use. For more information about the materials used to make our furniture please visit www.rstbrands.com/details-landing

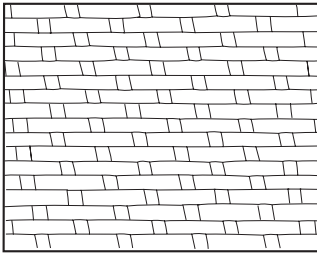


WICKER

Simply washing your wicker with a mild detergent and protecting it as much as possible by covering and or storing it when not in use for long periods of time is sufficient.

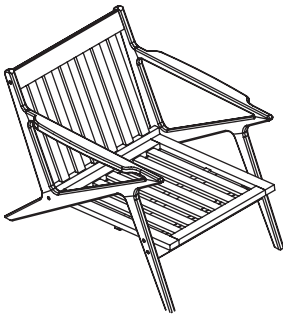


WOOD FRAMES

Make sure all surfaces are protected from heat and liquids. Wipe up spills immediately and do not place furniture next to a heat source such as radiators or fires. All timber surfaces may change color. Spray polishes are best to avoid as they contain silicones which may spoil the surface by building up overtime. Check bolts and screws regularly and tighten when necessary.

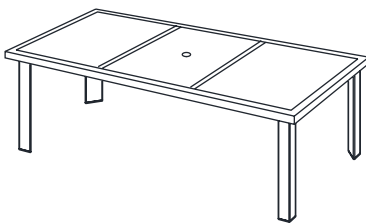

STONE TOPS/TABLE TOPS

Spills should be wiped up quickly to avoid any staining on the surface. Regular cleaning with mild soap and water with a sponge or soft scrub brush is all that is required. Storing or covering your natural stone top when not in use for extended periods of time is recommended.

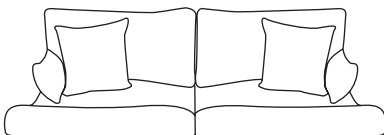

FABRICS

Wipe off spills with a cloth and water. RST Brands uses Sunbrella® fabrics designed to protect and last for several years. Sunbrella fabrics are treated with a proprietary water and stain repellent. If needed to revive fabrics Glen Raven® recommends 303® Fabric Guard™. For more information visit www.303products.com and follow instructions on the container.