# **ASSEMBLY INSTRUCTION**





Sunpan item No: 108105


Sunpan Product Name: **ELLERY COFFEE TABLE** 

Please visit our website  ${\bf www.sunpan.com}$  for more great products .

For assembly questions please call **1-800-787-1019** (or +14167360094) outside North America or email to info@sunpan.com

PARTS LIST  Before you begin, please layout all parts and ensure you have the correct count				
No	DESCRIPTION	Qty	ILLUSTRATION	
Α	Bottom base Frame	1		
В	Top Frame	1		
С	Connecting Pipe	6		
D	Top Marble	1		
E	M6 Washer	33		
F	Flat Head Screw M6X16mm	24		
G	Flat Head Screw M6X25mm	9		
н	Allen Key M4	1		

ASSEMBLY INSTRUCTIONS				
STEP	DESCRIPTION	ILLUSTRATION		
Note	Make sure to attach the parts by matching annotation mentioned on each part.			
1	Attach Bottom Base Frame (A) to Connecting Pipe (C) by using Allen key(H) with Washer(E) &Screw (F)			
2	Attach Top Base Frame (B) in the Connecting Pipe (C)			
	Attach Assemble Frame to Top Frame (C) by using Allen key(H) with Washer(E) & Screw(F)			
4	Attach assembled Base to marble top (C).			

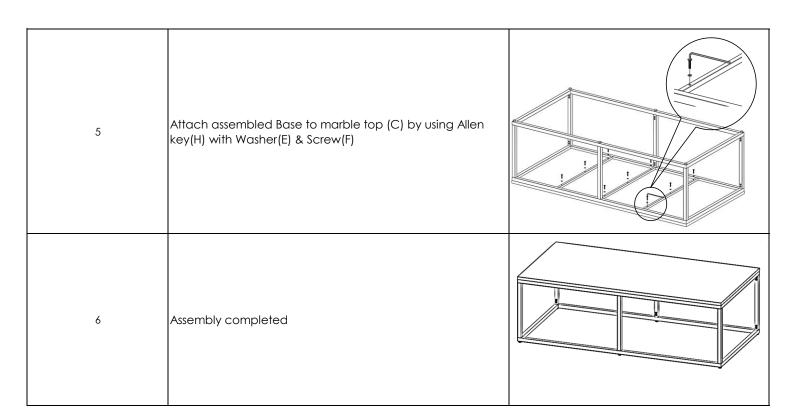

## **ASSEMBLY TIPS:**

#### THERE IS RISK OF TIGHTENING THE SCREWS TOO MUCH AND DAMAGING THE TOP IF A DRILL IS USED

- -please checks parts and hardware before assembling. Follow each instruction step by step.
- -place a protective pad or piece of cardboard on the floor while assembling your item on top of it.
- -remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.
- -please follow instructions in the sequence as numbered to assure fast/easy assembly.

## **WARNING:**

- -don't attempt to repair or modify parts that are broken or defective if you find a broken part please contact.
- -the retailer where you purchased it for replacement.
- -keep all hardware parts out of the reach of children.

# **FURNITURE CARE:**

Following these few basis steps will help to ensure that you enjoy your furniture for a long time:

- -do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.
- -excessive exposure to sunlight may cause fading.
- -excessive temperature and humidity or cold may cause cracking or splitting.
- -dust with a clean, damp, lint free cloth.
- -use a damp cloth with water or mild detergent to clean all surfaces.
- do not use chemicals or paint thinner which will fade the surface.
- -place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.