 
 
 




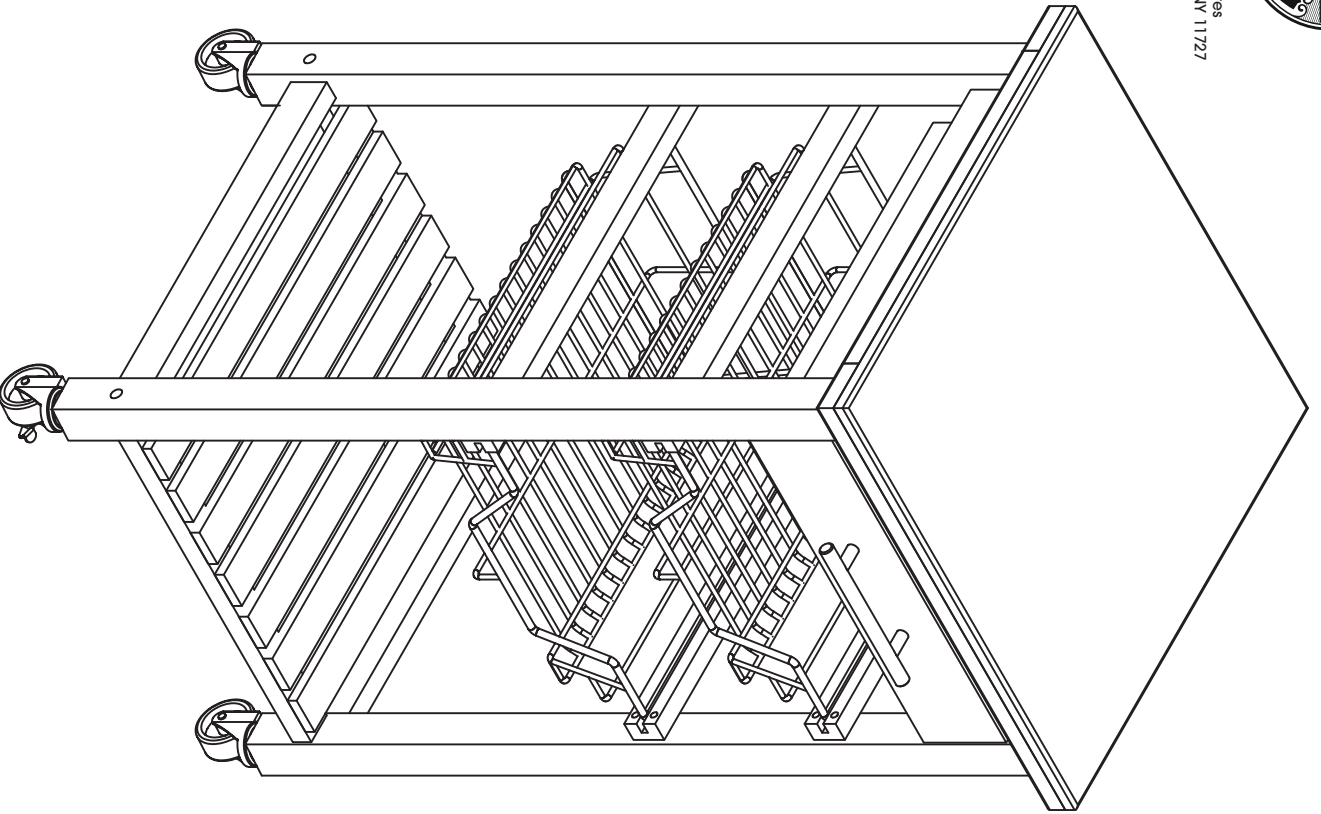 


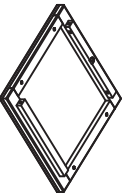

 

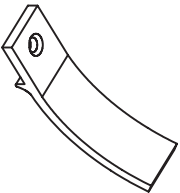 




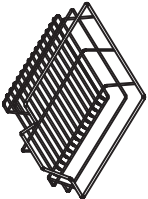


Corner Housewares
 3665 A Rt 112 Coram, NY 11727
 866-304-3936




A		1pcs
B		1pcs
C		1pcs
D		1pcs
E		4pcs
F-I		1pcs
J		2pcs
1		8pcs
2		8pcs
3		12pcs
4		8pcs
5		1pcs
6		2pcs
7		1pcs
8		1pcs
9		2pcs
10		2pcs


www.cornerhousewares.com
 contact@cornerhousewares.com

PRODUCT WARRANTY
 Corner Housewares offers replacement of items and parts with factory defects within one year of dated sales receipt. Customers may call toll free: (866) 304-3936

 
Step 1

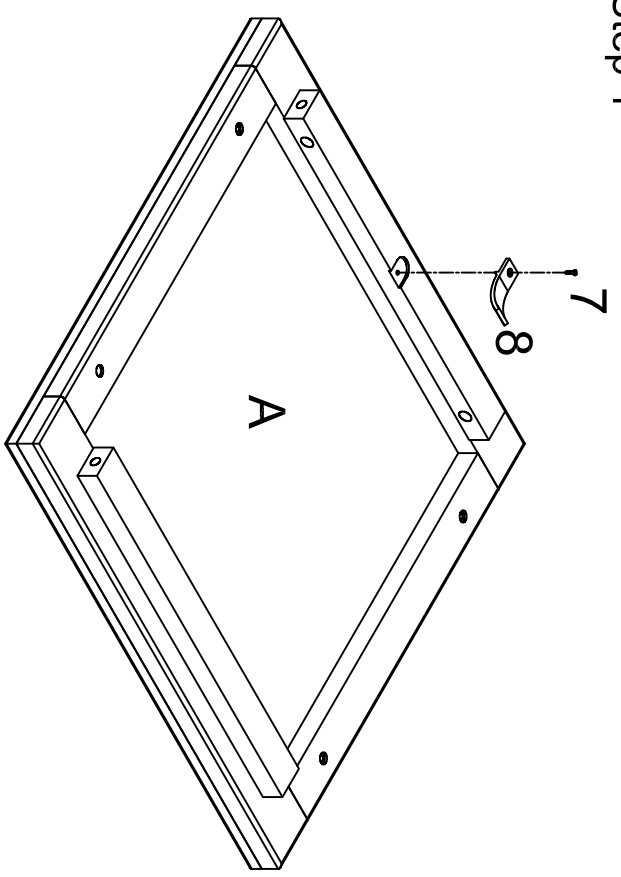

 
Step 3

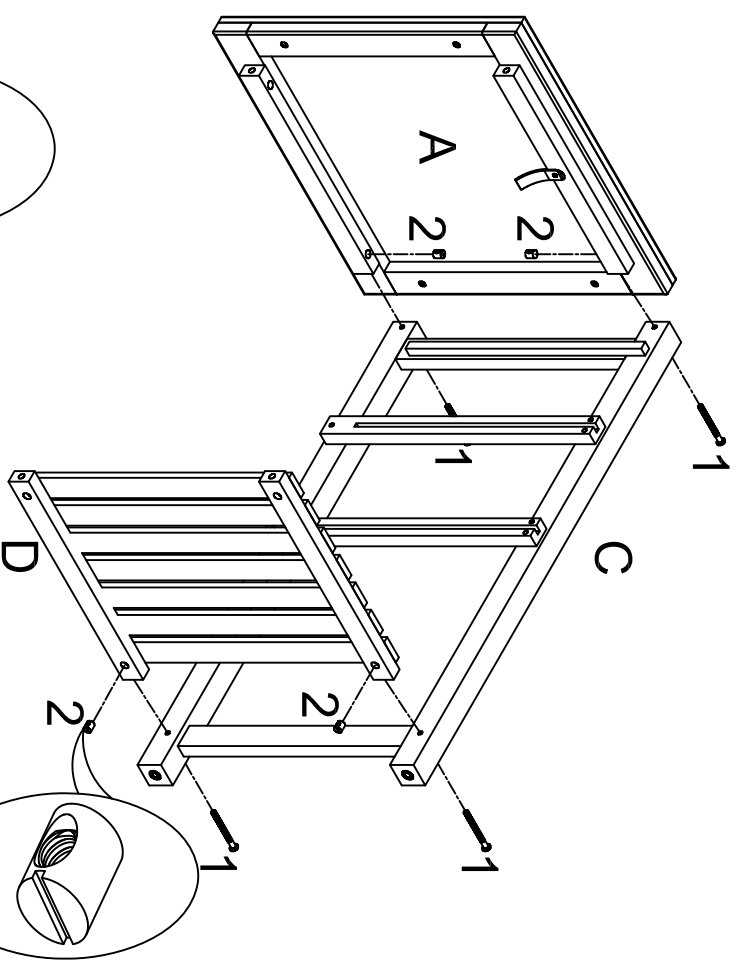

 
Step 2

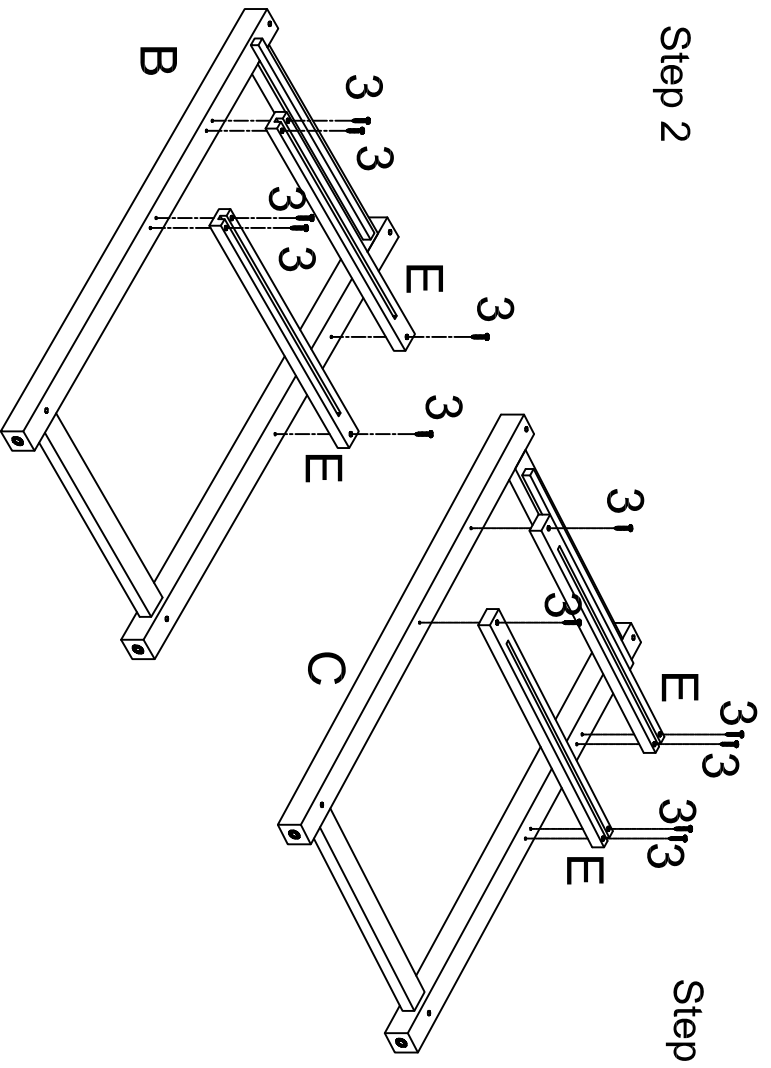

 
Step 4

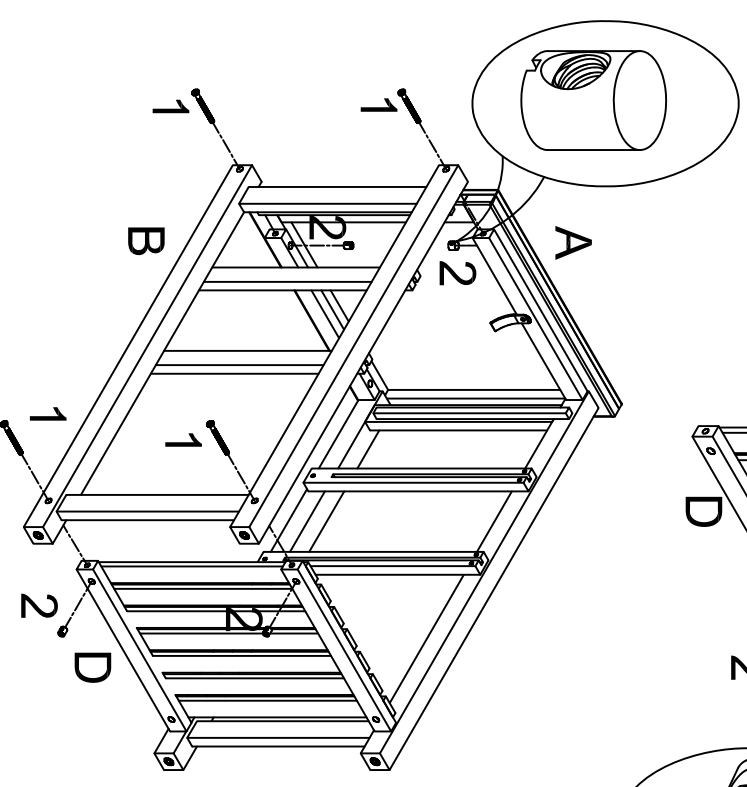

 
Step 5

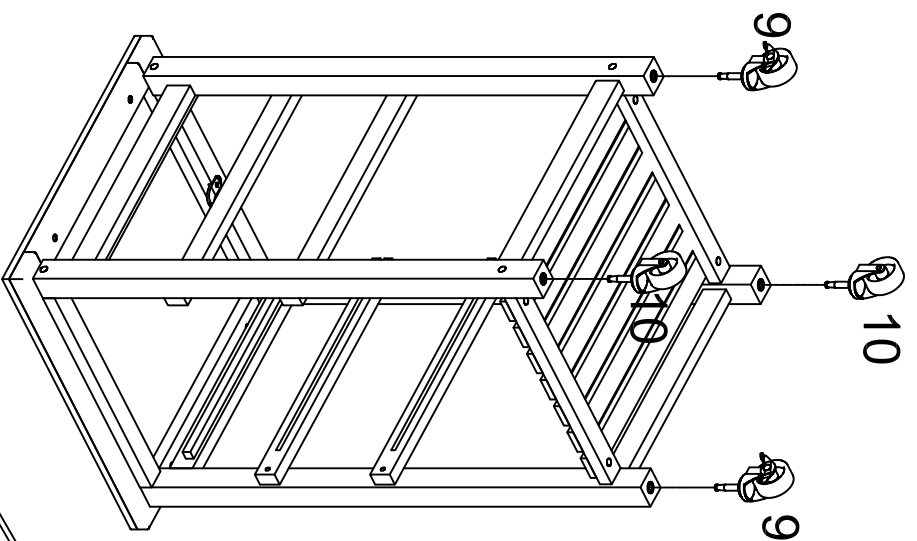

 Step 7

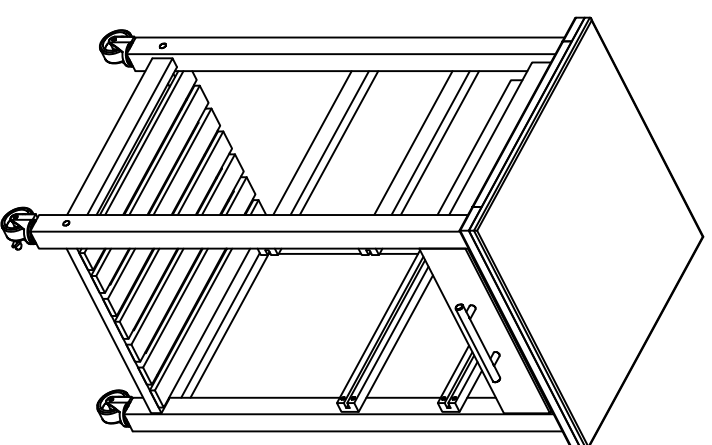

 Step 6

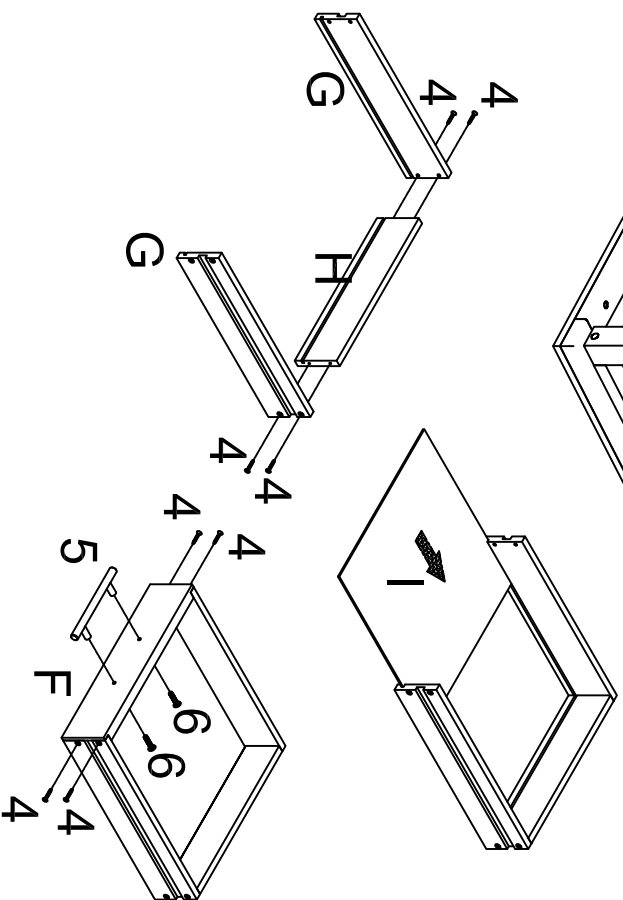

Step 8

