



INSTALLATION INSTRUCTIONS



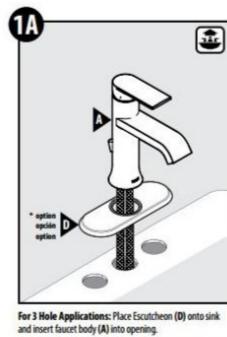


For single hole installations, place deck gasket (F) on the underside of the faucet body (A). Insert faucet into sink




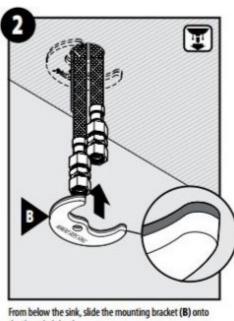



the threaded shank.

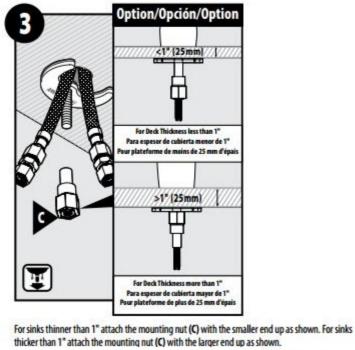



thicker than 1" attach the mounting nut (C) with the larger end up as shown.

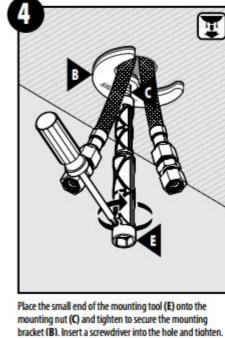

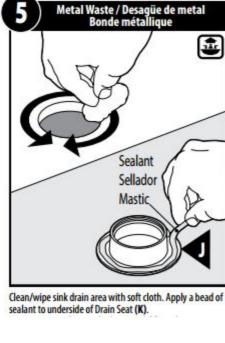

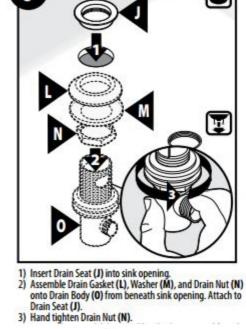

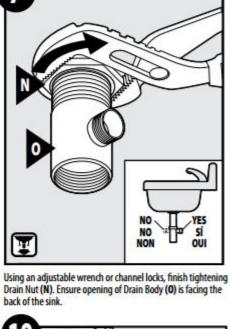


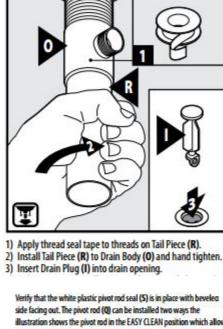



Thread Seal Tape Cinta para sellar roscas


illustration shows the pivot rod in the EASY CLEAN position which allo the plug to be pulled out for deaning. The other option (Illustrated in the inset) shows the pivot rod installed in the VANDAL PROOF position.

The end of the pivot rod (Q) is inserted into the opening at the bottom

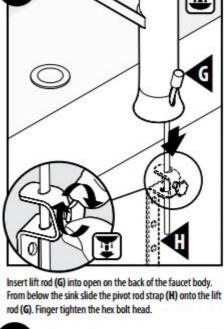

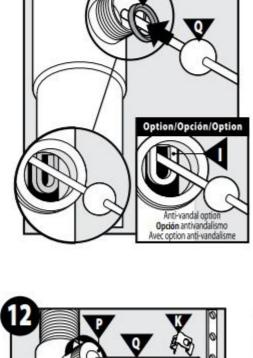


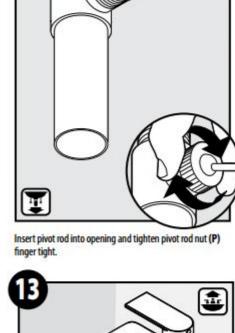

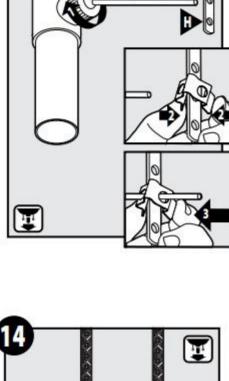

the positioning and let go to lock.

Slide one side of the pivot rod dip (K) onto the pivot rod (Q). Position the pivot rod strap (H) so the pivot rod (Q) passes through one side of the clip (K), through the closet hole on the pivot rod strap (H) and through the hole on the other side of the clip (K). Squeeze the ends of the clip (K) to adjust

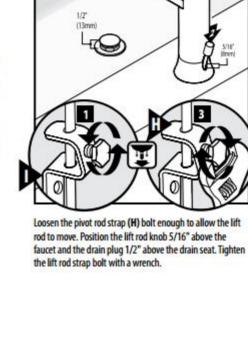

Hot / Caliente / Chaud Reduced Flow


Turn off water supply.


Flujo Irregular Apague el abastecimiento de agua.


Hot Caliente Chaud T Turn on the water supply line valves on and check for leaks.

Cold Frio Froid

Débit Irrégulier Arrêtez l'approvisionnement en eau. 1

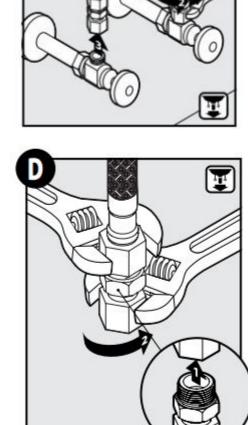

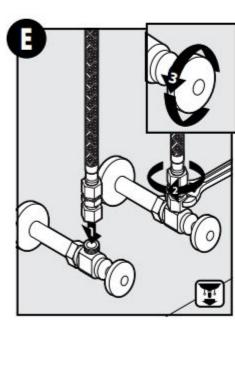

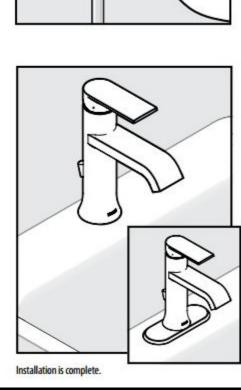

This General diagram and installation instructions are not intended for any specific model, but is presented as a general guideline for Installations!