


# Loveseat Assembly Instructions

Your loveseat comes packaged in one box.

**DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.**

Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching the finish.

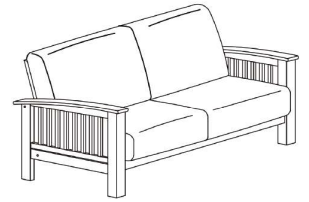


## Parts List

**A** 4 x Wood Buttons




**B** 1 x Left Arm

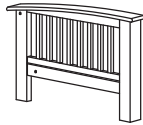


**C** 1 x Front Rail



**D** 1 x Right Arm

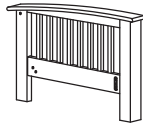


**E** 1 x Back Frame

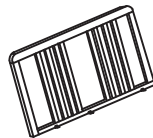


**F** 1 x Seat Frame



 **G** 2 x Seat Cushions



**H** 2 x Back Cushions

 

**I** 2 x Wood Dowels



M8 x 30mm


## Hardware List

 **J** 4 x Bolts



M6 x 50mm

**K** 6 x Screws



M4 x 25mm

**L** 1 x Long Hex Key



M4 x 100mm

 
**M** 1 x Short Hex Key



M5 x 70mm


Not included

**N** 1 x Philips Screwdriver  
OR Power Screwdriver  
(low torque)




## Assembly

### Step 1

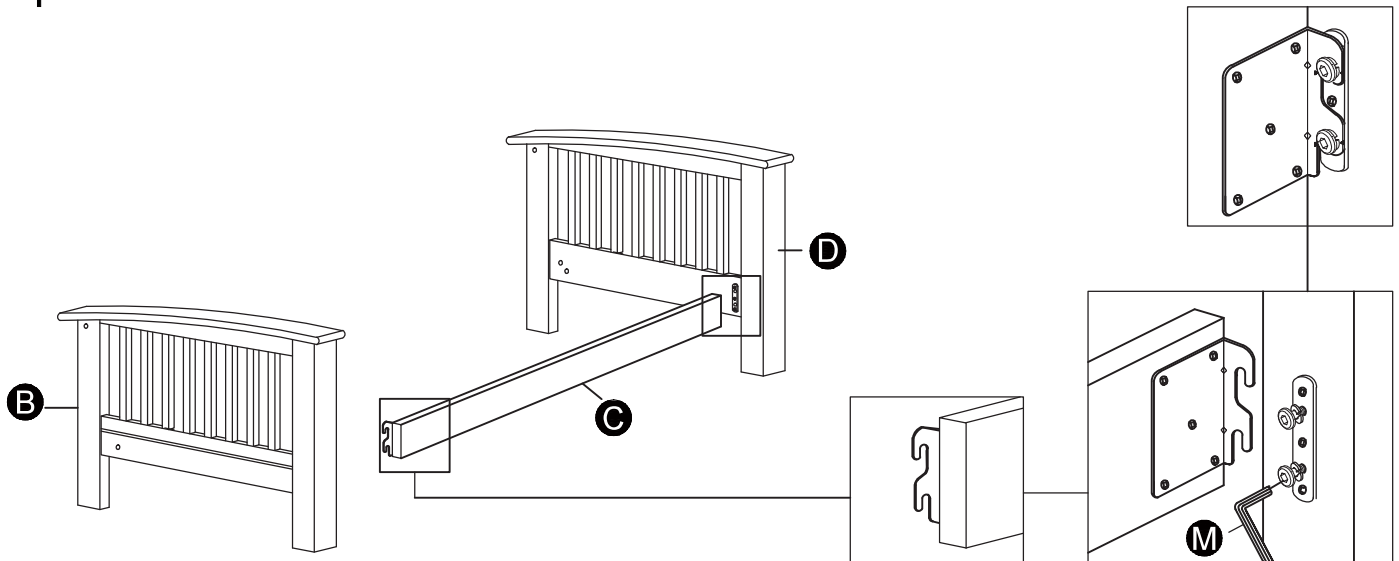


# Assembly


## Step 2

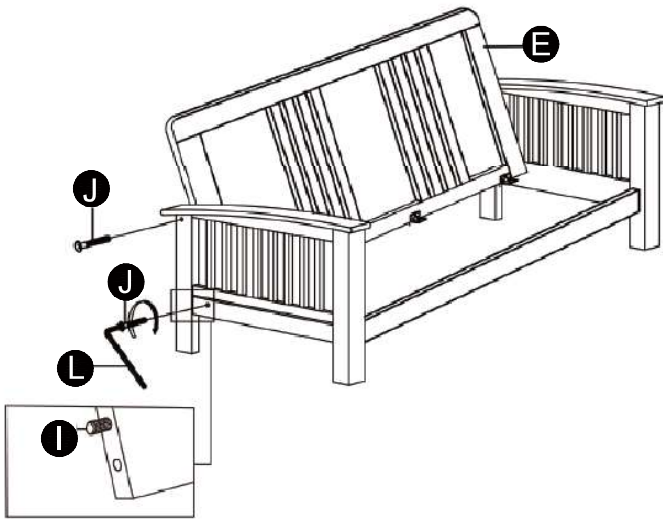


## Step 3

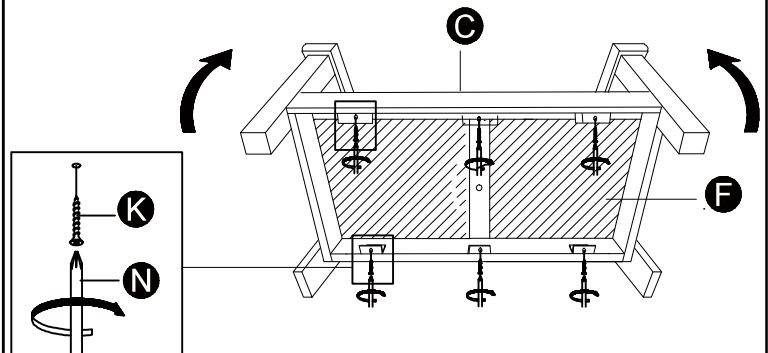

## Step 4

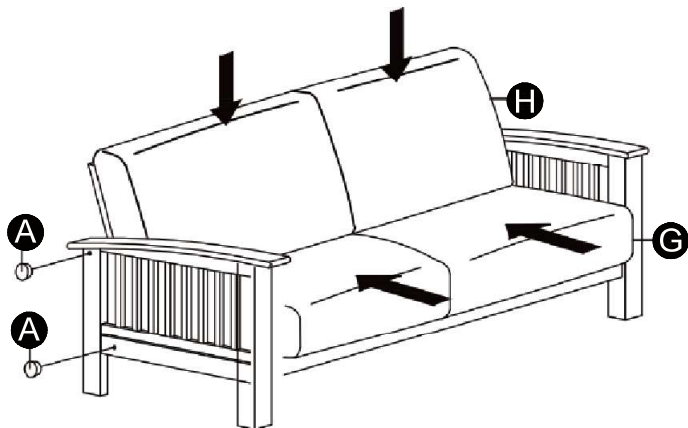

## Step 5

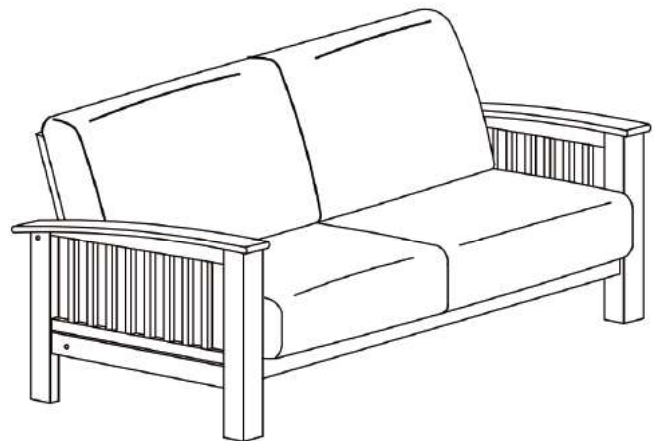

Your loveseat style may differ from images. Care for your furniture by periodically tightening all bolts using the included hex key.

**One Year Warranty:** The furniture is warranted against defects in workmanship and materials. Items covered would be seam slippage, frame structural integrity, fit and finish of parts. Items not covered would be product abused by the user, normal wear and tear, stains or discoloration due to use, damage in any transportation. Softening of foam is considered normal wear and tear and is not covered by warranty. Warranty is for PARTS ONLY and does not include transportation and labor costs associated with any warranty claim.

**CAUTION:** Tighten all components securely before use. Failure to do so may result in personal injury.

Customer Support: 866-238-0531  
Mon-Fri 8:00am - 4:30pm CST  
customerservice@furniturequestions.com