Clarkson / Wright / Mooney

Medium Storage Cabinet

Model # AXCLAR-15-RNAB



brooklyn + max





It's time to register your product warranty.

It's quick and easy. And you'll be happy you did.



- ✓ Activate your 1-year warranty
- ✓ Automatic entry to win a \$500 gift certificate
- ✓ Earn instant rewards and save



simpli-home.com/product-registration

Review your product and collect rewards!

Thank you for your purchase! We hope you enjoy it. We'd love your feedback. Please share a review and get instant rewards!







simpli-home.com/product-review



Share photos and get your cash back!



Send us images or share them on social and qualify for instant rewards. You may even receive store credit on your entire purchase!







simpli-home.com/share-images

For Fastest Customer Service:



- 1. Open your phone's camera.
- 2. Point your phone's camera at the QR code to scan.
- 3. Click on the pop up.
- 4. You'll be taken to our customer service page.
- 5. Fill the form with your order information and issue.
- 6. Submit form.
- 7. A customer service associate will contact you.

Other ways to contact us...



Email Us

customer service@simpli-home.com



Visit Us

Visit our site directly at www.simpli-home.com



Call Us

1-866-518-0120 Monday to Friday 9am to 5pm EST

*If you've purchased from a retailer and you wish to return the product, please contact the retailer directly.

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Safety Information

CAUTION: Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help.

If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

Care & Maintenance

This furniture is designed for indoor use.

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.

Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.


Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.

Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger but lose moisture more slowly than other finishes.

To help protect your wood furniture, take these steps:

- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly
- Don't over-humidify; that can damage wood by causing it to expand and contract
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp
- If you can avoid it, don't put furniture near heating vents; if you can't, keep the item 3 to 4 inches away from the wall, giving the heat and air space to circulate
- Dust with soft dry cloth
- Do not use liquid or aerosol products
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry
- Do not use abrasive cleaners

Model # AXCLAR-15-RNAB **Pre-Assembly Information Part Description** В TOP LEFT SIDE RIGHT SIDE QTY 1 QTY 1 QTY 1 D MIDDLE FRAME **BOTTOM SHELF** DIVIDER QTY 1 QTY 2 QTY 1 G Н Warning Label SHELF TOP PANEL **BOTTOM PANEL** QTY 2 QTY 1 QTY 1

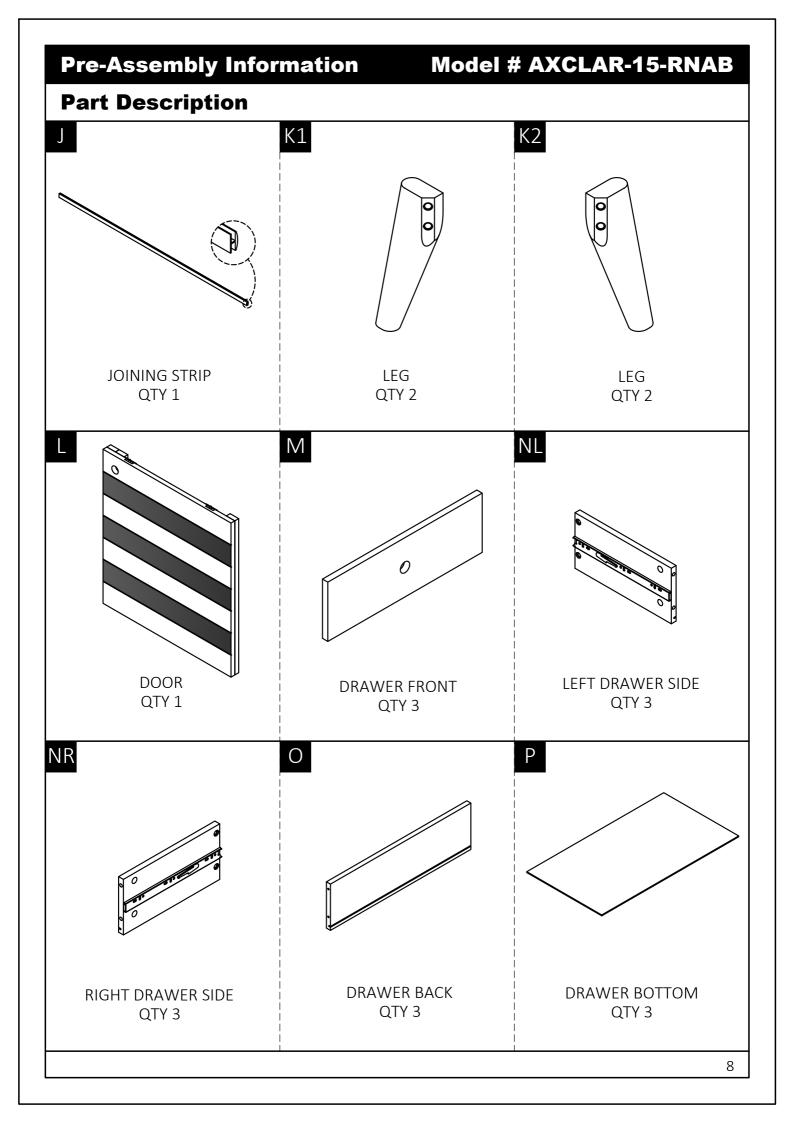

Pre-Assembly Information

Model # AXCLAR-15-RNAB

Hardware Description



ALLEN KEY SCREW M6 X 30mm **QTY 38**



WOOD DOWEL Ø8 X 30mm **QTY 18**



CAM LOCK PIN CAM LOCK QTY 14 SETS



PHILLIPS SCREW ROUND HEAD M4 X 15mm **QTY 24**

5



SHELF SUPPORT **QTY 12**

6



ALLEN KEY BOLT M6 x 60 mm QTY8



LOCK WASHER Ø10 / Ø6 x 1.5 mm QTY8

8




LOCK WASHER Ø16 / Ø6 x 1 mm QTY8



ALLEN KEY QTY 1

10

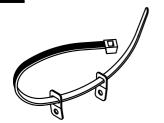


a. M4 X 25mm - QTY 2 (1 is extra)

b. M4 X 15mm - QTY 1

M4 X 25mm - QTY 1


FURNITURE TIP OVER RESTRAINT QTY 1 SET

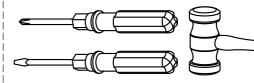


Required -Flathead screwdriver Phillips screwdriver Rubber mallet


Not Included

Components - Key Diagram

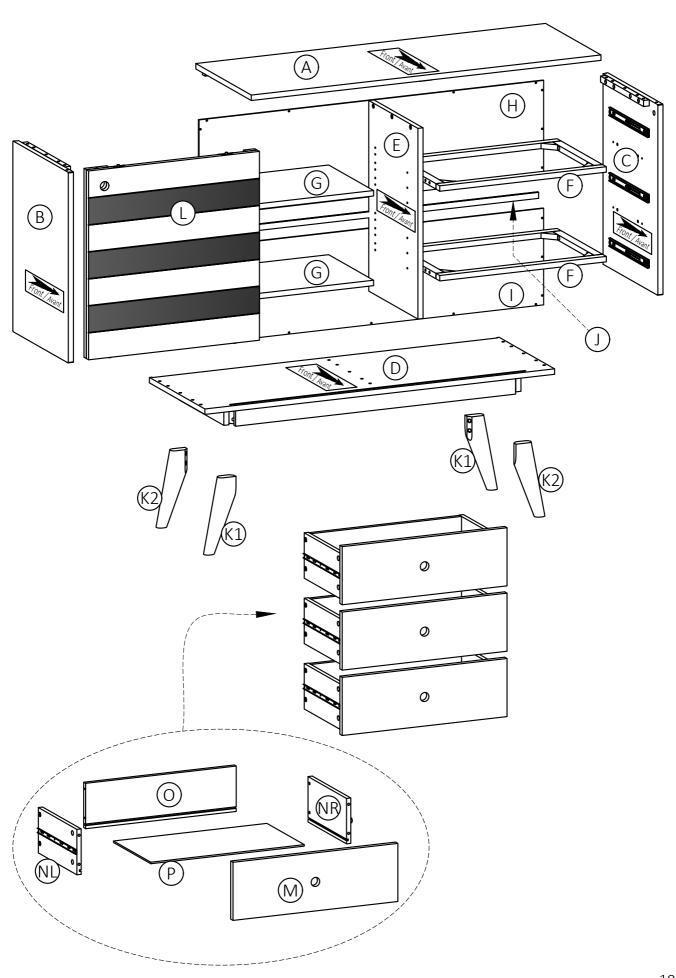

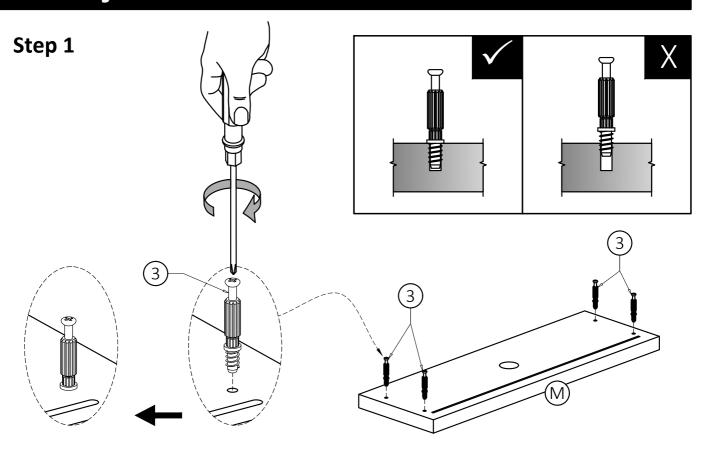


- 1. Attach four Cam Lock Pins (3) into pre-drilled holes on back of Drawer Front (M).
- 2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.

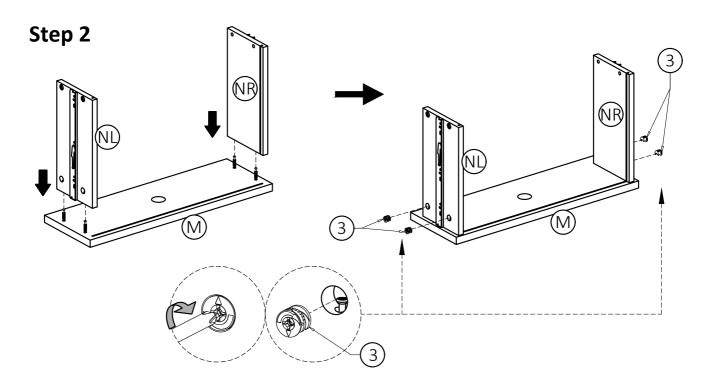


- 1. Align Cam Lock Pins with guide holes and attach Drawer Sides(NL), (NR) to Drawer Front (M).
- 2. Insert two Cam Locks (3) into guide holes on each Drawer Side(NL), (NR).
- 3. Use Phillips screwdriver to secure Cam Locks. Do not over-tighten.

Model # AXCLAR-15-RNAB

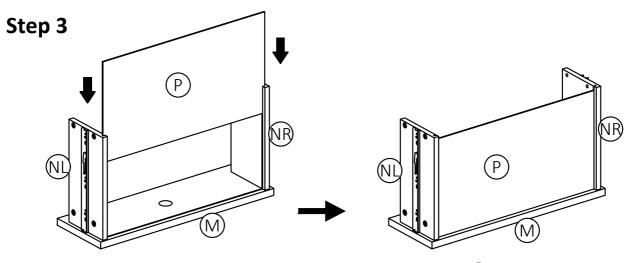



1. Slide Drawer Bottom P firmly into slots on Drawer Sides (NL), (NR) and Drawer Front (M).

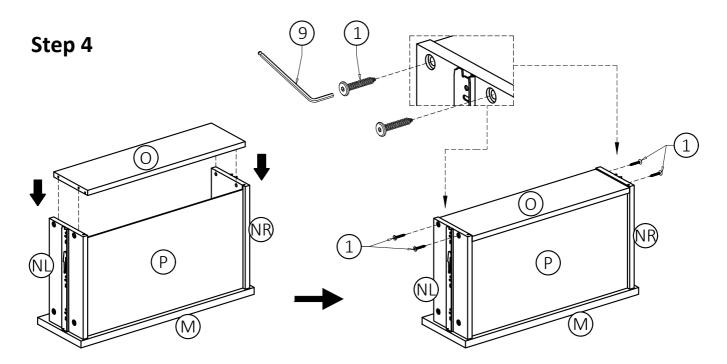


- 1. Align Drawer Back (O) with Drawer Bottom (P) and press firmly into slot.
- 2. Attach Drawer Back using two Allen Key Screws 1 through drilled holes on each Drawer Side (NL), (NR).
- 3. Use Allen Key (9) to tighten Screws. Do not over-tighten


Repeat Step 1-4 for the rest drawers.

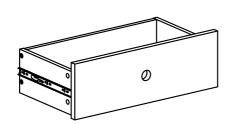

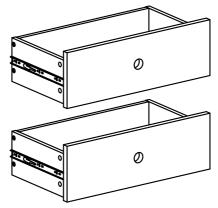


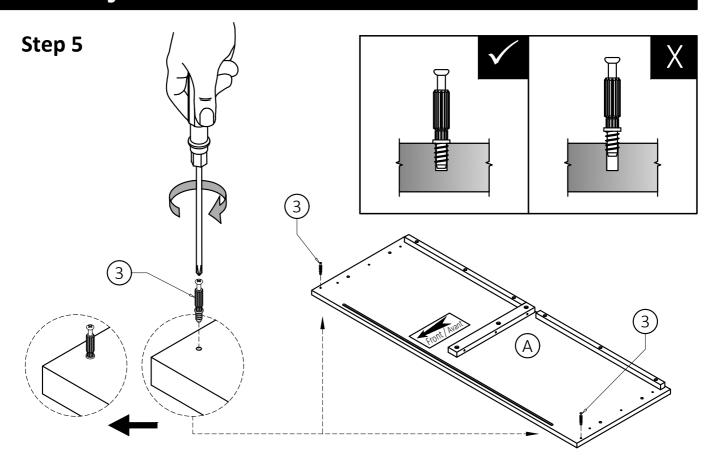

- 1. Attach two Cam Lock Pins (3) into pre-drilled holes on Top (A).
- 2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.

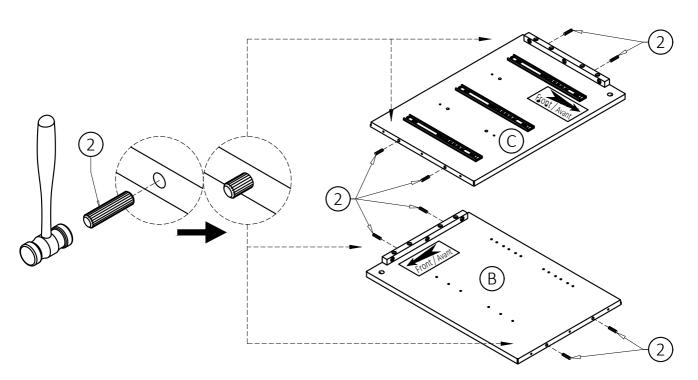


- 3. Insert four Dowels 2 into guide holes on each part C, D.
- 4. Use rubber mallet to tap Dowels 2 into bottom of holes securely. 1/2 length of Dowels should be exposed.

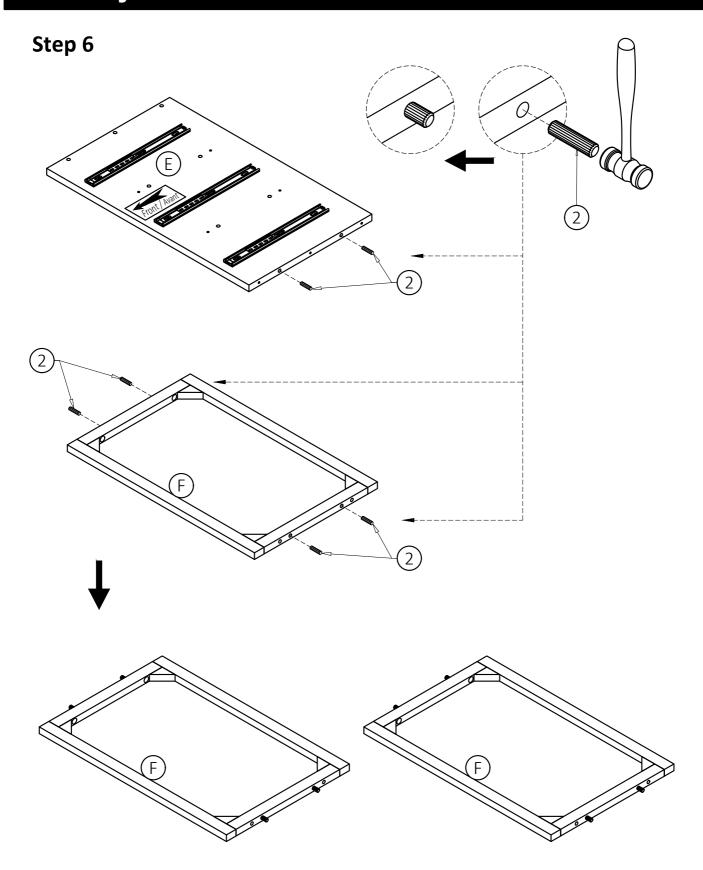

- 1. Insert two Dowels 2 into guide holes on part E
- 2. Insert four Dowels 2 into guide holes on each part F.
- 3. Use rubber mallet to tap Dowels 2 into bottom of holes securely. 1/2 length of Dowels should be exposed.


Model # AXCLAR-15-RNAB

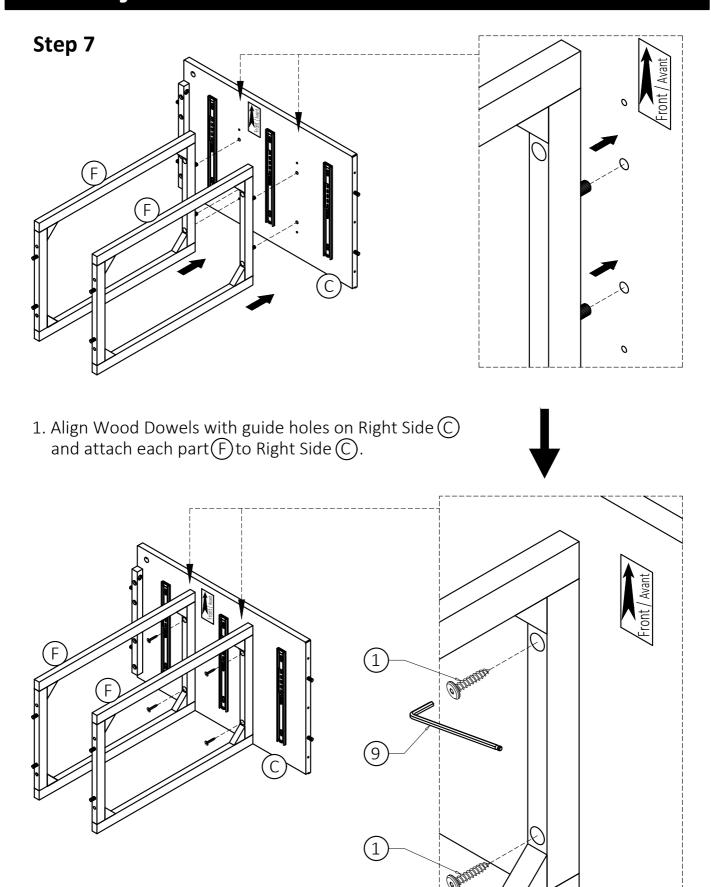


3. Use Allen Key 9 to tighten Screws and Bolts. Do not over-tighten.

2. Use two Allen Key Screws ① to attach each part F) through guide holes to pre-drilled holes of Right Side ①.


Model # AXCLAR-15-RNAB

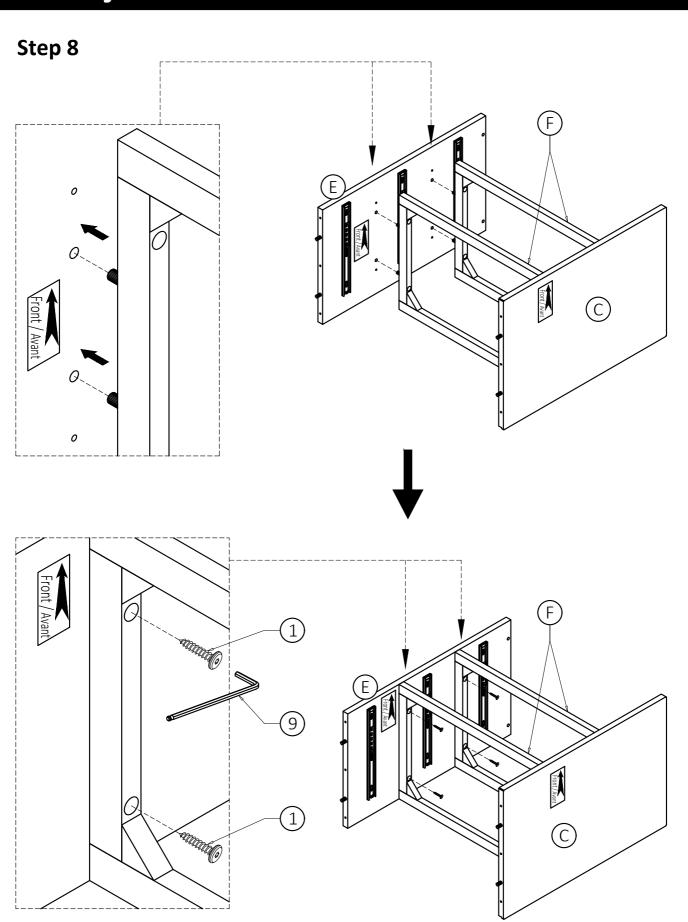

1. Repeat Step 7 for Centre Divider (E).

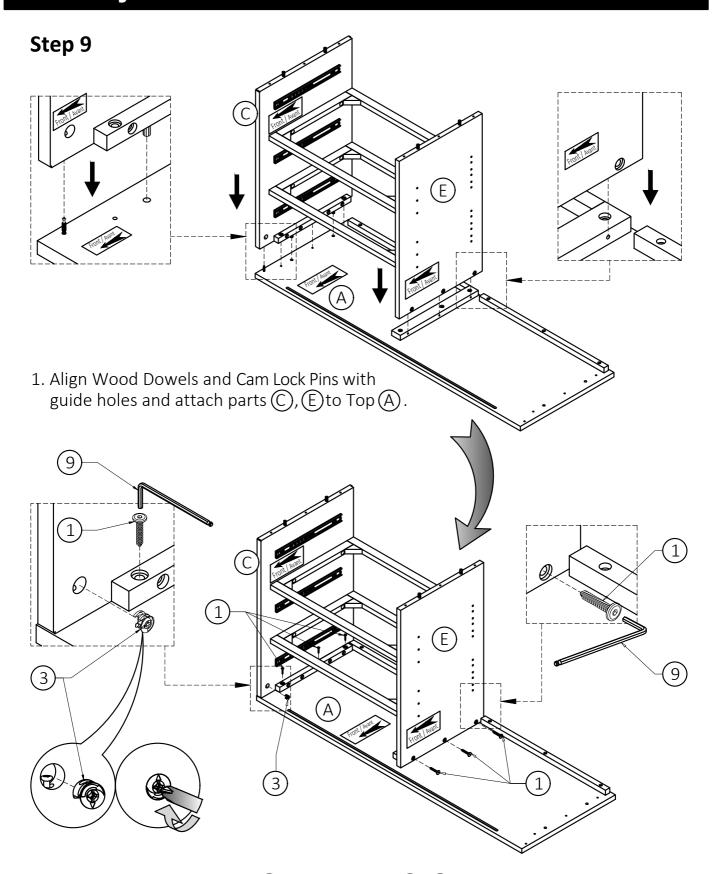


- 2. Use three Allen Key Screws 1 to attach parts C, E through guide holes to pre-drilled holes of Top A.
- 3. Use Allen Key 9 to tighten Screws. Do not over-tighten.
- 4. Insert one Cam Lock (3) into guide hole on Side (C).
- 5. Use Phillips screwdriver to secure Cam Locks.

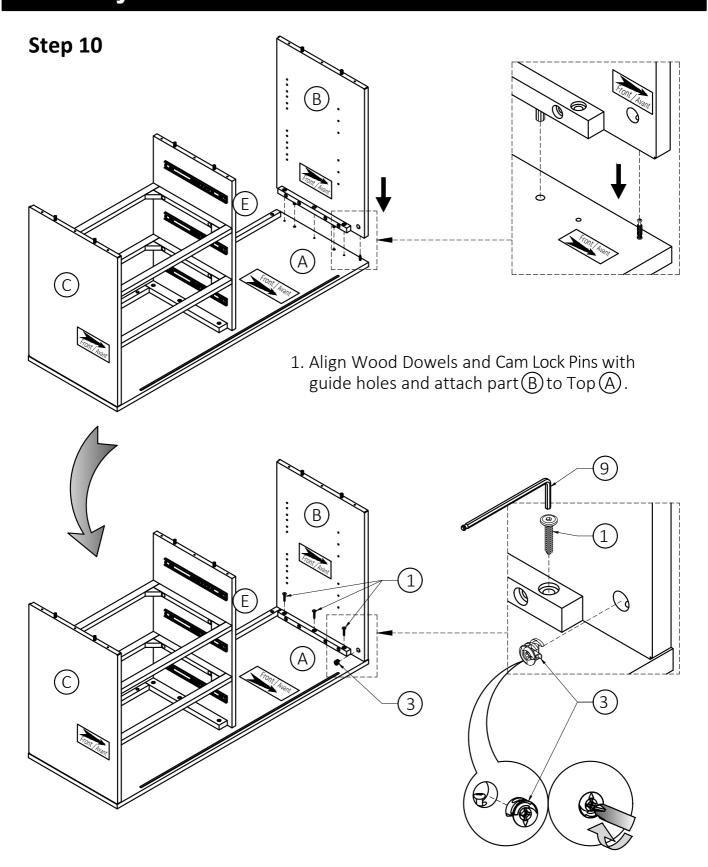



- 2. Use three Allen Key Screws 1 to attach part B through guide holes to pre-drilled holes of Top A.
- 3. Use Allen Key 9 to tighten Screws. Do not over-tighten.
- 4. Insert one Cam Lock (3) into guide hole on Side (B).
- 5. Use Phillips screwdriver to secure Cam Locks.


Step 11

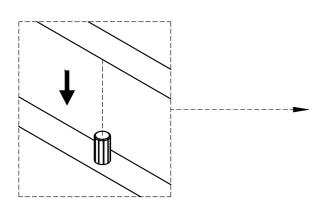

1. Align Wood Dowels with guide holes on Bottom Shelf (D) and attach parts (B), (C), (E) to Bottom Shelf (D).

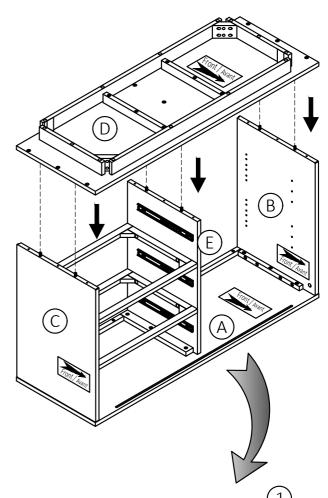


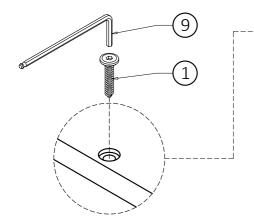

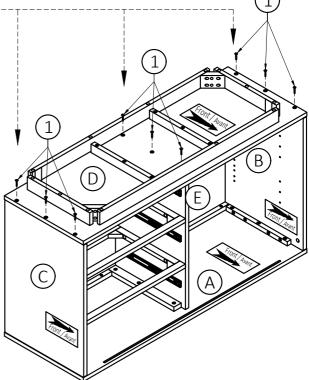


- 2. Use nine Allen Key Screws 1 to attach Bottom Shelf D through guide holes to pre-drilled holes of parts B, C, E.
- 3. Use Allen Key (9) to tighten Screws and Bolts. Do not over-tighten.

Step 12

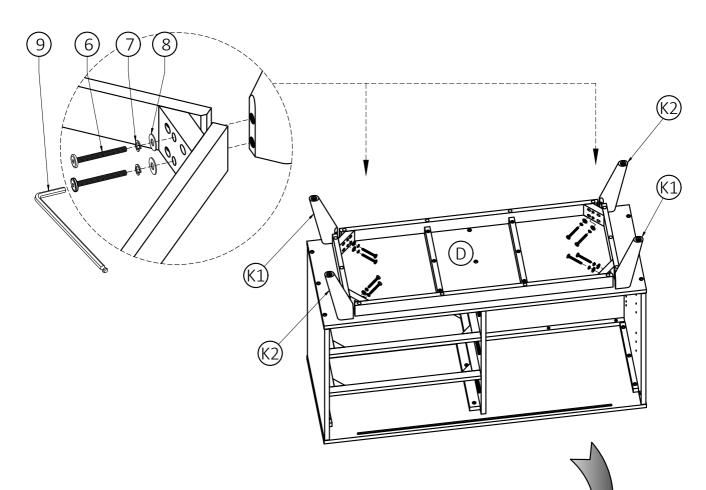


1. Attach Legs (1), (2) to Bottom Shelf (D) using eight Allen Key Bolts (6), eight Lock Washers (7) and eight Washers (8) through guide holes.


2. Use Allen Key (9) to tighten Bolts. Do not over-tighten.

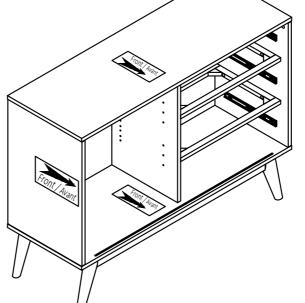

Model # AXCLAR-15-RNAB

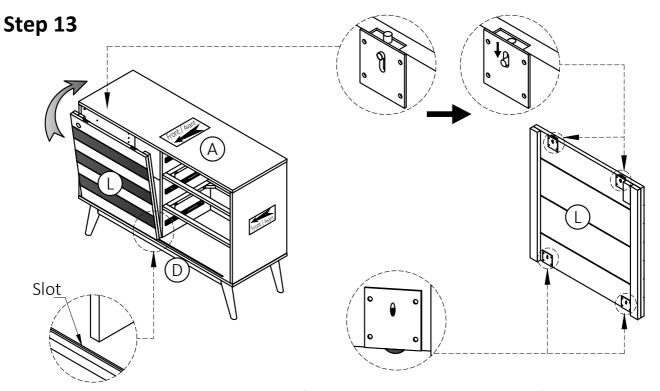


- 1. Slide the wheels on bottom of Door (L) to the slot on Bottom Shelf (D).
- 2. Pull down the pins on top of door then place the door to be parallel with cabinet side post. Afterward release the pins. The pins will be inserted into the slot underneath of Top (A).

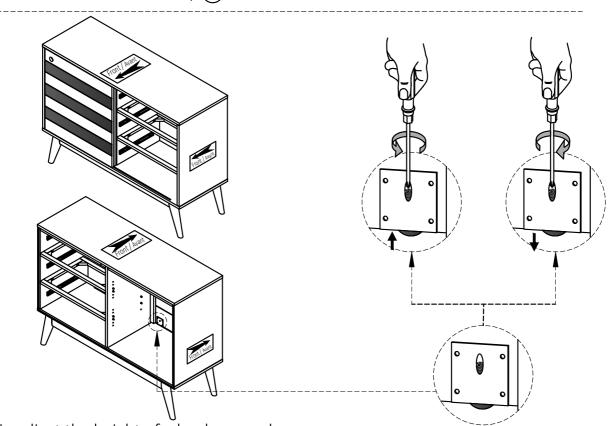


3. To adjust the height of wheels up or down.

Use the Phillips screwdrive to rotate the screw on the wheels (Rotating clockwise will adjust the wheels higher, rotating counter clockwise will adjust the wheels lower).

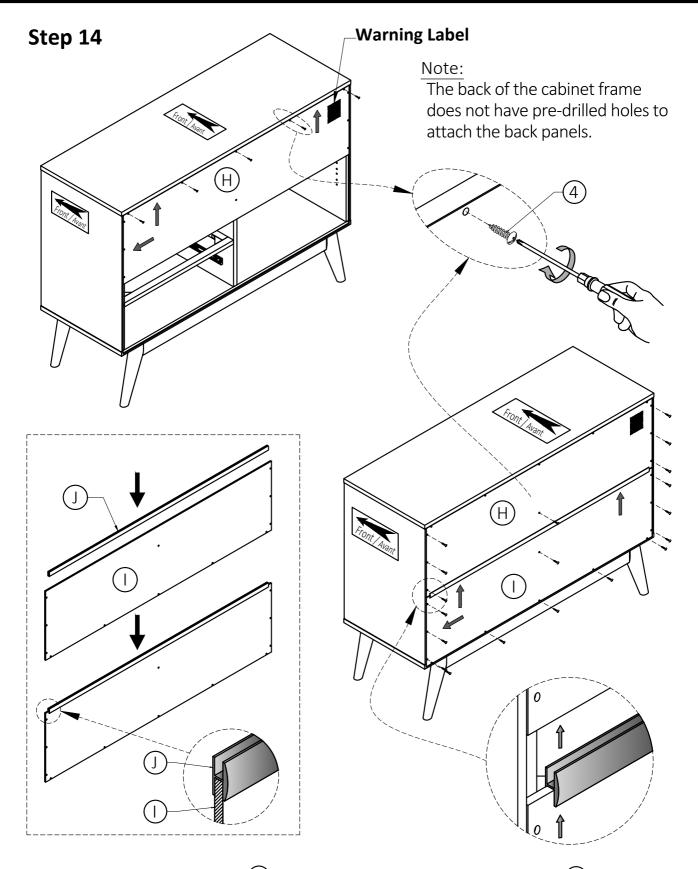


- 1. Attach the Top Back Panel (H) to back frame by using Phillips Screws (4). Only 1st top row of screws (five screws) to be screwed in advance.
- 2. Insert the Bottom Back Panel () into the slot of Plastic Joining Strip ().
- 3. Insert the entire set of Step 2 into bottom edge of Top Back Panel (H) and attach both panels (H), (I) with screws (4).

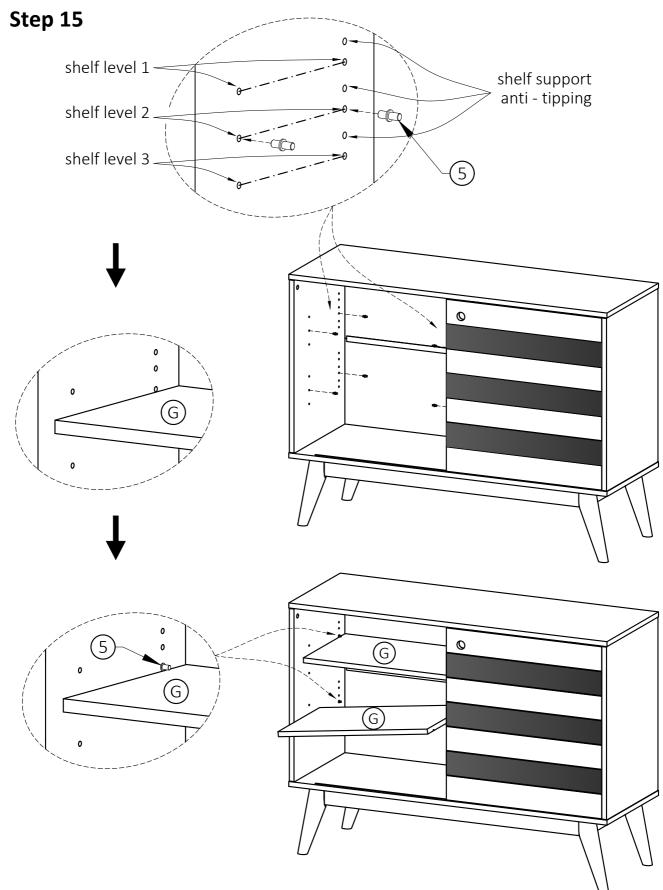

- 1. Use four Shelf Supports 5 for each Cabinet Shelf 6 in desired location.
- 2. Two Shelf Supports 5 may be used on back top of each Cabinet Shelf 6 as a tipping restraint.

Model # AXCLAR-15-RNAB

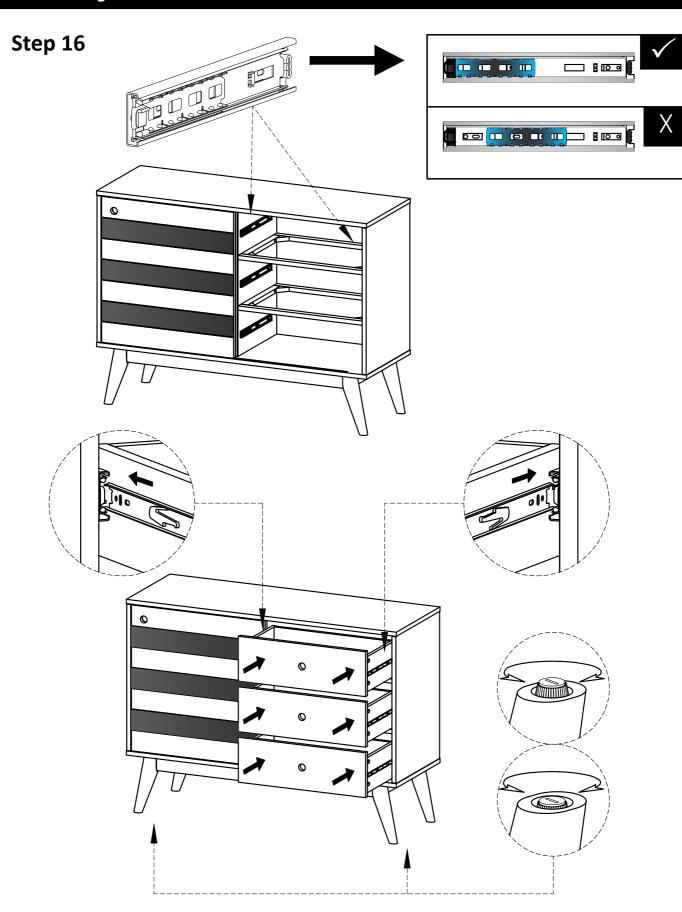

1. Insert assembled drawers into glides on assembled cabinet.


Note: Levelers on bottom of legs can be adjusted if floor is uneven.

Furniture Tip Over Restraint Assembly




WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

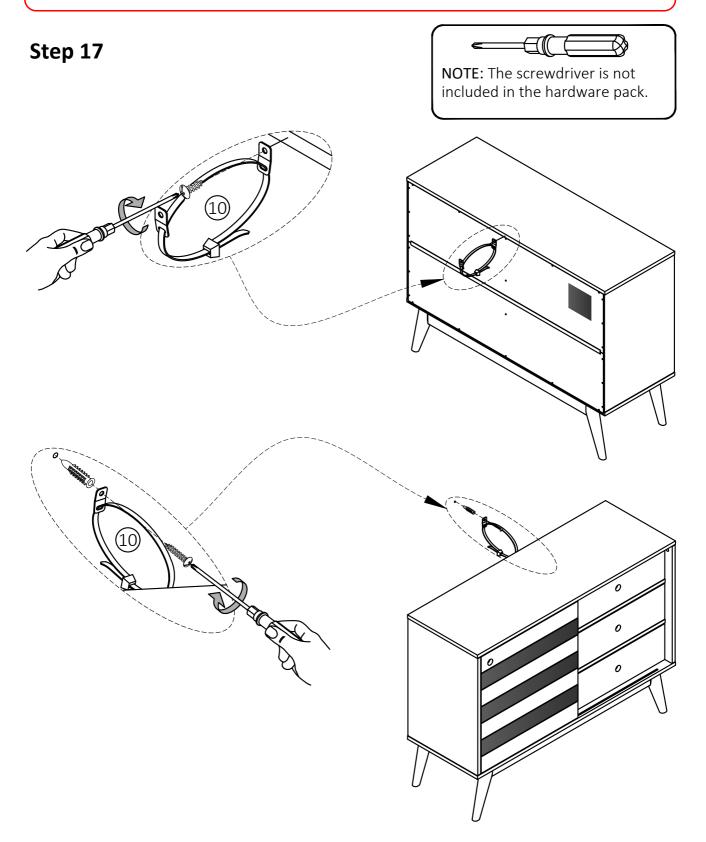


Furniture Anti-Tipping Restraint Instructions


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.

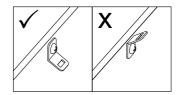

2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches below the bracket mounted to the furniture.

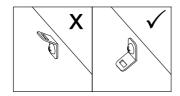

- 3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
- 4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
- 5. Place the furniture so the back edge is in line with the bracket on the wall.
- 6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
- 7. Check to make sure the strap is securely laced and locked to the brackets.

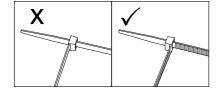

- **DO NOT** put a TV or other heavy objects on top of furniture not intended for use with a TV
- **DO NOT** place heavy objects in top drawers or on top shelves
- **DO NOT** let children climb or hang on drawers, doors or shelves