 


ASSEMBLY INSTRUCTIONS





DINING TABLE

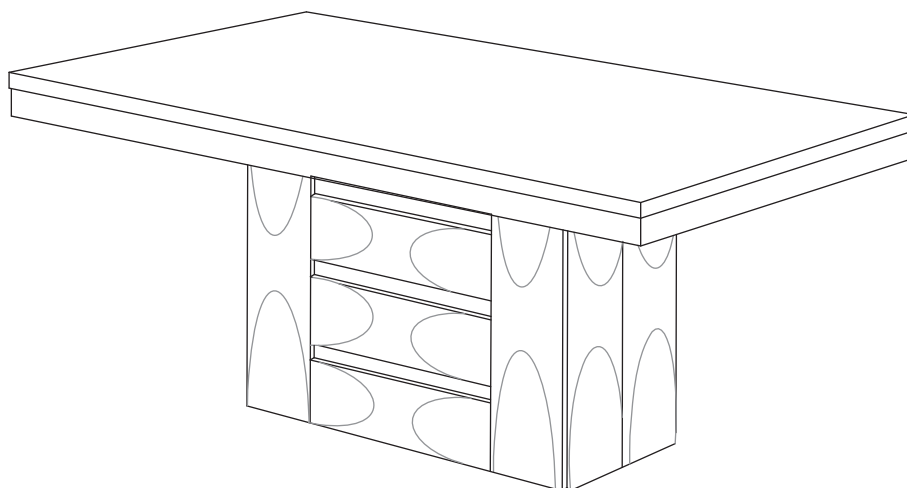

 

 
 
 
NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


PARTS IDENTIFICATION

A	B	C	TOOLS REQUIRED
<p>Quantity: 1</p>  <p>Table Top</p>	<p>Quantity: 2</p>  <p>Pedestal Panel (Large)</p>	<p>Quantity: 2</p>  <p>Pedestal Panel (Small)</p>	 <p>Household screw driver</p>


HARDWARE LIST

1	2	3	4	5
<p>Quantity: 12</p>  <p>Camlock</p>	<p>Quantity: 12</p>  <p>Connecting Bolts</p>	<p>Quantity: 12</p>  <p>CSK Screw m4 x 32</p>	<p>Quantity: 32</p>  <p>CSK Screw m4 x 16</p>	<p>Quantity: 8</p>  <p>Metal Bracket</p>

 
STEP 1 Align connecting bolts

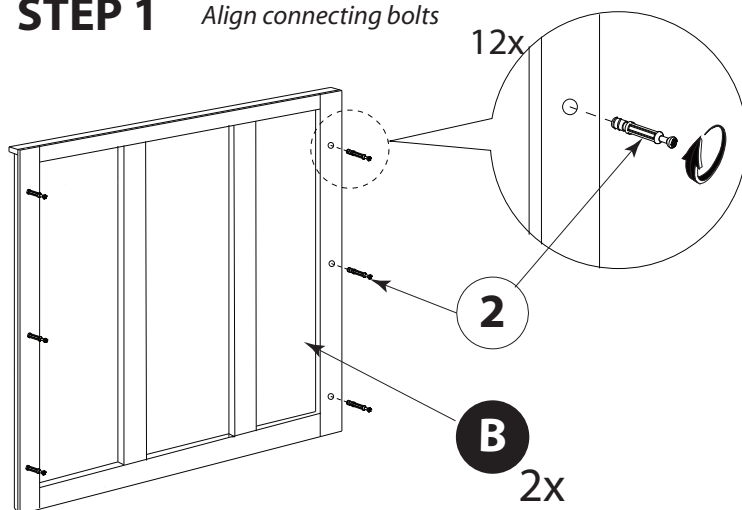

 STEP 2 Attach the Pedestal Panels.

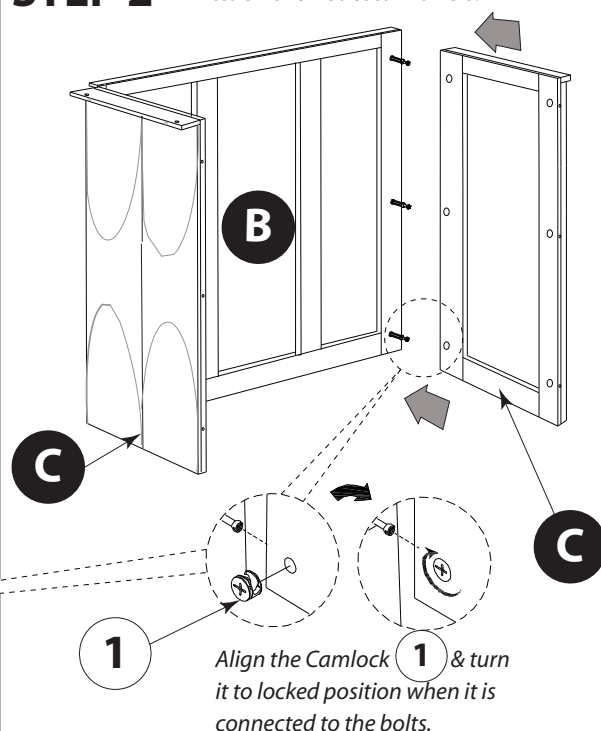


 STEP 3 Let's complete the assembly of the Pedestal.

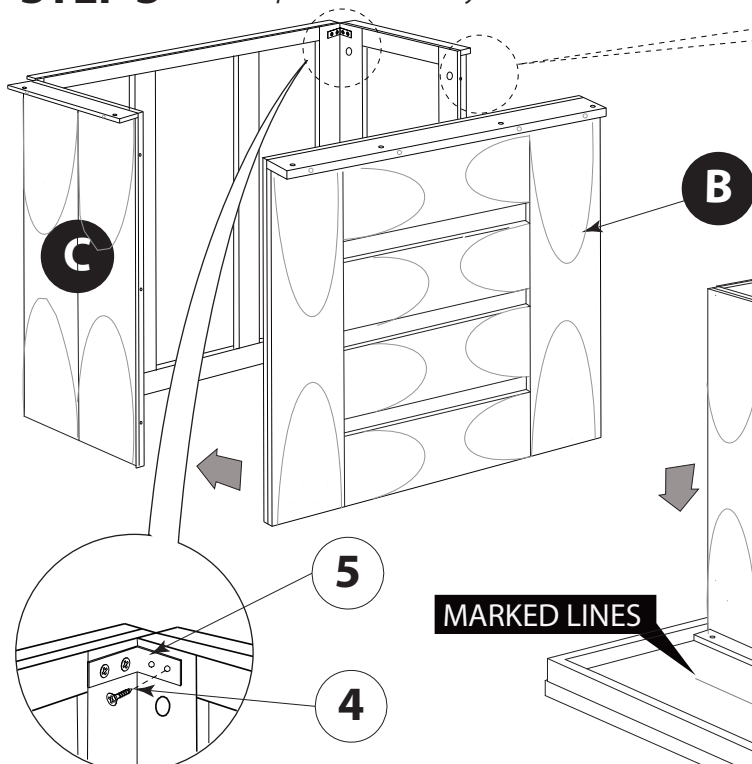

STEP 4

 MARKED LINES

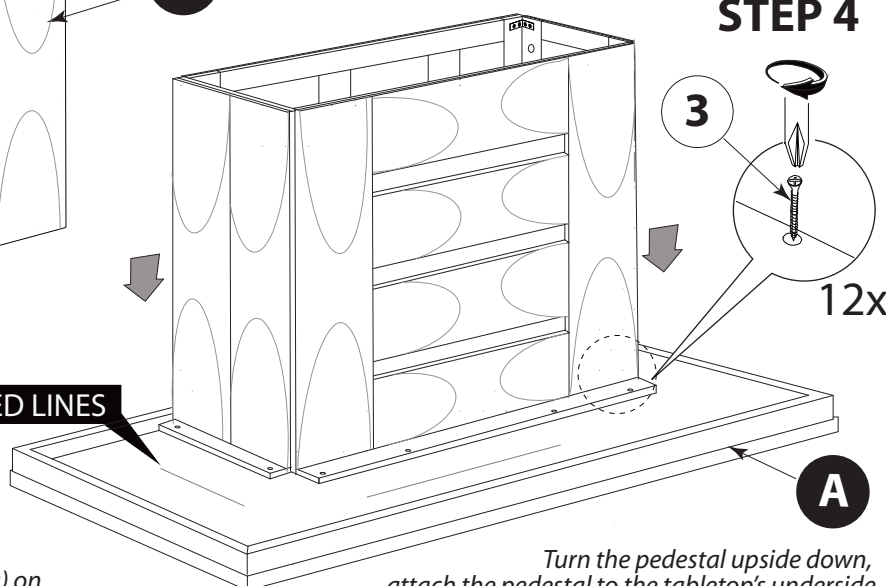


Ensure the pedestal panels is stay leveled (no sag) on a flat surface, then install the metal brakets at all eight corners, Top & Bottom.

Turn the pedestal upside down, attach the pedestal to the tabletop's underside within the marked lines, align screws, and tighten them. Make sure all screws and connecting bolts are fully tightened before turning the table upright, by two adults or more.

ASSEMBLY INSTRUCTIONS

 DINING CHAIR

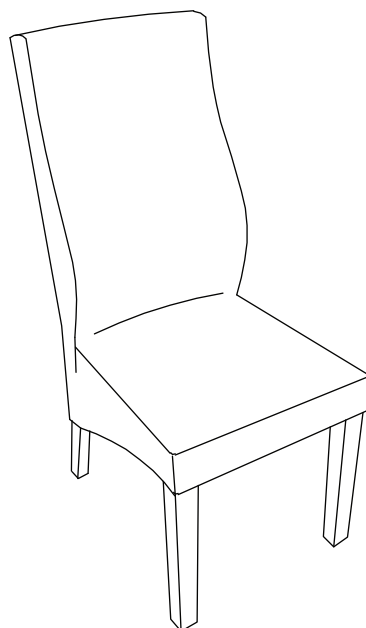

NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

Chair Assembly Tips

The key to correct chair assembly is to loosely attach all of the bolts, then gradually tighten them in succession until all of them are secure. Completely tightening one or more bolts prematurely can result in the following:

ISSUE: CHAIR IS UNLEVELED

 
Cause:

- Chairs can be wobbly or unlevelled if one or more bolts are fully tightened before all bolts are attached and / or tighten.
- Chairs can be wobbly or unlevelled if assembly is completed in a different room or surface than where the product is intended to primarily reside.

Solution:

- Loosen each bolt in the seat box (front legs, back corner-blocks, and back apron) until they are adjustable by hand. Place the chair upright on a flat surface. Press firmly and evenly on the seat edges until the product sits level but do not lean against the chair back. Once the chair sits level on the desired surface, fully tighten each bolt.
- When assembling your chair, make sure to do it in the location that the chair will most often be used. Uneven flooring frequently accounts for wobbling issues.

Loosen bolts until adjustable by hand

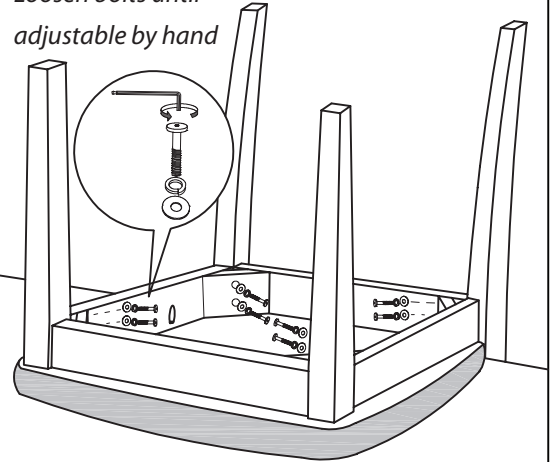

 

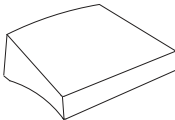 
 
 
 
 
 

ISSUE: HOLES ARE MISALIGNED

Cause:


- This issue can occur when some bolts are tightened fully before all other bolts are tightened or attached.

Solution:


- Loosen each bolt in the seat box (front legs, back corner-blocks, and back apron) until finger tight. This will allow you to realign the holes and properly fasten the bolts to the frame.

PARTS IDENTIFICATION (quantity for 1 chair)				
A Quantity: 1  Chair Backrest	B Quantity: 2  Front Legs	C Quantity: 1  Cushioned Seat		
HARDWARE IDENTIFICATION (quantity for 1 chair)				
1 Quantity: 2  JCBB Bolt m6 x 45mm	2 Quantity: 4  JCBC Bolt m6 x 60mm	3 Quantity: 4  JCBC Bolt m6 x 85mm	4 Quantity: 10  Spring Washer 1/4"	5 Quantity: 10  Flat Washer 1/4"
6 Quantity: 1  Allen Key				

 STEP 1

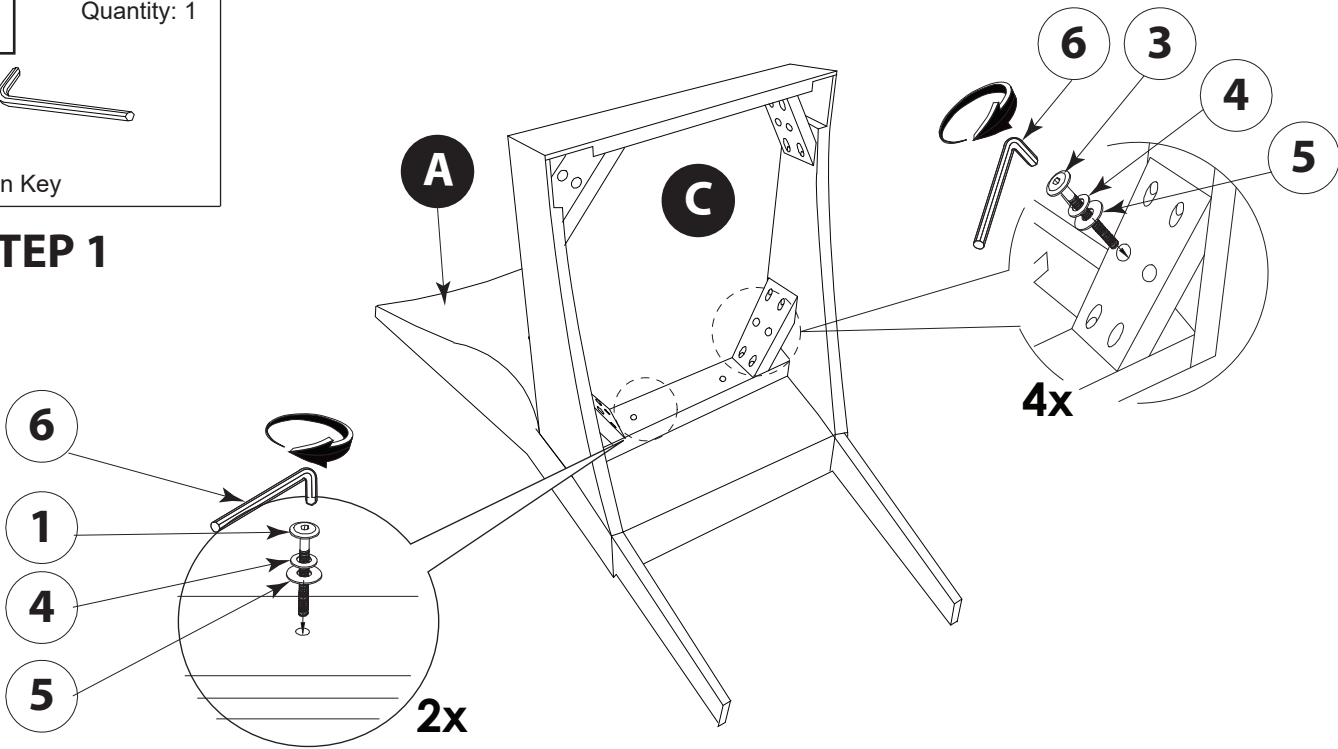


 STEP 2

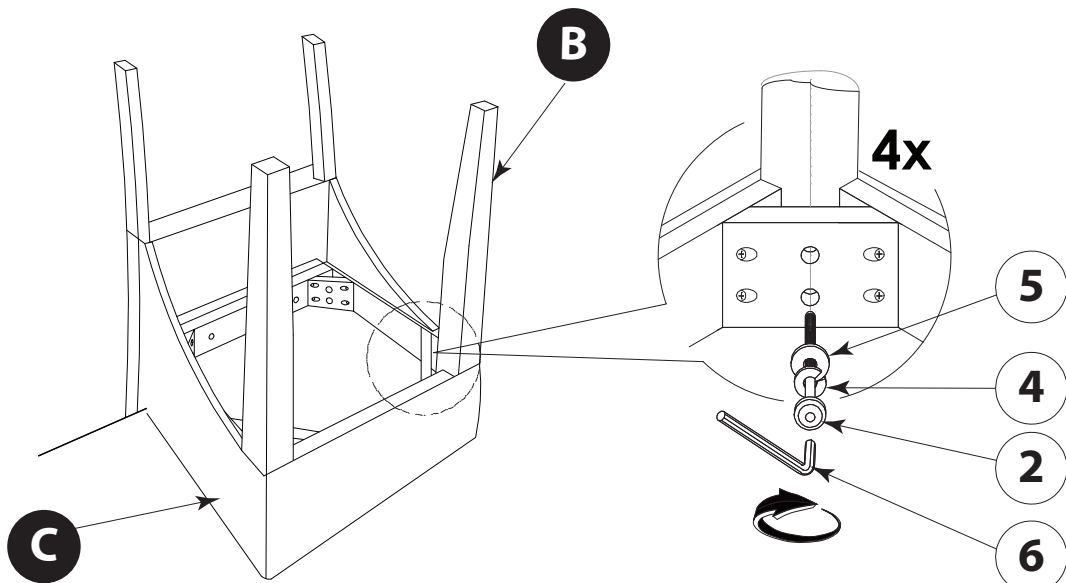

ASSEMBLY INSTRUCTIONS

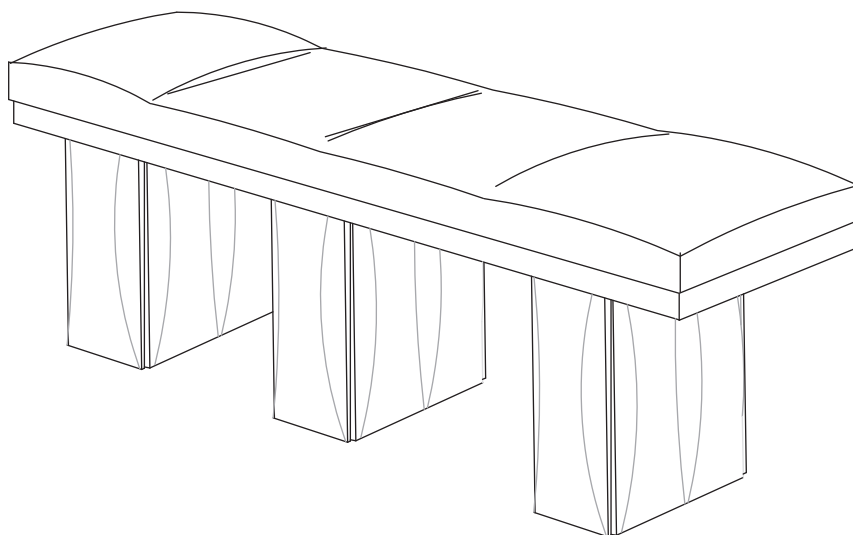 


BENCH



  

 
 
NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


PARTS IDENTIFICATION

A Quantity: 1  Bench Seat with Frame	B Quantity: 6  Leg Panel (Large)	C Quantity: 6  Leg Panel (Small)	
---	--	--	--

HARDWARE LIST


1 Quantity: 36  Camlock	2 Quantity: 36  Connecting Bolts	3 Quantity: 12  CSK Screw m4 x 32	TOOLS REQUIRED  Household screw driver
---	--	---	--

 STEP 1 Align connecting bolts

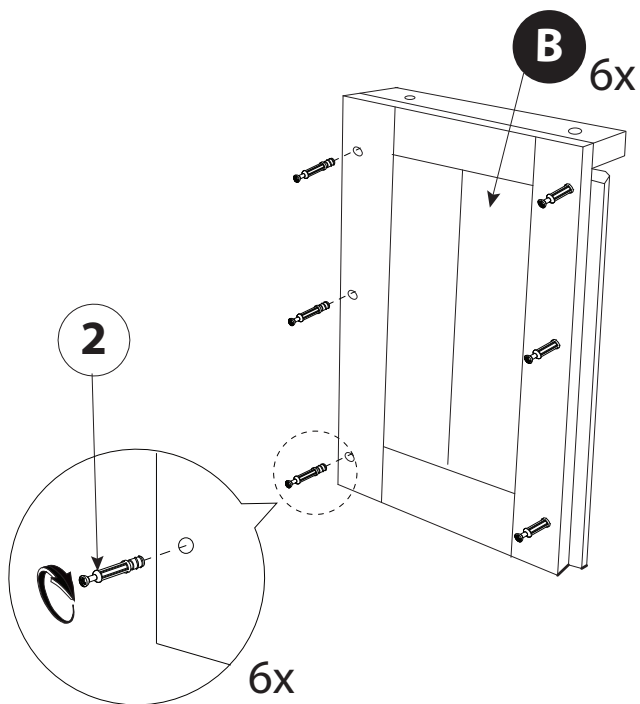

STEP 2 Assemble the Leg Panels, 3 sets.

 Align the Camlock **1** & turn it to locked position when it is connected to the bolts.

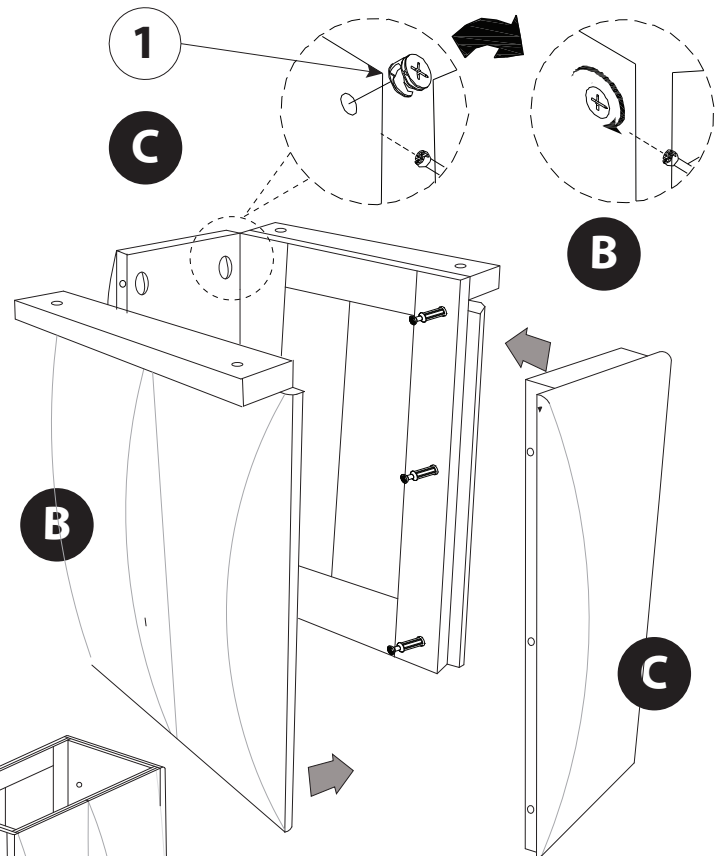

STEP 3 attach all three Legs to the underside of the seat.

