Wall Mounted Bathtub Faucet Installation

INSTALLATION MANUAL Tools You Will Need:



Adjustable wrench

Hexagon wrench

Philips Screwdriver

Before the Installation

1. Check the package and confirm all parts are included. If any part is missing or damaged, please contact us. 2. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.

3. Shut off the main water supply prior to beginning installation. 4. Do flush the water supply lines to remove any dirt and debris before installation (IMPORTANT). 5. Make sure to connect the hot/cold inlet pipe correctly. If standing in front, connect hot water pipe to the left and cold water pipe to the right.

6. After the installation, check for leaks and make sure every joint is safely sealed.

Cleaning and Maintenance

1. Rinse with clean water and dry with a soft cloth.

2. Do not use any detergent, acid, polisher, abrasives, or harsh cleaners.

3. Do not use cloth with a coarse surface.

Parts List



Part	Name	Quantity	Part	Name	Quantity
Α	shower valve	1	н	tub spout	1
В	escutcheon	1	1	cover plate	1
С	handle	1	J	wall supply holder	1
D	diverter knob	1	K	rubber washers	2
Е	set screws	2	L	shower hose	1
F	Allen key	1	М	hand shower	1
G	indication buttons	2			



Installation Guide



1. Fix the shower valve (A) into the wall. Use a level to ensure that the value is straight and level.



2.Wrap Teflon tape around the pipe threads and connect hot and cold water supply lines and in-wall pipes (not included) as desired to the value. Turn on the water supply and open the cartridge to check for leakage. Then, put on the protective cover (not included).



4. Turn the water on for 1 minute to flush any debris. Apply Teflon tape to the threaded tail pipe and install the tub spout (H) into the outlet on the wall.



5. Apply Teflon tape to the threaded end, then fix the cover plate (I) onto the wall supply holder (J) and screw the wall supply holder (J) into the hand shower outlet.

Problem	Possible Cause	Corrective Action	
Water does not shut off	1. O-ring is not seated correctly or worn.	1. Reseat or replace O-ring.	
completely.	2. Cartridge may be defective.	2. Replace cartridge.	
Looka at waterling connection	1. Worn or broken washer.	1. Replace washer.	
Leaks at waterline connection.	2. Faucet body may be defective.	Replace faucet (contact us for the replacement).	
Leaks from handle.	1. Cartridge may come loose.	1. Reseat cartridge tight.	
Leaks Ironn handle.	2. Cartridge may be defective.	2. Replace cartridge.	
Leaks at hose connection.	1. Hose connection is loose.	1. Tighten hose.	
Leaks at hose connection.		2. Replace hose.	
Leaks at shower valve	1. Connection may come loose or not sealed completely.	1. Check connections.	
connection.	2. Defective shower valve inlet or outlet connector.	2. Replace valve body.	
Diverter knob does not work.	1. Diverter cartridge may be defective.	1. Replace cartridge.	
LED light does not Light or		 Replace LED spray head (for kitchen faucet). 	
noisy LED showerhead.	1. Defective LED generator.	Replace LED threaded pipe (for seperate faucet spout).	
Holsy LED Showernead.		Replace LED generator (for others).	
	1. Check for water pressure problems	1. Clean or replace the aerator.	
Low flow.	1. Check for water pressure problems.	Remove waterflow restrictor if available.	
	Aerator may be dirty or clogged.	Install booster or pump (if applicable).	

Troubleshooting



3.Remove the protective cover when the finished wall is completed and install the escutcheon (B) to the valve (A) and press it against the finished wall. Then, install the handle (C) and diverter knob (D), tighten set screws (E) with Allen key (F), and put on the indication buttons (G).



6.Add rubber washers (K) at both ends of the shower hose (L). Connect shower hose (L) to the wall supply holder (J) and hand shower (M). Then, place the hand shower (M) to the wall supply holder (J).