

# ASSEMBLY INSTRUCTION

**Item: 5066-10458 KINSEY WRITING DESK**

**Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.**

**Read all instruction and study the drawing carefully before starting the assembly process.**

## HARDWARE PACK

NO	DRAWING	DESCRIPTION	SIZE	Q'ty
a		BOLT	8*38mm	16
b		LOCK WASHER	8*φ 13*1.8mm	16
c		FLAT WASHER	8*φ 19*2mm	16
d		ALLEN WRENCH	5mm	1
e		THREADED ROD	M8*90mm	2
f		CURVED PLATE	30*8.5*15mm	2
g		FLAT WASHER	8*φ 16*2mm	2
h		LOCK WASHER	8*φ 13*1.8mm	2
i		NUT	M8*8mm	2
j		HEX WRENCH	13*2mm	1

**STEP 1:** Take the Stretcher [C], attach the two KD legs [B]. Secure with threaded rod [e] to KD legs [B]. Assemble with curved plate [f], flat washer [g], lock washer [h], nut [i]. Then tighten by hex wrench [j].

**STEP 2:** Pull two side drawers out.

**STEP 3:** Place the desk top [A] on a soft surface, attach legs [B+C] to the desk top [A]. Assemble with flat washer [c], lock washer [b], bolt [a] in the vertical direction. Assemble with flat washer [c], lock washer [b], bolt [a] in the horizontal direction.

**STEP 4:** Set the desk upright. Adjust leveler if needed to level desk on uneven floor. Put the drawers into desk. Check if all bolts are tighten before using



