

ASSEMBLY INSTRUCTION SUNPAN®

Sunpan Item No: 102984

Sunpan Product Name: JADE CONSOLE TABLE

Please visit our web-site : **www.sunpan.com** for more great products.

For assembly questions please call: 1-800-787-1019 (or +1-416-736-0094) outside North America or email to: info@sunpan.com

PARTS LIST

Before y	you begin, piease layo	ut all parts and ens	ure you have the correct count.
No.	DESCRIPTION	QUANTITY	ILLUSTRATION
Α	CONSOLE	01	
В	LEG FRAME	02	
С	STRETCHER FRAME	01	
		iardware lis	
1	BOLT M6 x 35	02	
2	BOLT M6 x 15	12	
3	LOCK WASHER Ø8	12	
4	WASHER Ø8 x 16	12	0
5	ALLEN KEY K4	01	
6	ANTI-TIP KIT	02	

ASSEMBLY INSTRUCTIONS STEP DESCRIPTION ILLUSTRATION Connect the 2 Legs "B" to 1 the Stretcher Frame "C" as in the drawing. Use 02 Bolts "1" snap to the C В appropriate locations, as shown. Use Allen Key "5" when assembling the bolts. 2 Put the cabinet (A) upside down. Place the leg frames already assembled on the Step 1 on the underneath cabinet and screws it by using: 12 Bolts (2) + 12 Lock Washers (3) + 12 Washers (4) Tighten by Allen key (5). 3 2 x (6) Turn the table on legs. Adjust the adjustable leveler. Attach the ANTI - TIP KIT (6) at the back of the cabinet. Follow instructions in the hardware bag Finished.

ASSEMBLY TIPS:

Please check parts and hardware before assembling. Follow each instruction step by step.

Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.

Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.

Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING

Do not attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement. Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basis steps will help to ensure that you enjoy your furniture for a long time:

Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.

Excessive exposure to sunlight may cause fading.

Excessive exposure to surnight may cause rading.

Excessive temperature and humidity or cold may cause cracking or splitting.

Dust with a clean, damp, lint free cloth.

Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface.

Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.