



 
Important safety instructions:

- Please read carefully all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.





Pre-assembly:

- Do not discard any content until assembly is completed to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any protective packaging.

Parts List

Item	Description	DRAWING	QTY
P1	Chair		1
P2	Front Legs		2
P3	Back Legs		2

Hardware List


Item	Description	DRAWING	QTY
H1	Flat Washers φ5/16"		8
H2	Lock Washers φ5/16"		8
H3	Bolts φ5/16*2"		8
H4	Allen Wrench φ5/16"		1

DISCLAIMER:


WHEN PROPERLY ASSEMBLED,THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR AND DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:


Step 1.Assemble the chair on a flat,soft surface such as carpet or cloth to prevent scratching the finish.Open the bottom cover,take out the legs and hardware.

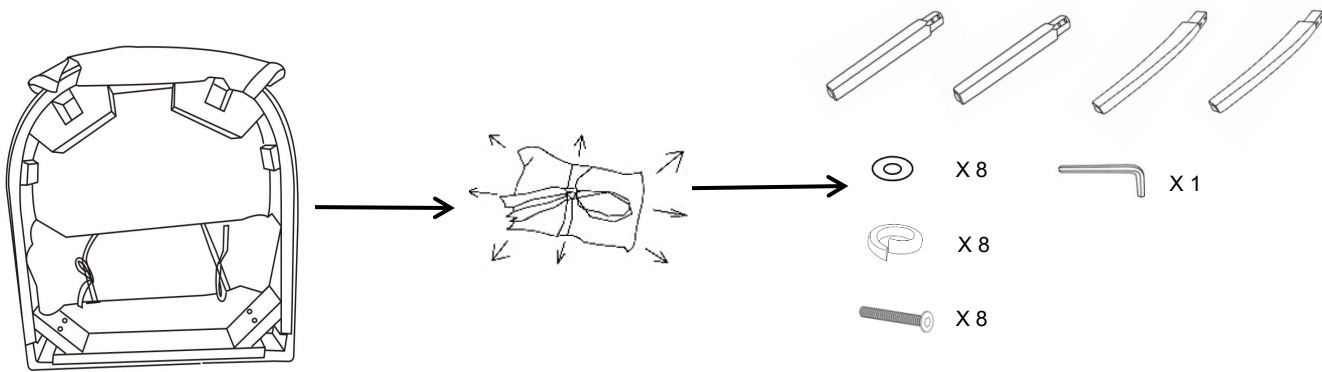

Step 2. Using bolts (H3), lock washers (H2), flat washers (H1), connect Front Legs (P2) and Back Legs (P3) to Chair (P1). Tighten bolts (H3) with Allen Wrench (H4).

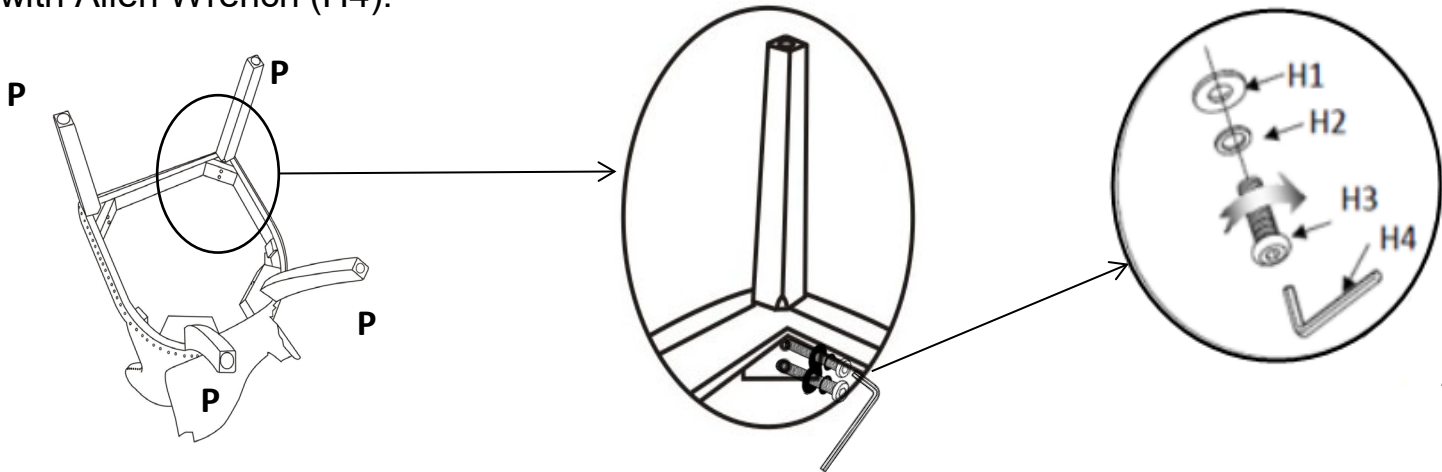

Step 3.Level the Dining chair and place the Dining chair upright on a level surface.

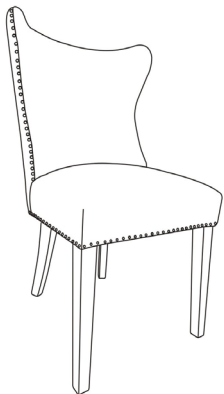

ADDITIONAL NOTE ABOUT SAFETY:

BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.

THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MOTHS AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for your purchase