## **Bravat Trio Motion Sensor Faucets**



## INSTALLATION INSTRUCTIONS

## BRAVAT







PA	RAMETE
Power	Dc type: AA SIZE 1.5V Battery, 4 pcs Ac type(for European standard): Input 220V, Output 6V/500mA
Sensing Distance	16-20cm
Sensing Duration	1 second
Battery Lift Time	Appr. 50,000 cycle
Supply Water Pressure	0.5-5kgf/cm2
Ambient Temperature	5°C-45°C (Supply Water Temperature5°C-50°C)
Supply Water Pipe Specification	G1/2
Non-working Power Consumption	<0.5mW
	This technical product information is exclusively for the installer or trained specialists.         Please pass these instructions on to the user.         Application:         Operation with unpressurized storage heaters is not possible. Use for indoor public places and common residence.         Specifications         Flow pressure:       max. 10 bar         Test pressure:       max. 10 bar         Flow rates at 3 bar flow pressure       flob bar         Flow rate at 3 bar flow pressure:       max. 10 bar         Flow rate at 3 bar flow pressure:       max. 10 bar         Flow rate at 3 bar flow pressure:       max. 10 bar         Flow rate at 3 bar flow pressure:       max. 10 bar         More rate in test temperature:       max. 80°C         Recommended (energy saving):       60°C         Environment temperature:       5°C ~45°C         If static pressure exceeds 5 bar, a pressure-reducing valve must be fitted.         Avoid major pressure differences between hot and cold water supp         Installation:         Flush piping system prior and after installation of fitting. Flow is diverted automatically from shower outlet to bath inlet when the fitting is closed.         Itting a temperature limiter is possible.         Itting a temperature limiter is dosed.         Maintenance:         Inspect and clean all components and replace
SIMPLE TROUBLE SHOOTING	
	Problem Alternative Cause Solution
	1.Low Battery Change Battery
	No Flow 2.Sensor Plug loose off Insert Plug
	3.Supply Valve at close position Turn on Supply Va
	II Restricted Flow Filter of sensor or spout blocked Clean Filter
MAINTENANCE	CAUTION: Always turn water OFF before removing existing or disassembling the faucet. Open faucet handle to relieve water pressure and insure that complete water shut-off has been accomplished. To keep the surface clean and bright, please clean the faucet regularly,please abide by the following procedures: 1. Use rinsing water and soft cloth, clean bilge and bilge
	<ul> <li>Soft liquid cleanser.</li> <li>Cleaned the residua with the following cleansers only.</li> <li>Soft liquid cleanser.</li> <li>Colorless glass cleanser, totally soluble powder cleanser</li> <li>without abrasive capability. (Mixed by instructions.) No abrasive cleansers waxes</li> <li>Never use cleanser, emery cloth or handkerchief which</li> <li>can rub.</li> <li>Never use cleanser containing abrasive cleansers,</li> <li>ammonia,bleach, acids, waxes, alcohol, solvents or othe products not recommended for chrome.</li> <li>After cleaning, use rinsing water to flush out all cleanser immediately and drying with soft cotton cloth.</li> <li>Carefully dismantle the aerator regularly, rinse under clean running water until any loose debris is cleared to avoid the influence to water outflow.</li> </ul>

This General diagram and installation instructions are not intended for any specific model, but is presented as a general guideline for Installations!