ASSEMBLY INSTRUCTION



SUNPAN

Sunpan Product Name: ETIENNE SIDEBOARD


Please visit our website **www.sunpan.com** for more great products

For assembly questions please call 1-800-787-1019 (or +1-416-736-0094) outside North America or email to info@sunpan.com

PARTS LIST Before you begin, please layout all parts and ensure you have the correct count.					
PARTS	DESCRIPTION	QUANTITY	ILLUSTRATION		
А	Cabinet	1			
В	Legs	2			
С	Middle Leg	1	•		
1	Bolts (M8x35)	8			
2	Lock Washers	8	0		
3	Washers	8	0		
4	Allen Key	1			
5	Plastic Links	4			
6	Anchors	4			
7	Screws (M4x30)	4			
8	Drawstrings	2	C		
9	Screws (M4x15)	4	8 minute		


ASSEMBLY INSTRUCTIONS

STEPS	DESCRIPTION	ILLUSTRATION
1	Bolt the Legs (B) to the Cabinet (A) by using the Allen Key (4), Bolts (1), Lock Washers (2), and Washers (3).	3 2 1 4 B
2	Assemble the Middle Leg (C) by rotating as shown in the image.	

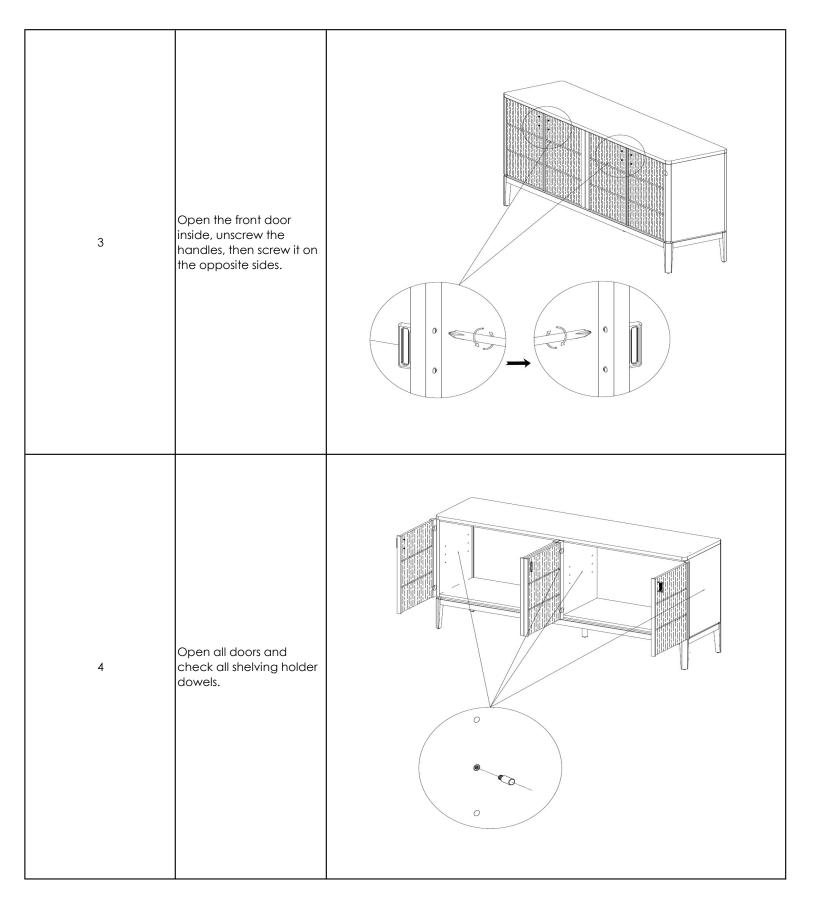

	T	1
5	Slide the shelves into the cabinet, placing them on the dowel holders.	
6	Drill two holes into the wall and hammer the Anchors (6) into the wall.	

7	Attach the Plastic Links (5) to the wall by bolting the Screws (7) into the Anchor.	x 4 (5)
8	Attach the Plastic Links (5) to the Cabinet (A) by bolting the Screws (9) into the Anchor.	

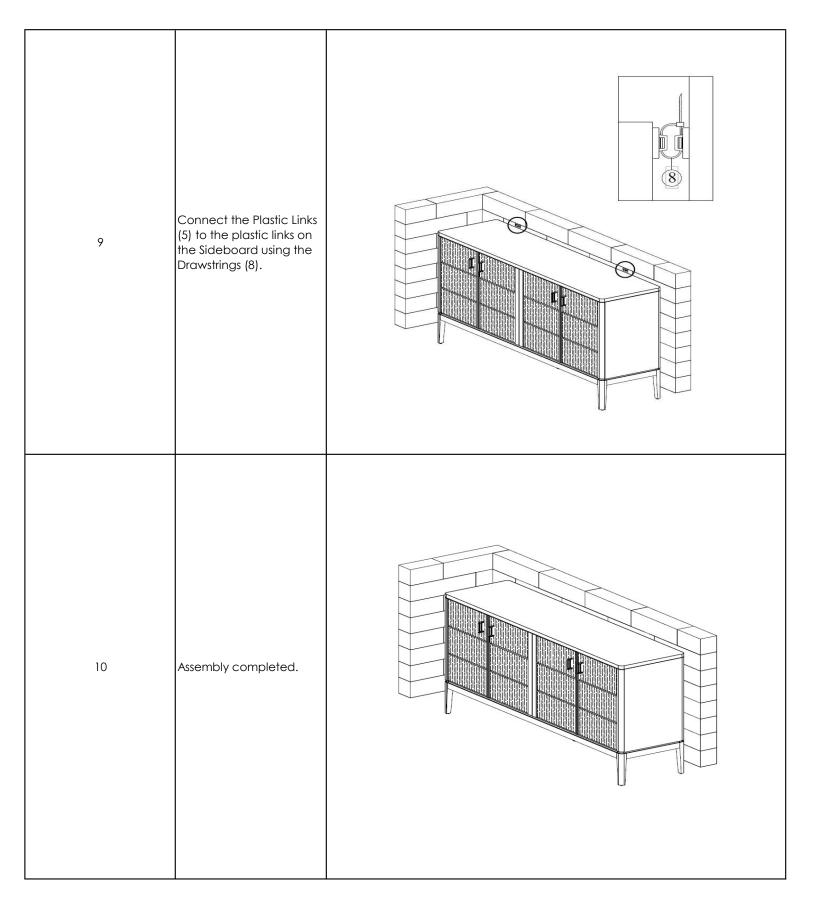

ASSEMBLY TIPS:

Please check parts and hardware before assembling. Follow each instruction step by step.

Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.

Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.

Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING:

Don't attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement. Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basic steps will help to ensure that you enjoy your furniture for a long time:

Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.

Excessive exposure to sunlight may cause fading.

Excessive temperature and humidity or cold may cause cracking or splitting.

Dust with a clean, damp, lint free cloth.

Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface.

Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.