 


KITCHENER / WATERLOO / PROVIDENCE

DESK

MODEL # 3AXCRGL008

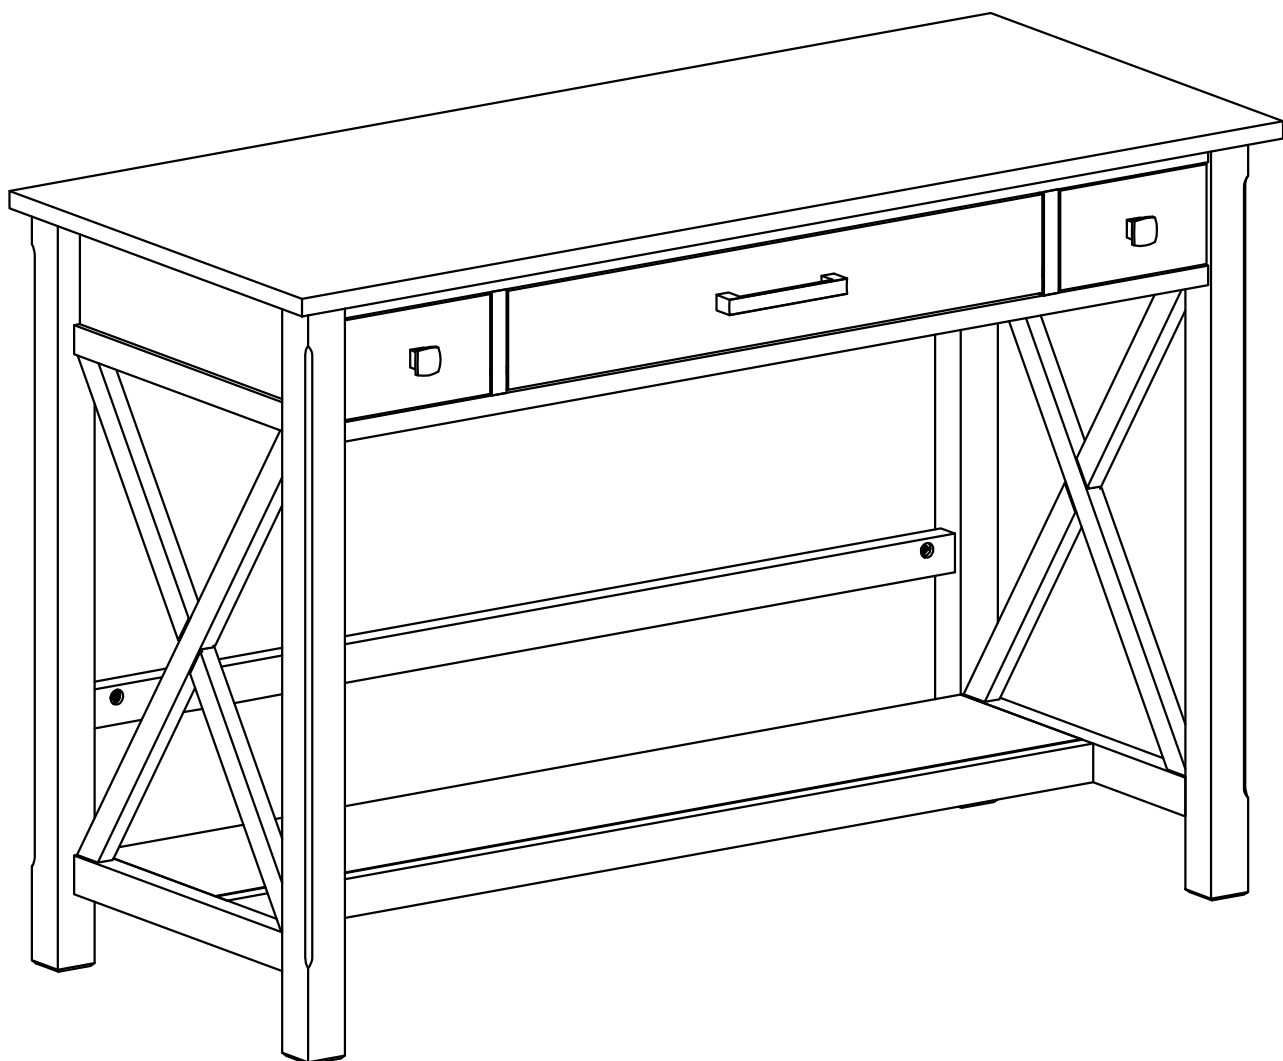



**FOR REPLACEMENT PARTS OR HELP WITH
ASSEMBLY PLEASE CONTACT US AT:**

simpli-home.com/customer-support

**PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR INSTRUCTION BOOKLET**

**TO RETURN THE PRODUCT:
PLEASE CONTACT THE RETAILER
WHERE THE ITEM WAS PURCHASED FROM**

ENTER
TO WIN

**Upload an image of our furniture
in your home with a short review
to our facebook page for a chance to**

**Win up to \$3000 of
Simpli Home furniture!!!**

www.facebook.com/simplihomefurnishings



IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

 
 
 
 
 
 
 
 
 
 
 
 

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth. Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture. To avoid dulling of the finish, do not place furniture in direct sunlight. Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.


PART DESCRIPTION
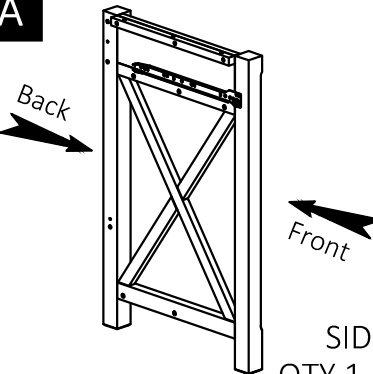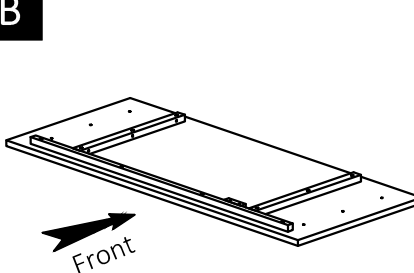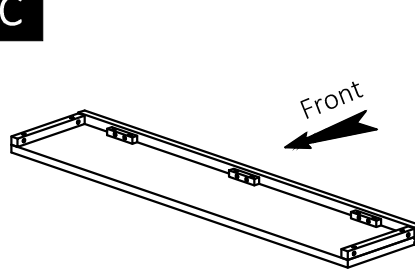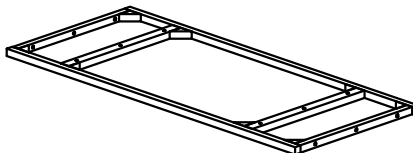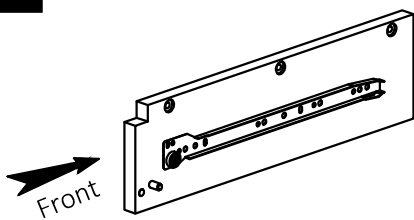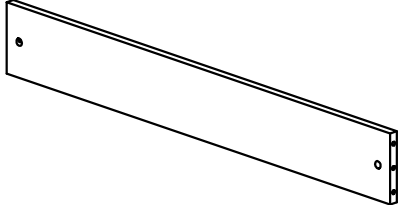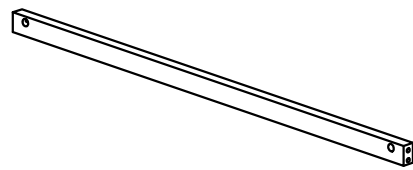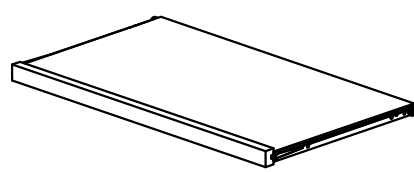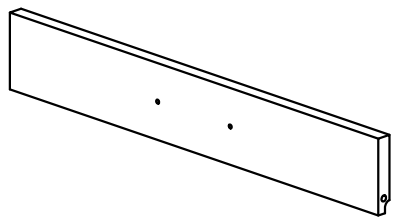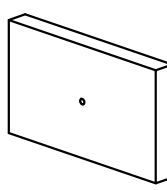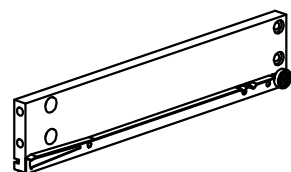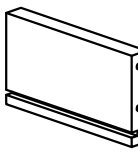
<div><div>A</div><div></div><div>SIDE QTY 1 PAIR</div></div>	<div><div>B</div><div></div><div>TOP QTY 1</div></div>	<div><div>C</div><div></div><div>BOTTOM SHELF QTY 1</div></div>	
<div><div>D</div><div></div><div>MIDDLE FRAME QTY 1</div></div>	<div><div>E</div><div></div><div>DIVIDER QTY 1 PAIR</div></div>	<div><div>F</div><div></div><div>BACK PANEL QTY 1</div></div>	
<div><div>G</div><div></div><div>BACK BAR QTY 1</div></div>	<div><div>H</div><div></div><div>KEYBOARD QTY 1</div></div>	<div><div>I</div><div></div><div>FLIP DOWN DRAWER QTY 1</div></div>	
<div><div>J</div><div></div><div>DRAWER FRONT QTY 2</div></div>	<div><div>K</div><div></div><div>DRAWER SIDE QTY 2 PAIR</div></div>	<div><div>L</div><div></div><div>DRAWER BACK QTY 2</div></div>	<div><div>M</div><div></div><div>DRAWER BOTTOM QTY 2</div></div>

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)


HARDWARE DESCRIPTION

 1



ALLEN KEY BOLT
M6 X 30mm
QTY 10

 2




ALLEN KEY SCREW
M6 X 30mm
QTY 26

3



ALLEN KEY
QTY 1

 4




CAM LOCK PIN
CAM LOCK
QTY 12 SETS

5



WOOD DOWEL
Ø8 x 30 mm
QTY 6

 6

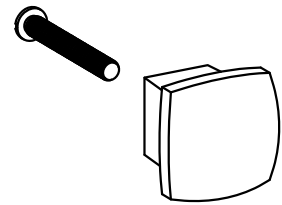


HANDLE
M4 x 25 mm
QTY 2 SETS

7




HANDLE
M4 x 25 mm
QTY 1 SET

 8

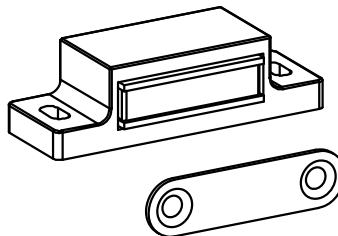


MAGNET AND PLATE
QTY 1 SET

 9




PHILLIPS SCREW
M3 x 15 mm
QTY 4

 10




ALLEN KEY SCREW DOWEL
M8 X 28mm
QTY 2

 11

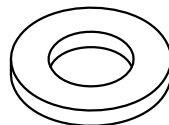


WASHER
Ø16/Ø8.5 x 1 mm
QTY 2

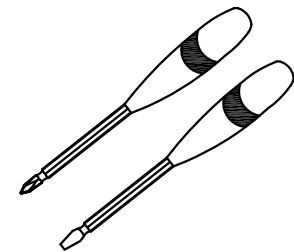 


Required -
Flathead screwdriver
Phillips screwdriver
Not Included

 NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

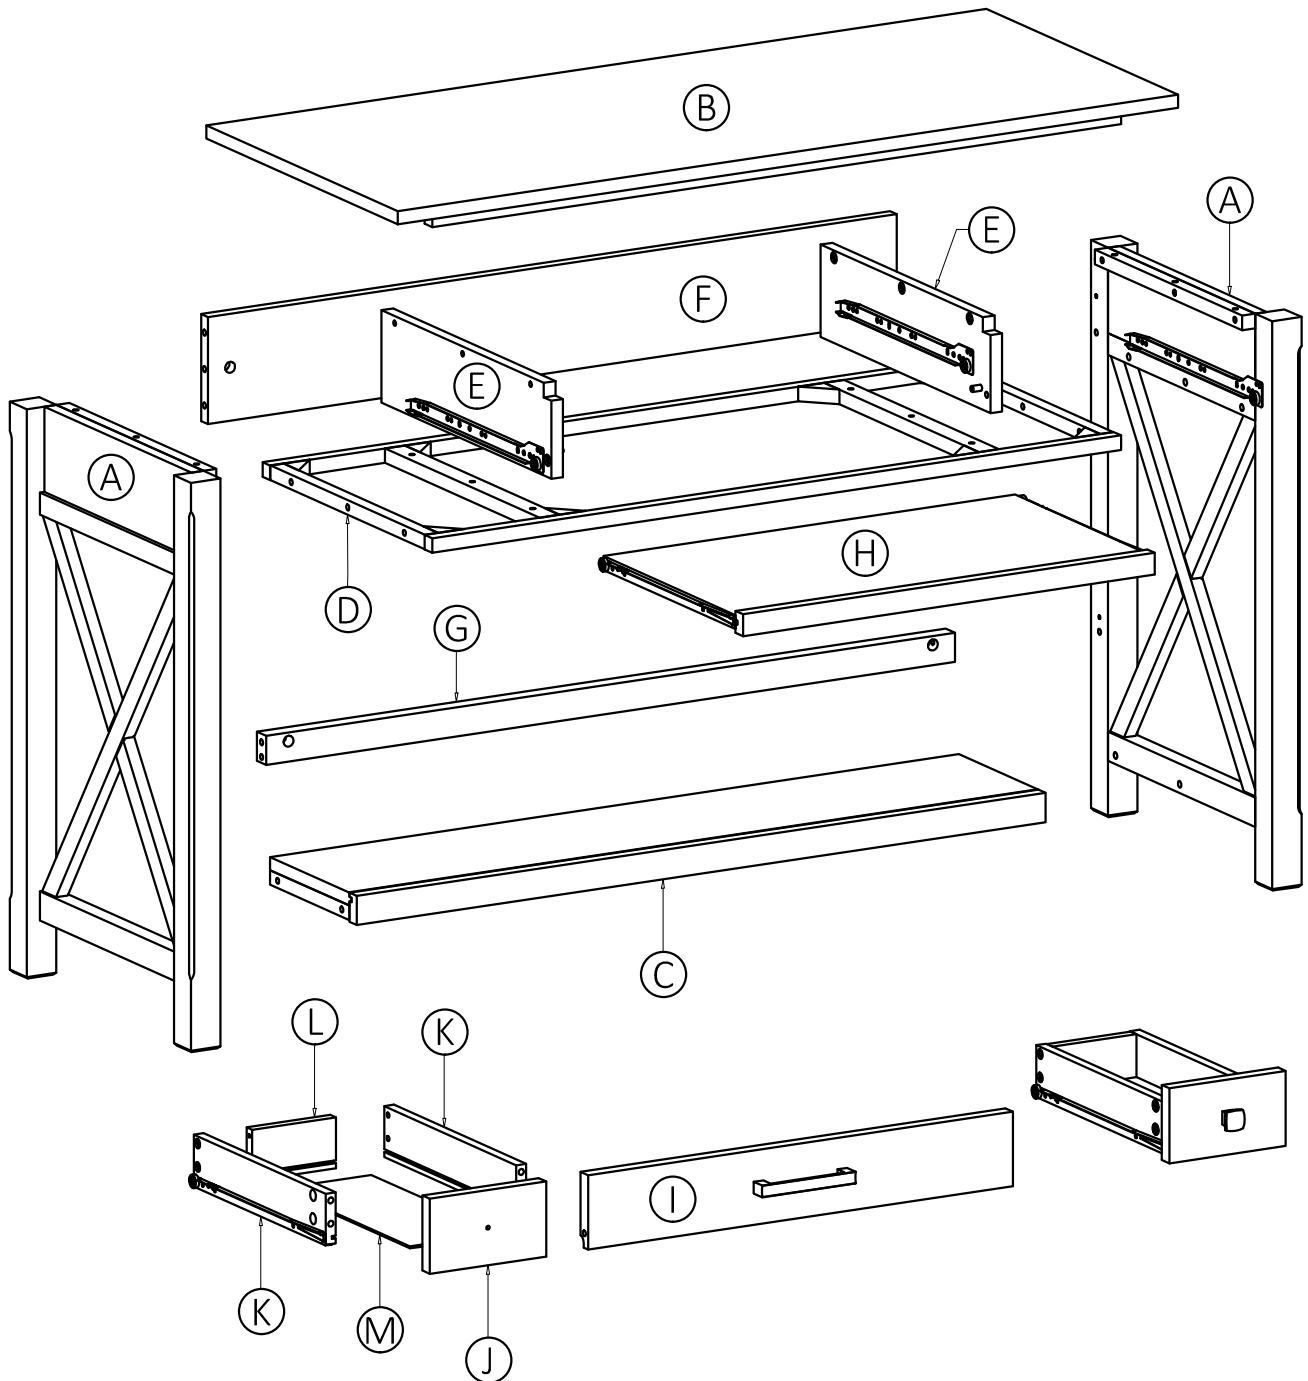


STEP-1

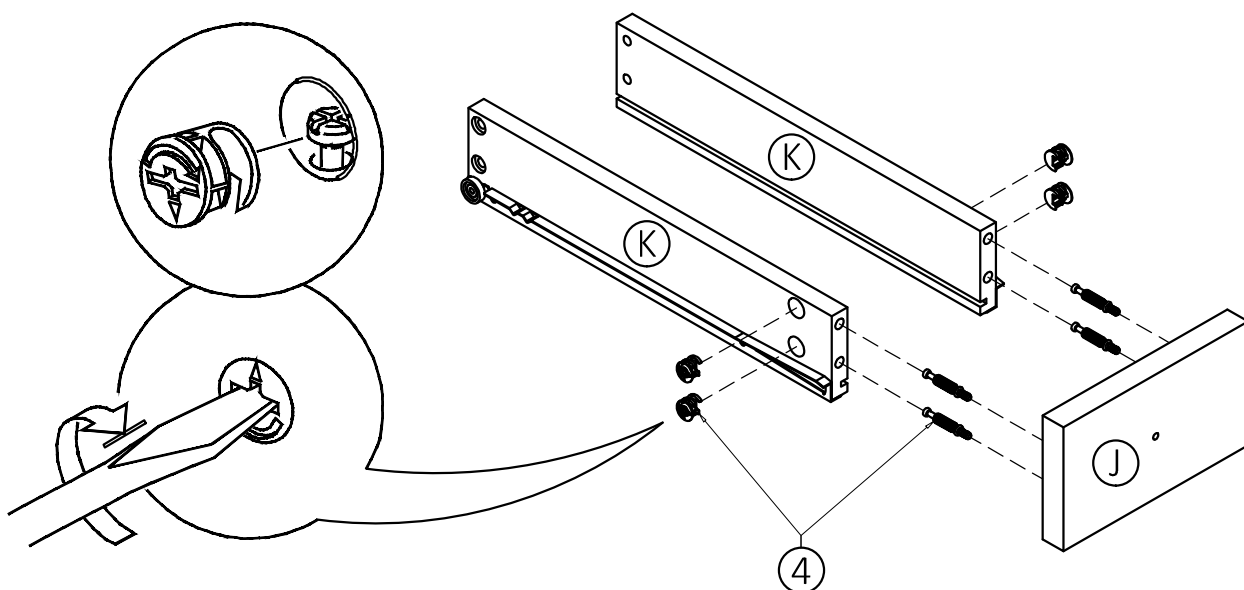 


1. Attach 4 Cam Lock Pins (4) to pre-drilled holes at back of Drawer Front (J).
2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (K).
3. Insert 2 Cam Locks (4) into pre-drilled holes on each Drawer Side (K).
4. Use flathead screwdriver secure Cam Locks.

 STEP-2

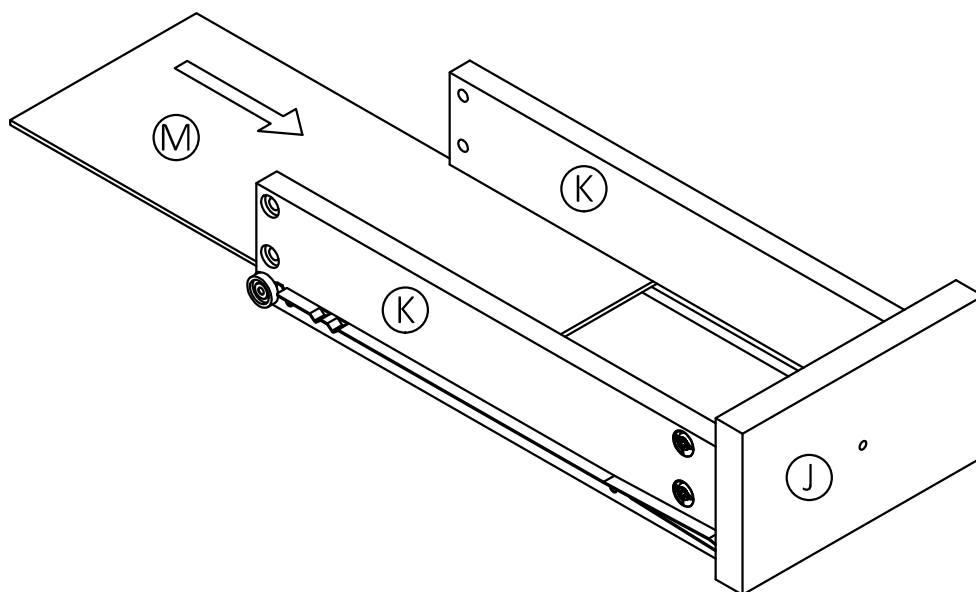


1. Slide Drawer Bottom (M) firmly into slots on Drawer Sides (K) and Drawer Front (J).

 STEP-3

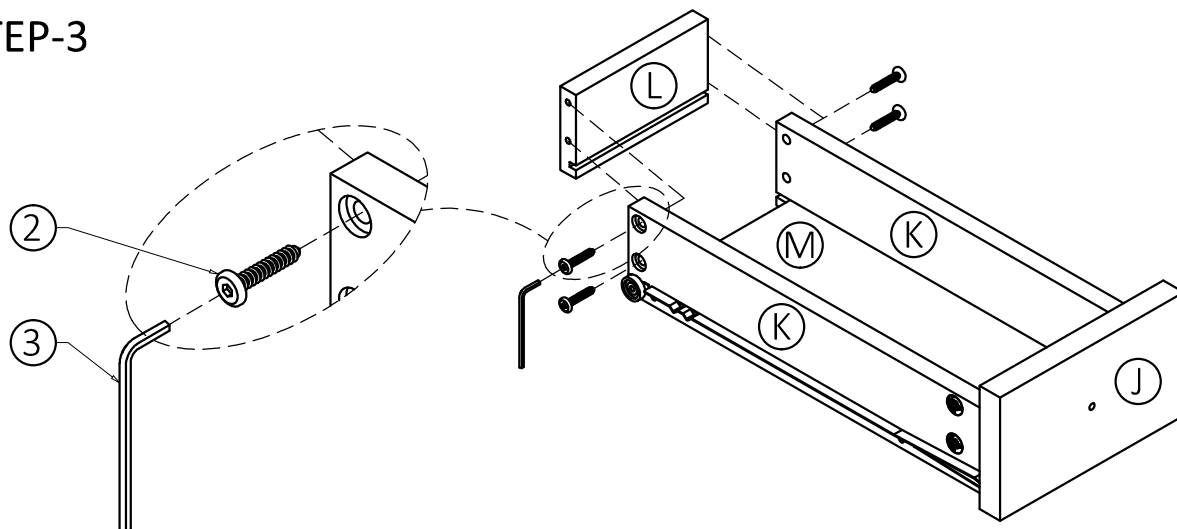

1. Align Drawer Back (L) with Drawer Bottom (M) and press firmly into slot .
2. Attach Drawer Back using 2 Allen Key Screws (2) through pre-drilled holes on each Side (K).
3. Use Allen Key (3) to tighten screws. Do not over-tighten.

 
STEP-4

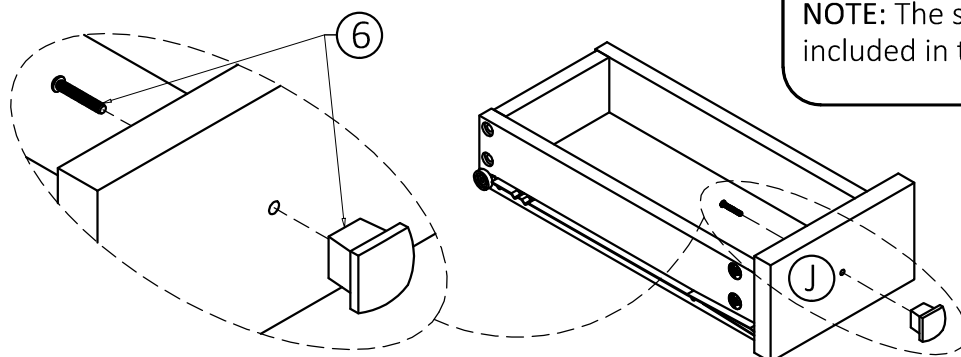


NOTE: The screwdriver is not included in the hardware pack.

1. Use Phillips screwdriver to attach Handle (6) to Drawer Front (J).

 Repeat Step 1-4 for the second drawer.

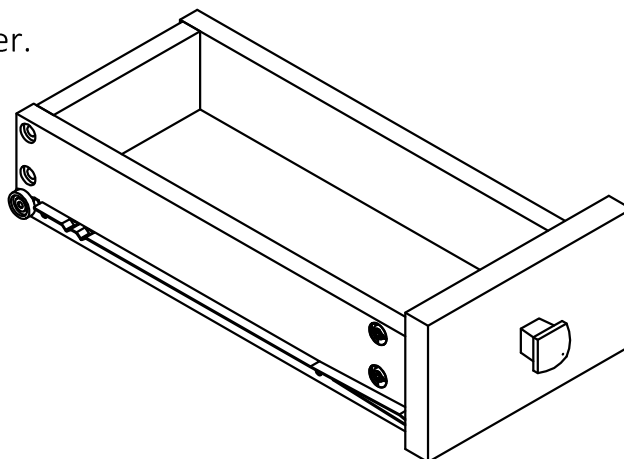


STEP-5

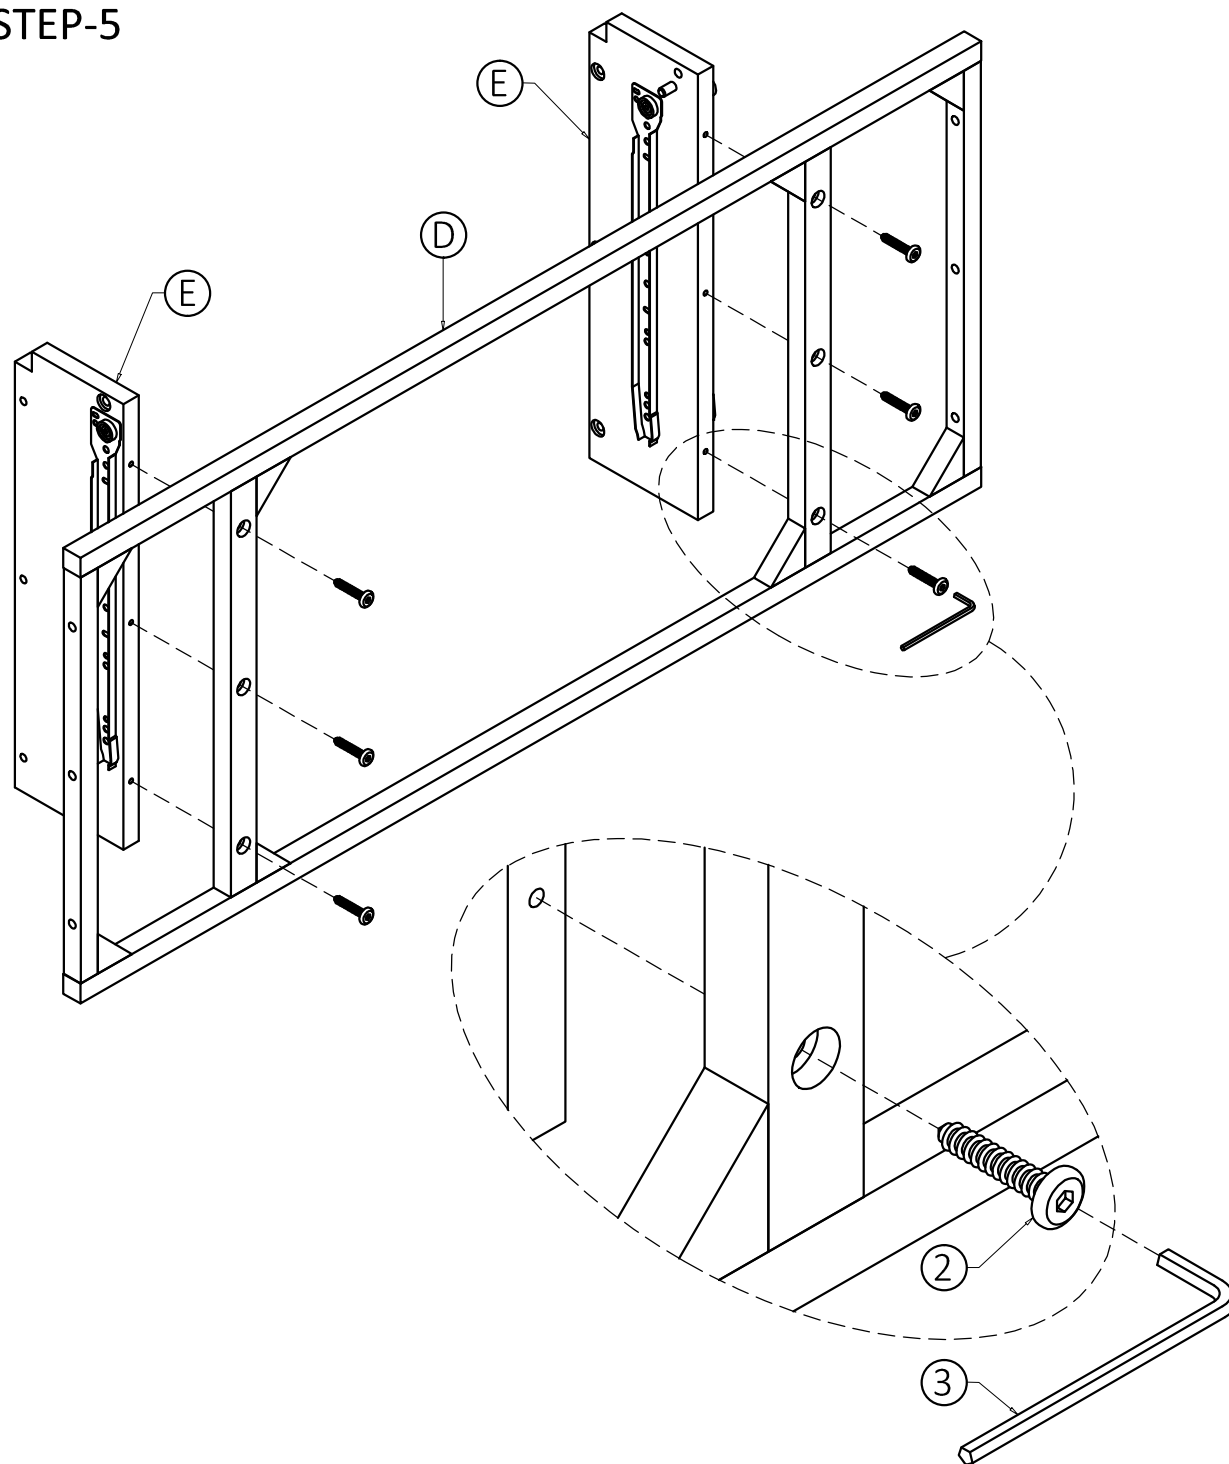 


1. Attach Dividers (E) to Middle Frame (D) and using 6 Allen Key Screws (2) (3 screws on each Divider).
2. Use Allen Key (3) to tighten Screws. Do not over-tighten.

 STEP-6

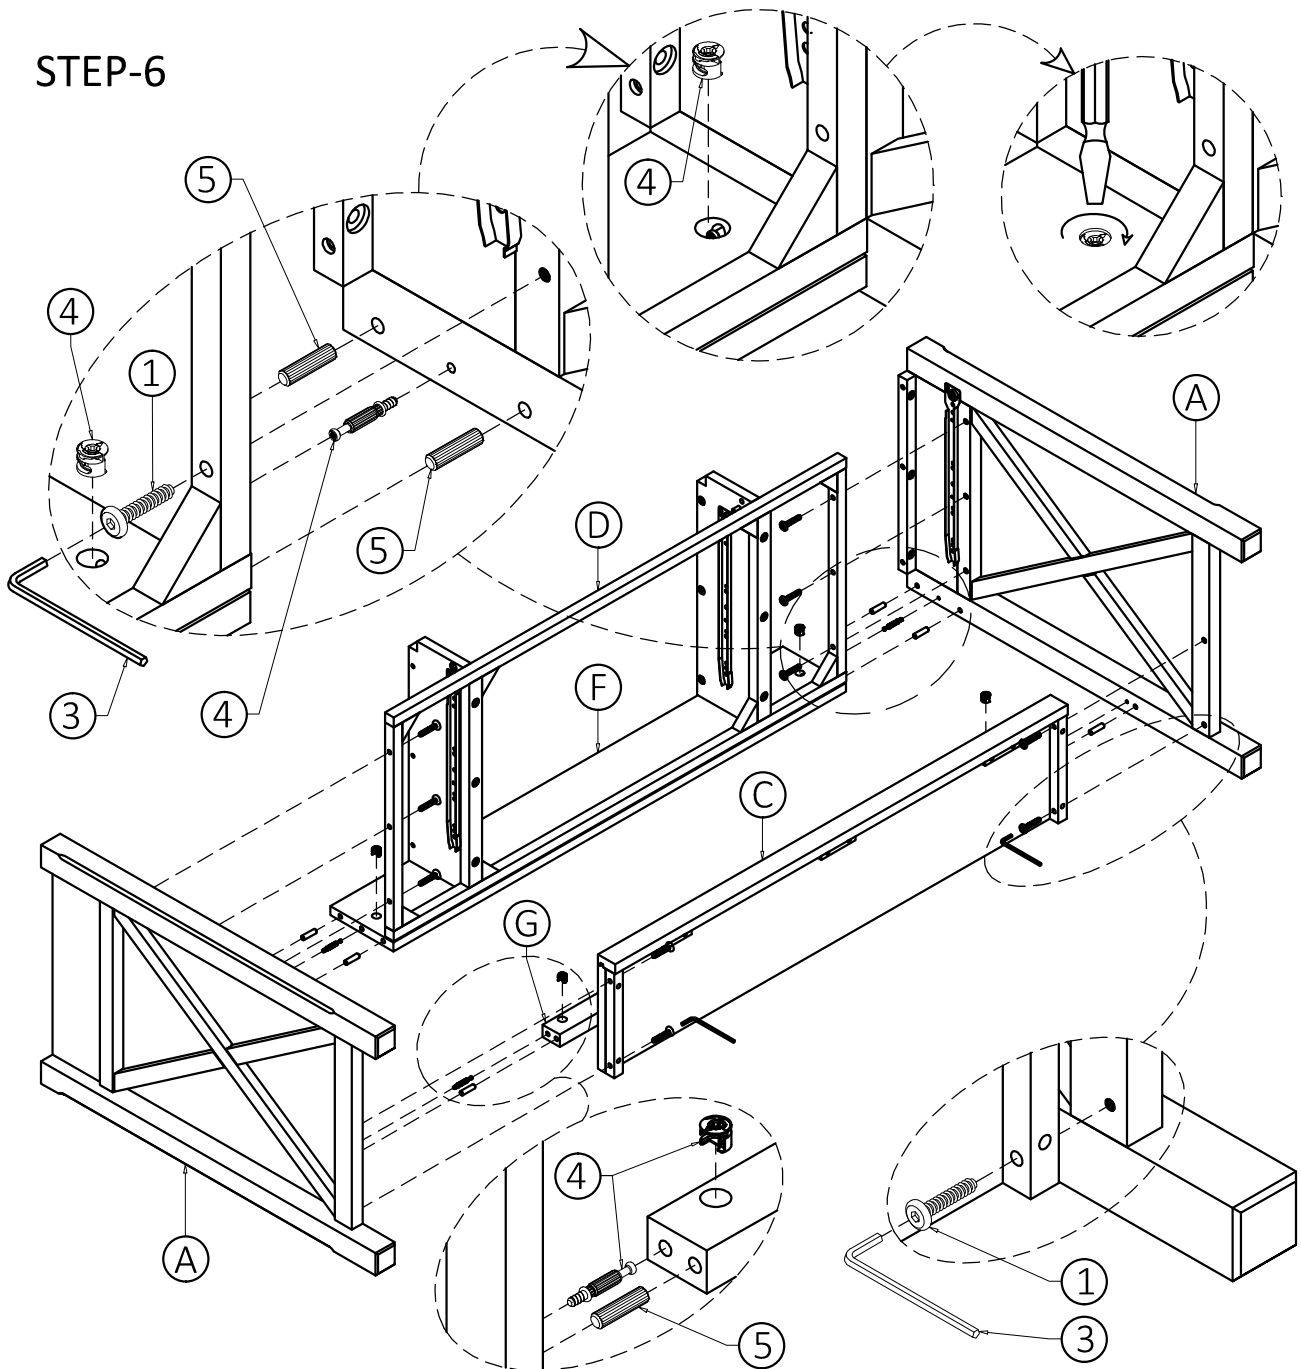


1. Insert 6 Wood Dowels (5) into pre-drilled holes on Back Panel (E) and Back Bar (F) (2 dowels on Back Bar (F), 4 dowels on Back Panel (E)).
2. Use rubber mallet to tap Dowels (5) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 2 Cam Lock pins (4) to each Side (A) using guide holes.
4. Align Cam Lock Pins with pre-drilled holes on on Back Panel (E) and Back Bar (F).
5. Insert 4 Cam Locks (4) into pre-drilled holes on Back Panel (E) and Back Bar (F) (2 Cam locks on each part).
6. Attach Bottom Shelf (C) and Middle Frame (D) to Sides (A) and using 10 Allen Key Bolts (1) (4 bolts on Bottom Shelf (C), 6 bolts on Middle Frame (D)).
7. Use Allen Key (3) to tighten Bolts.

 STEP-7




 NOTE: The screwdriver is not included in the hardware pack.

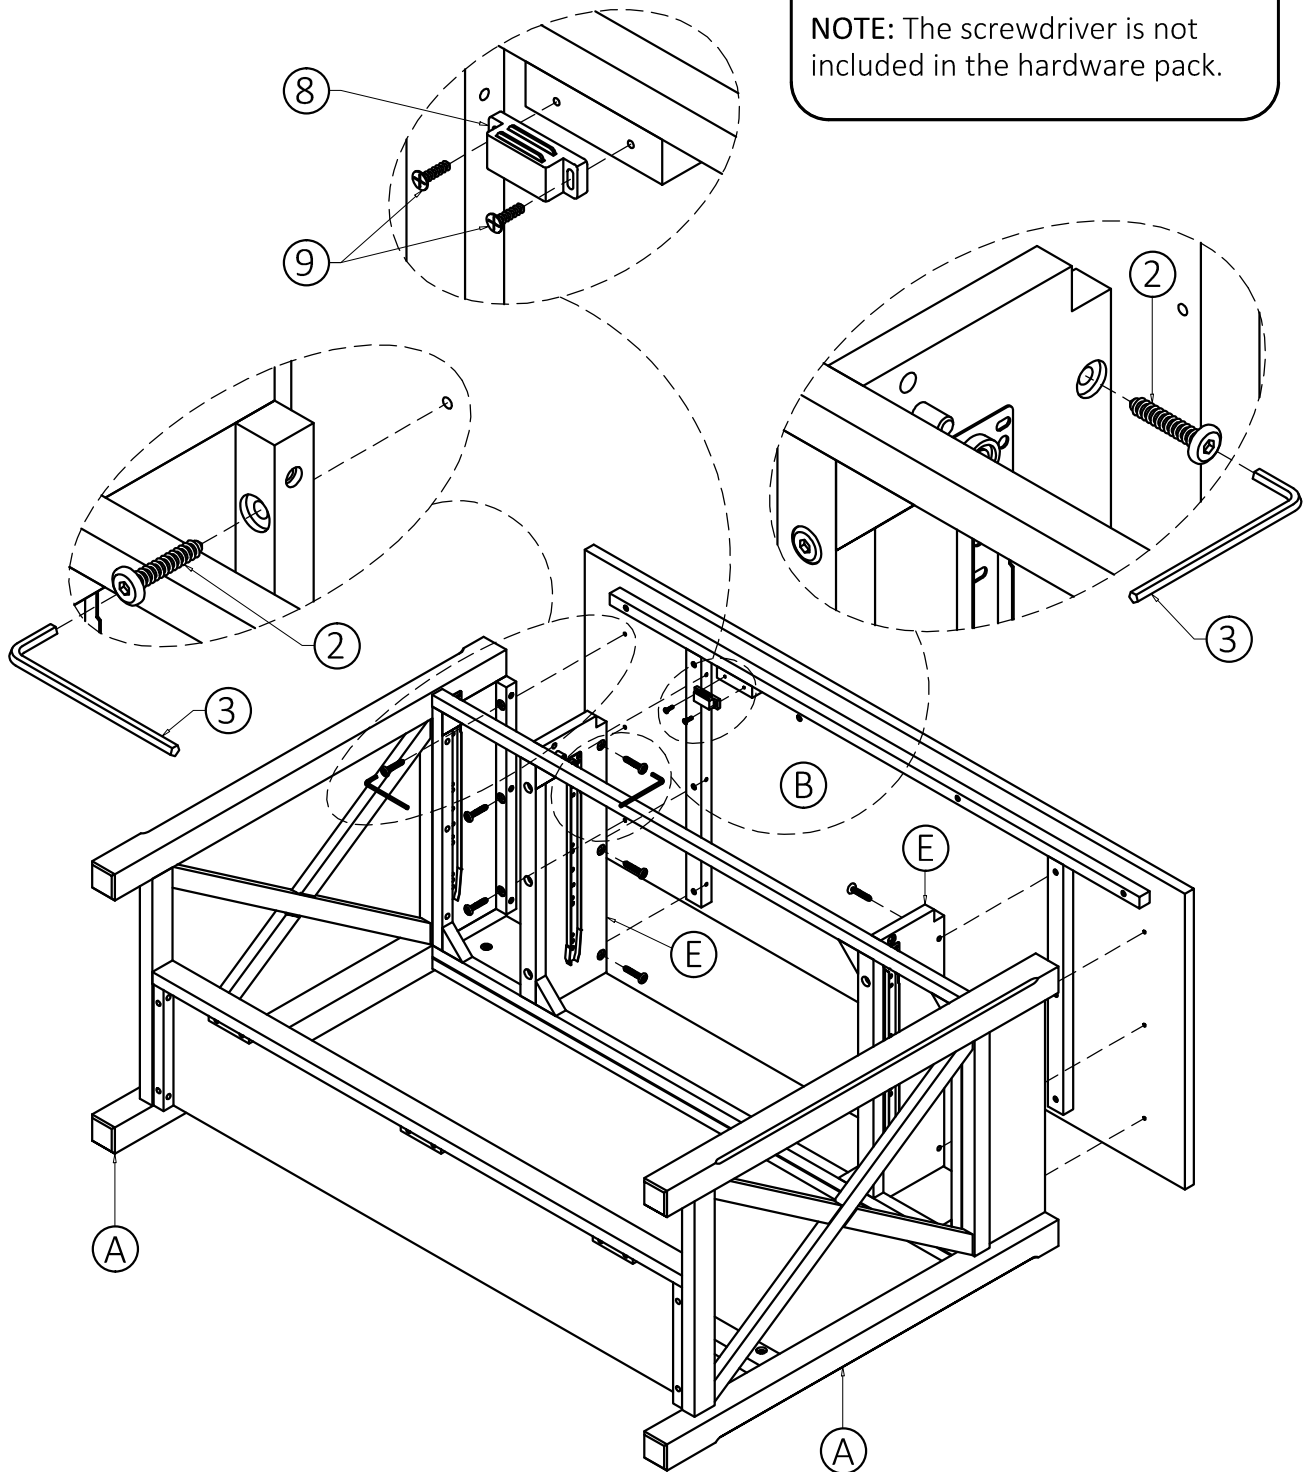


1. Attach Top (B) to Sides (A) and Dividers (E) using 12 Allen Key Screws (2) (3 screws on each Side and Divider).
2. Use Allen Key (3) to tighten Screws. Do not over-tighten.
3. Attach Magnet (8) using Phillips Screws (9) into guide holes on small bar under the Top (B).
4. Use Phillips screwdriver to snugly tighten screw.

 STEP-8

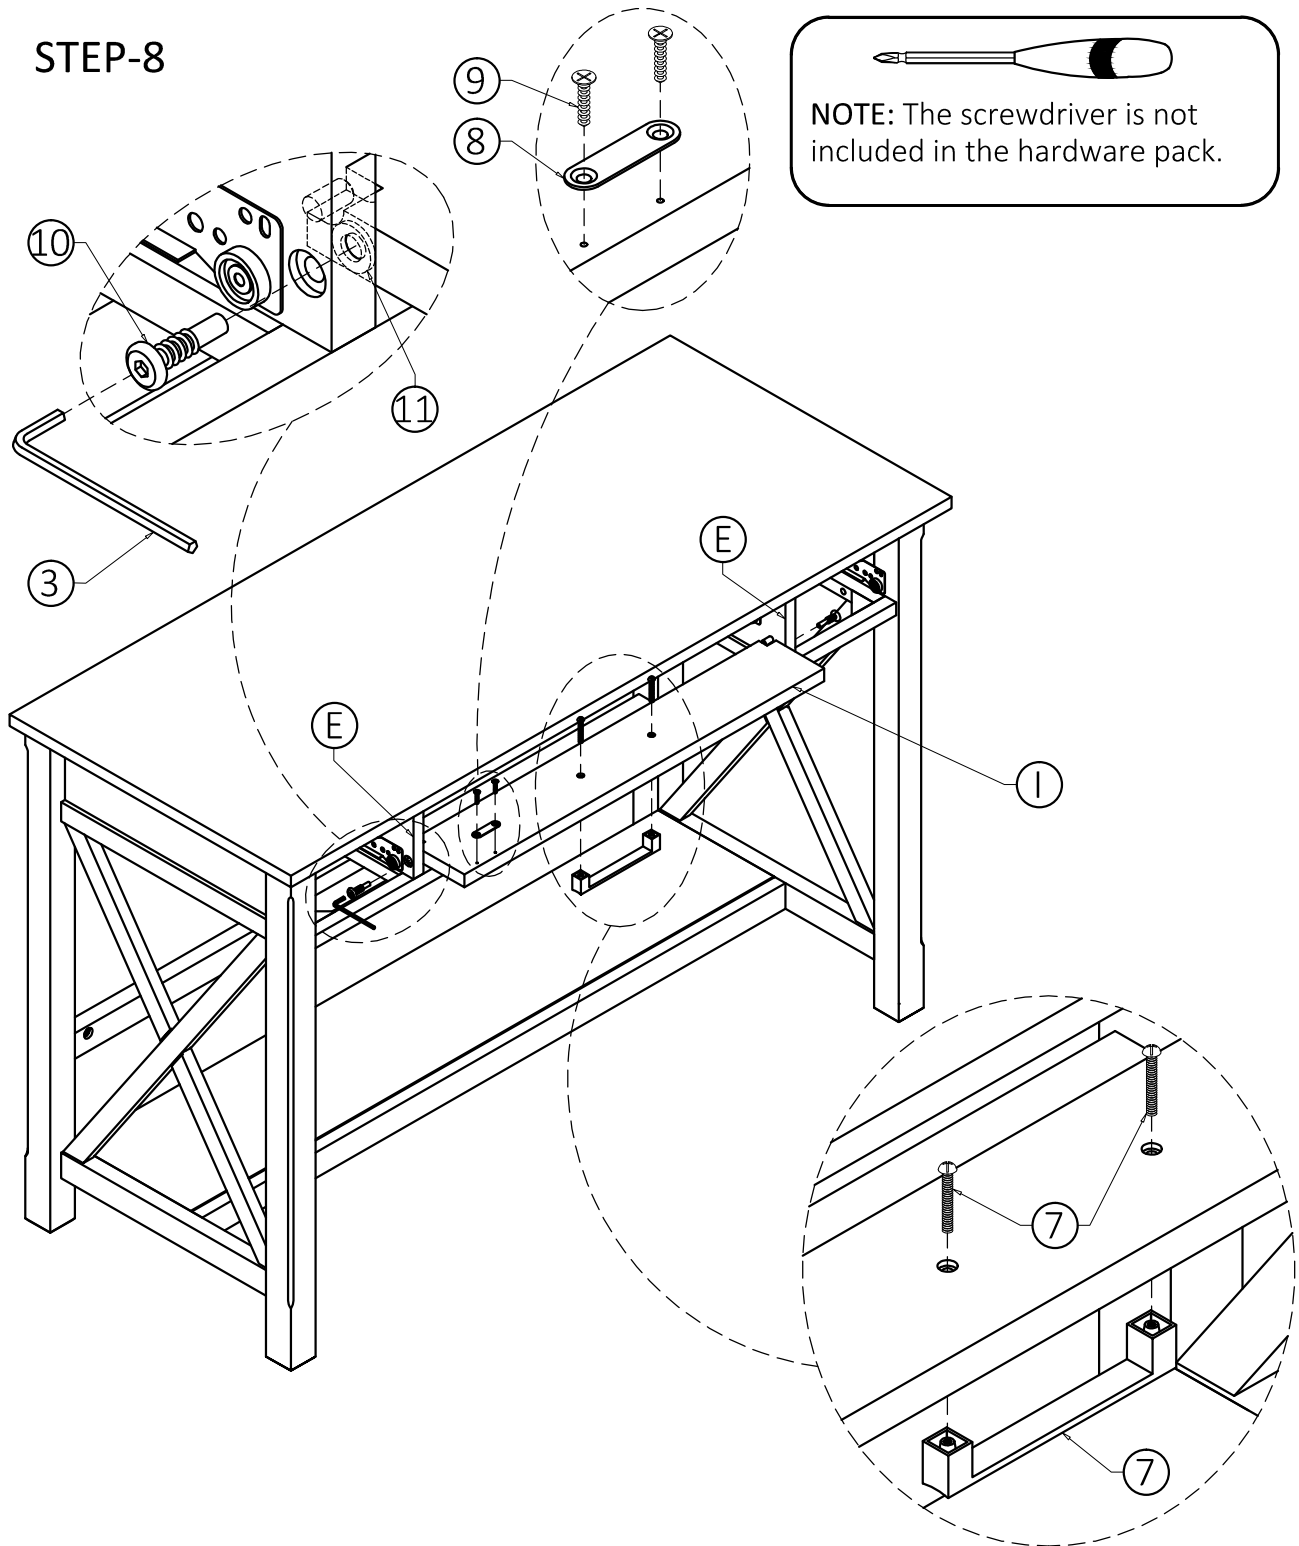

1. Attach Flip Down Drawer (1) to Dividers (E) using Allen Key Bolts (10) and Washer (11) into guide holes (The washers inserted into space between Divider and Flip Down Drawer).
2. Use Allen Key (3) to tighten Bolts.
3. Attach Magnet Plate (8) to corner of Flip Down Drawer (1) using Phillips Screws (9) into guide holes.
4. Use Phillips screwdriver to snugly tighten screw.
5. Use Phillips screwdriver to attach Handle (7) to Flip Down Drawer (1).

 STEP-9

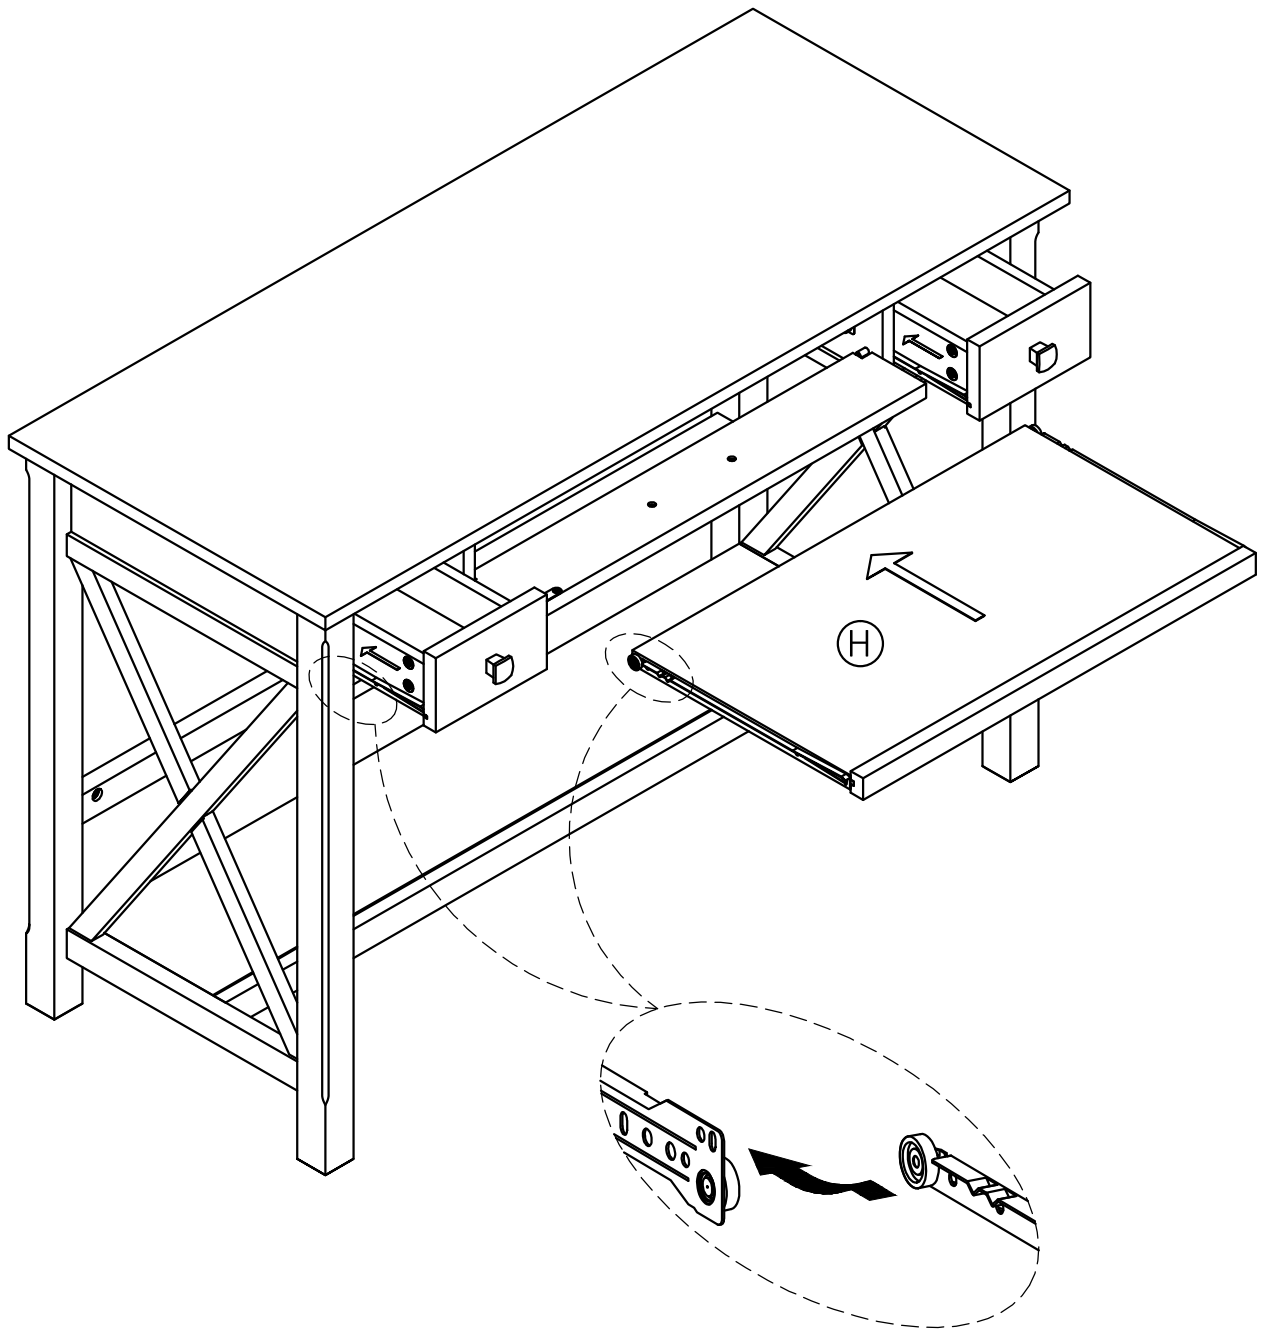

1. Insert assembled drawers and Keyboard (H) into glides on assembled kitchen desk.



WARRANTY

Thank you for purchasing a **Simpli Home – Wyndenhall – Brooklyn + Max** product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at [simpli-home.com/customer-support](https://www.simpli-home.com/customer-support).

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.



Questions, problems, missing parts?

Before returning your product
please email Customer Support at
simpli-home.com/customer-support

or call

Customer Support at 1-866-0518-0120 ext. 262
Monday to Friday between 9 am – 4 pm EST

For more information visit us on our website
www.simpli-home.com

Like us on facebook
www.facebook.com/simplihomefurnishings