

SPRINKLER

General Use Sprinkler
Model



DO NOT OVERTIGHTEN
NUTS AND BOLTS

INSTALLATION

- 1. Remove the cap and gasket from the sprinkler head.
- 2. Insert the sprinkler head into the pipe.



DO NOT OVERTIGHTEN
NUTS AND BOLTS