

TROUBLESHOOTING:

	Possible Cause	Corrective Action
Light will not turn on.	1. Power is off.	1. Make sure power supply is on.
	2. Faulty switch.	2. Test or replace switch.
	3. Faulty wire connection.	3. Check wiring.
Fuse blows or circuit breaker trips when light is turned on.	1. Crossed wires or power wire is grounding out.	1. Check wire connections.

PRODUCT MAINTENANCE:

- To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.
- To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture.
- Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

LIMITED WARRANTY


The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years (except bulb) from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether expressed or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

LED Shop Light Model 8156

INSTALLATION MANUAL



Model 8156 - LED Shop Light

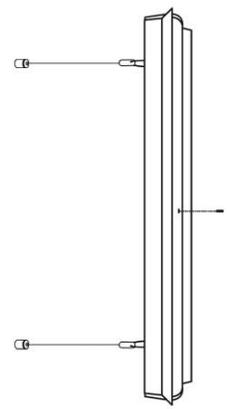

Notes:

1. The lamp should be installed in a minimum distance of 18 inches from any combustible material, to prevent the occurrence of fire hazard
2. Key parts of the heating will cause burns
3. Use a clean cloth or gloves when installing.

- LED driver: 1 00-240 V ~ 50/60 Hz, 35 W , 0.35-0.15 A
- Light source: LED (0.364w*96pcs leds)
- Power: 35w
- Maintenance: Disconnect the power supply, clean the fixture and accessories.
- Inspect the drive inside and keep it dry
- Regular connection

Installation steps

Accessories

- A-01 x2
- A-02 x2
- A-03 x2
- A-04 x1
- A-05 x1
- A-06 x1

1 Cable Mount Installation

2 Cable Mount Installation

1 Ceiling Mount Installation

2 Ceiling Mount Installation

A Connecting the lights

B Connecting the lights

Circuit diagram

LED DE 35 W (0.364 W x 96)

