


MODEL: 90451

PACKING DIAGRAM

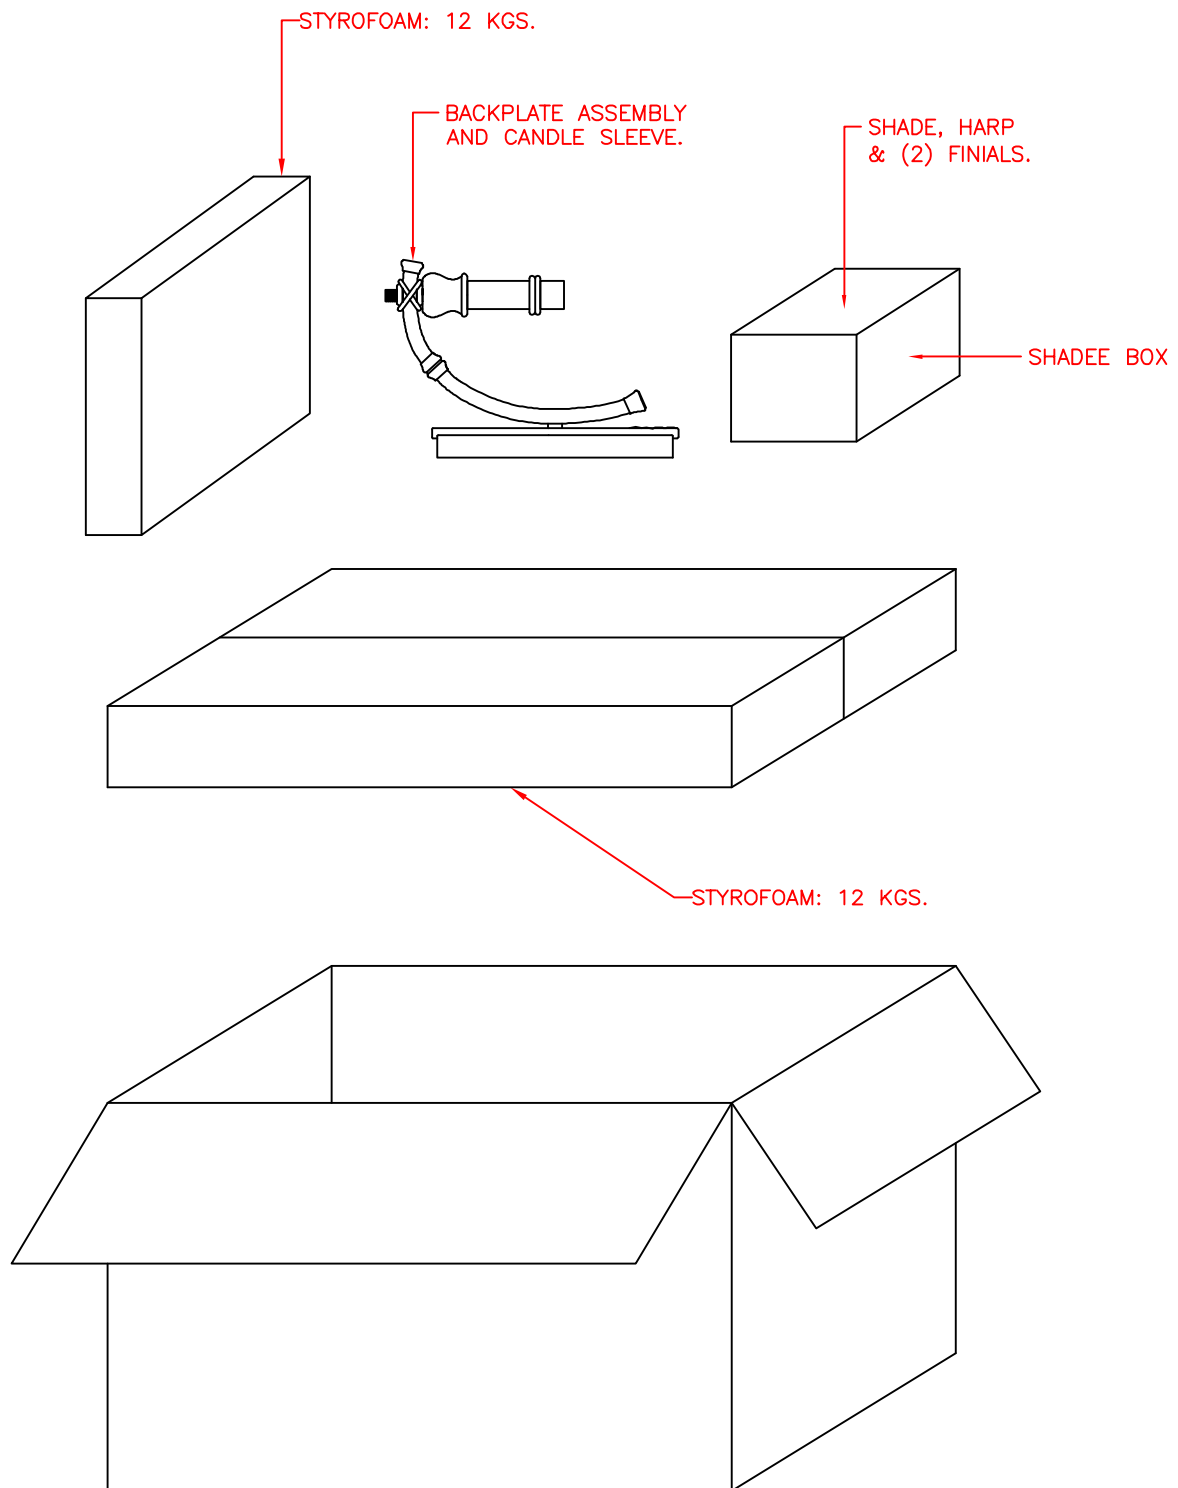

SHADE FINIAL
90456TOPFIN
(REPLACEMENT PART)

SHADE
90456SH
(REPLACEMENT PART)


HARP
HARP
90459HARP
(REPLACEMENT PART)

SOCKET
CANDLE SLEEVE

CANDLE SLEEVE
90459CNDL
(REPLACEMENT PART)

CUP

ARM FINIAL
90456FIN
(REPLACEMENT PART)

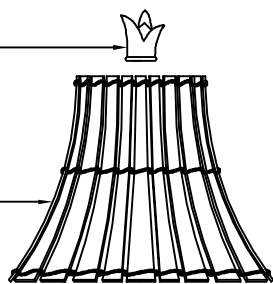

BALL FINIAL

ARM

BACKPLATE

BLACK FIXTURE WIRE

WHITE FIXTURE WIRE

AVAILABLE PARTS ARE:
90456SH (SHADE)
90456TOPFIN (SHADE FINIAL)
90456FIN (ARM FINIAL)
90459HARP (HARP)
90459CNDL (CANDLE SLEEVE)

WIRE
CONNECTOR (3)

8/32 x 1 1/4" SCREWS

MOUNTING PLATE

(2) 8/32 x 1 1/4" SCREWS

BLACK SUPPLY WIRE

WHITE SUPPLY WIRE

SUPPLY GROUND WIRE

OUTLET BOX

GREEN GROUND SCREW

WALL

INSTALLATION INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

CAUTION: TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL. IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRST TURN THE FIXTURE OFF. NEXT, TURN THE WALL SWITCH OFF. FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPES OF FUSES MUST BE UNSCREWED TO SHUT OFF THE POWER.

* ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES.

** IF YOU DO NOT HAVE ELECTRICAL WIRING EXPERIENCE, HAVE YOUR FIXTURE INSTALLED BY A QUALIFIED LICENSED ELECTRICIAN.

*** THIS FIXTURE IS TO BE MOUNTED TO A UL LISTED OUTLET BOX CAPABLE OF SUPPORTING THE WEIGHT OF THIS FIXTURE. THE OUTLET BOX MUST BE DIRECTLY SUPPORTED BY THE BUILDING STRUCTURE.

TOOLS: YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: SCREWDRIVER, PLIERS, ADJUSTABLE WRENCH.

UNPACK THE FIXTURE

TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE. YOU SHOULD HAVE RECEIVED THE FOLLOWING: SHADE, HARP, CANDLE SLEEVE, BACKPLATE ASSEMBLY, (2) FINIALS.

HARDWARE PACK: MOUNTING PLATE, (4) 8-32 x 1 1/4" SCREWS, (3) WIRE CONNECTORS, GREEN GROUND SCREW, (2) BALL FINIALS.

INSTALL THE FIXTURE

1. INSERT SCREWS INTO MOUNTING PLATE TO LINE UP WITH HOLES IN BACKPLATE AND ATTACH MOUNTING PLATE TO OUTLET BOX USING TWO SCREWS PROVIDED WITH THE OUTLET BOX. (NOTE: IF THE SCREWS WITH THE OUTLET BOX ARE TOO SHORT, USE THE (2) 8-32 x 1 1/4" SCREWS PROVIDED IN THE MOUNTING HARDWARE PACKAGE).

2. CONNECT THE WHITE OR RIBBED FIXTURE WIRE TO THE WHITE SUPPLY WIRE IN THE OUTLET BOX USING THE TWIST-ON WIRE CONNECTOR PROVIDED. CONNECT THE BLACK OR SMOOTH FIXTURE WIRE TO THE BLACK SUPPLY WIRE IN THE SAME MANNER. INSTALL THE FIXTURE GROUND WIRE UNDER THE GREEN GROUND SCREW ON THE CROSSBAR THEN CONNECT THE FIXTURE GROUND WIRE TO THE SUPPLY GROUND WIRE IN THE OUTLET BOX USING THE TWIST-ON WIRE CONNECTOR PROVIDED.

3. RAISE FIXTURE TO THE WALL AND CAREFULLY TUCK THE WIRES INSIDE THE OUTLET BOX. SPREAD THE ELECTRICAL SPLICES SO THAT THE BLACK WIRES ARE ON ONE SIDE OF THE OUTLET BOX AND THE WHITE WIRES ARE ON THE OTHER SIDE. LINE UP HOLES IN BACKPLATE WITH (2) SCREWS FROM MOUNTING PLATE AND SECURE WITH (2) BALL FINIALS.

4. SLIDE CANDLE SLEEVE OVER SOCKET AND PLACE HARP ON CANDLE SLEEVE.

5. PRIOR TO INSTALLING THE BULB, PLEASE INSPECT SOCKET FOR SILICA PACKET. IF PACKET IS PRESENT, REMOVE AND THROW AWAY. DO NOT EXPOSE TO CHILDREN AND PETS.

6. INSTALL A 60 WATT MAX. CANDELABRA BULB (NOT INCLUDED) INTO SOCKET.

7. PLACE SHADE ON TOP OF HARP AND SECURE WITH FINIAL.

8. SCREW OTHER FINIAL TO ARM BELOW CUP.

9. RESTORE POWER. YOUR NEW FIXTURE IS NOW READY TO USE.



90451 INSTALLATIONS