

CAUTION: Maintenance

- 1. Replacement parts may be available at the store where you purchased your faucet.
- 2. Always turn off water and relieve pressure before working on your faucet.

NOTES: Cleaning Instructions

- 1. To keep the faucet clean, you should clean the faucet frequently and regularly.
- 2. Clean the faucet with clear water or mild liquid, rinse the faucet with clear water and then dry the faucet with soft cotton cloths.
- 3. Do not use any abrasive cleansers, cloths, or paper towel.
- 4. Do notuse any acid or abrasive detergent.

TROUBLE-SHOOTING

If you've followed the instruction carefully and your faucetstill does not work properly, take these corrective steps.

Problem	Cause	Action
Leaks underneath handle.	Cartridge has come loose.	Tighten the cartridge.
Aerator leaks or has an inconsisitent water flow pattern.	Aerator is dirty or worn out or misfitted.	Unscrew the aerator to clean or replace washer, or replace the aerator.
Water will not shut off completely.	Dirty or worn out washer in cartridge.	Remove handle and cartridge to check if the washer is damaged permanently or dirty. Re-install cartridge.

Wall-Mount Pot Filler Faucet

PACKING LIST

After you open this package, please check to ensure that all of the following items are included.



IMPORTANT NOTICES: Do not use petroleum-based products in this faucet. Observe all local plumbing and building codes.

YOU MAY NEED

Common woodworking and plumbing tools and materials



INSTALLATION PROCEDURES





