 



CARLTON / RICHLAND / STERLING

TV MEDIA STAND

MODEL # 3AXCCRL-08

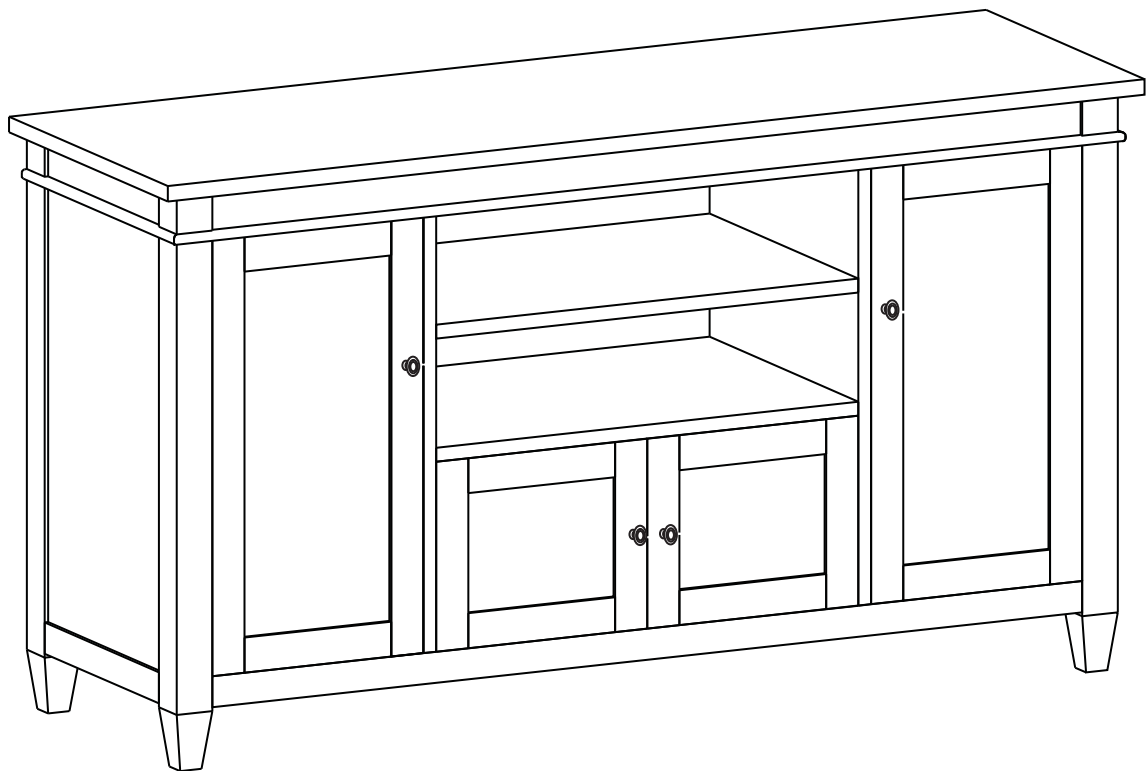

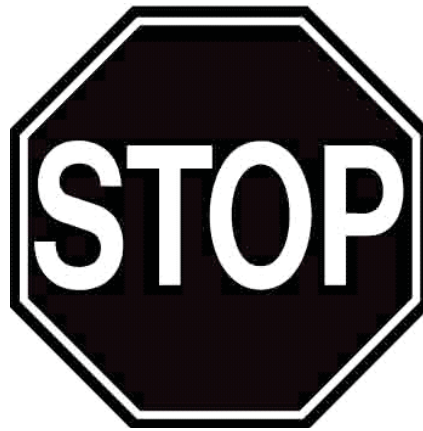

DO NOT RETURN

**FOR REPLACEMENT PARTS OR OTHER INQUIRIES
PLEASE CONTACT US AT:**

simpli-home.com/customer-support

**PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR
INSTRUCTION BOOKLET**

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets.

We recommend that you assemble this unit on a carpeted floor to avoid scratches. We do not recommend the use of power tools for assembly as this could damage the unit. Only use manual tools.

May require 2 people for ease of assembly.

CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish.

 
Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place furniture in direct sunlight.


Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

PARTS DESCRIPTION


A

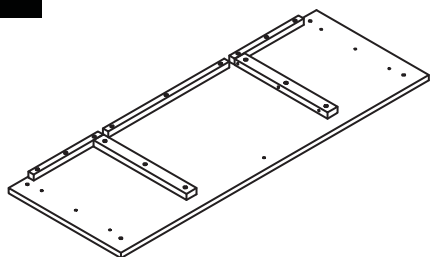TOP
QTY 1

 
B

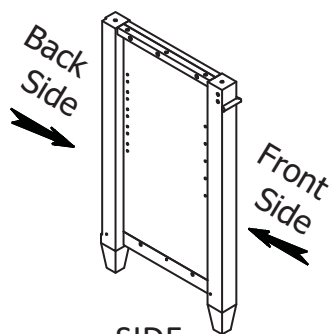SIDE
QTY 1 PAIR

 
C

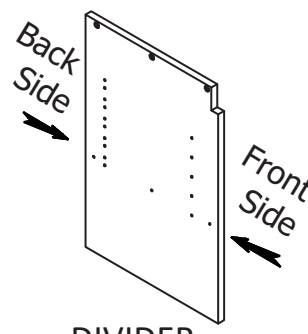DIVIDER
QTY 1 PAIR

 
D

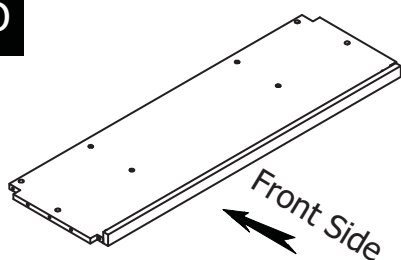BOTTOM PANEL
QTY 1

 
E

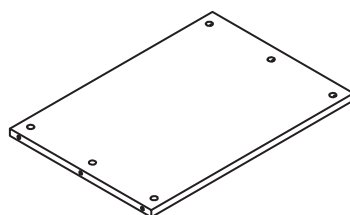TOP SHELF
QTY 1

 
F

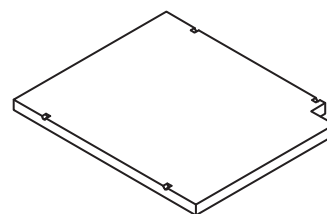CABINET SHELF
QTY 1PAIR

 
G

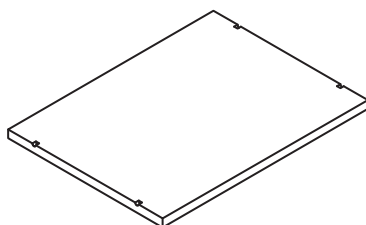CABINET SHELF
QTY 1

 
H

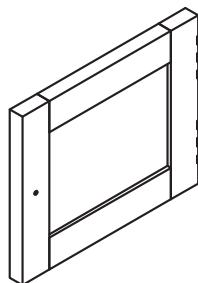DOOR
QTY 1 PAIR

 
I

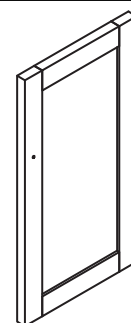DOOR
QTY 1PAIR

 J

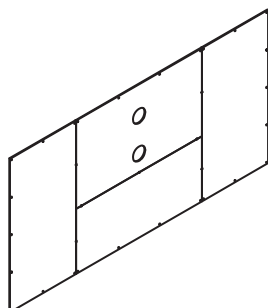BACK PANEL
QTY 1 SET

 
K

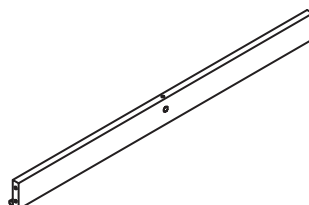FRONT BAR
QTY 1

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 5 pm EST)


HARDWARE DESCRIPTION

 1




ALLEN KEY SCREW
M6 X 30 mm
QTY 18

 2




CAM LOCK PIN
CAM LOCK
QTY 13 SETS

 3




ALLEN KEY
QTY 1

 4

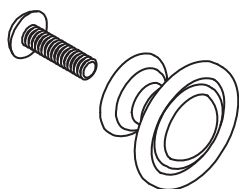

HANDLE
M4 X 25 mm
QTY 4 SETS

 5




PHILLIPS SCREW
ROUND HEAD
M4 X 15 mm
QTY 34

6




WOOD DOWEL
Ø8 X 30 mm
QTY 16

 7

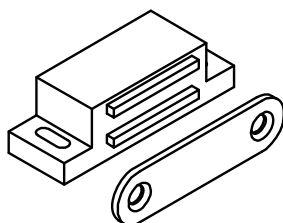


MAGNET AND PLATE
QTY 4 SETS

 8

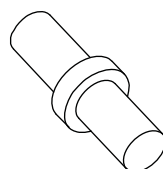

SHELF SUPPORT
QTY 18

 9




PHILLIPS SCREW
M3 X 15 mm
QTY 16

10




PHILLIPS SCREW
M3 X 12 mm
QTY 24

 11

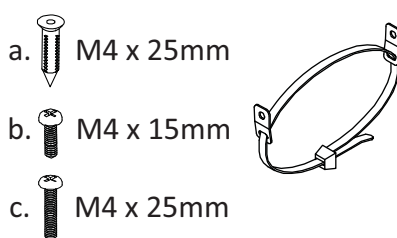


TIPPING RESTRAINT-1 SET

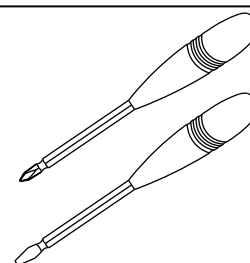 


Required -
Flathead screwdriver
Phillips screwdriver
Not Included

 NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 5 pm EST)

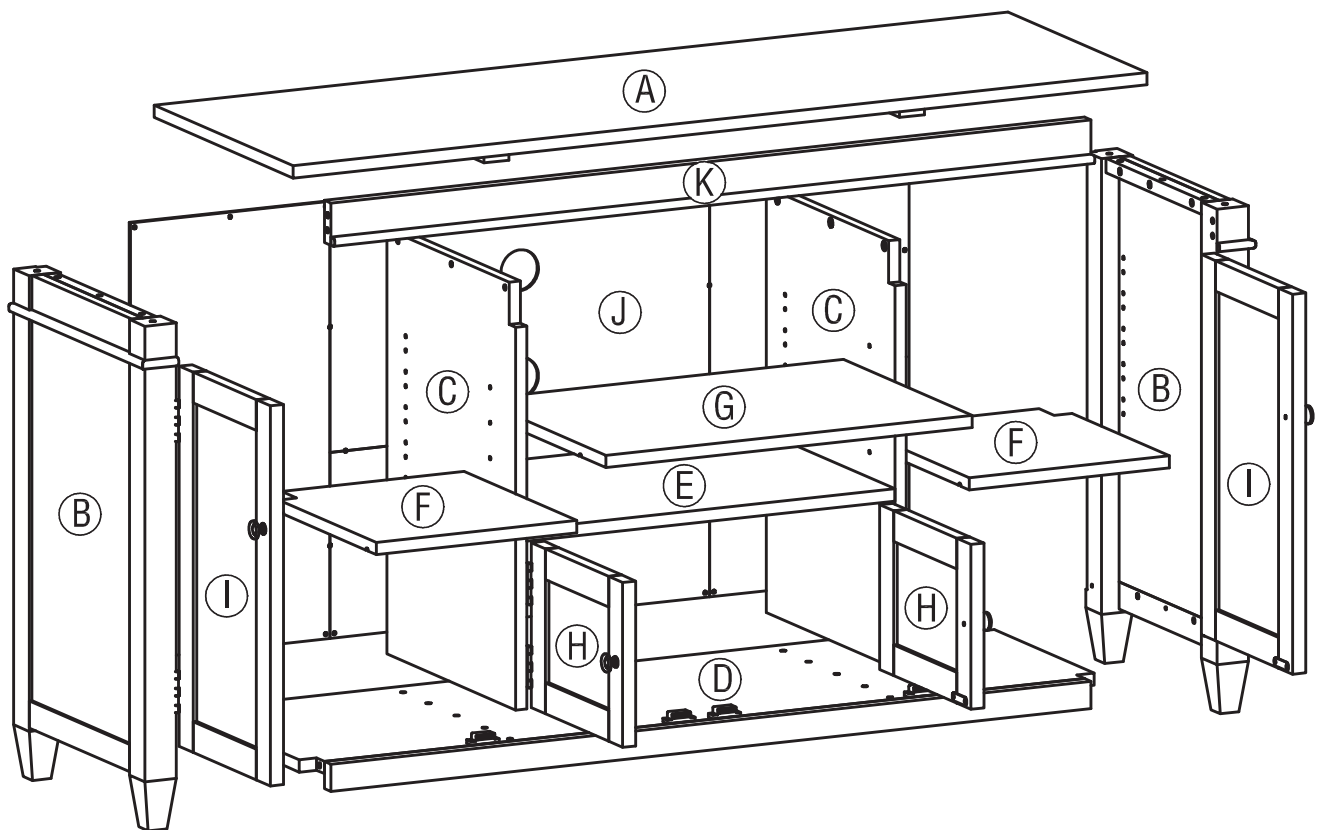


 STEP 1

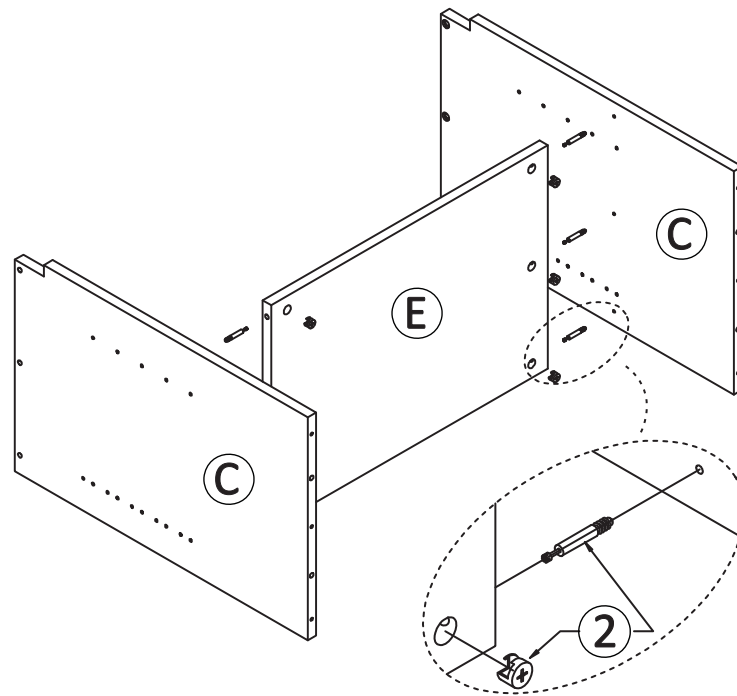


1. Attach 3 Cam Lock Pins ② to each Divider ③ using guide holes.
2. Align Cam Lock ② into pre-drilled hole on Top Shelf ⑤.
3. Insert Cam Lock ② into pre-drilled hole on Top Shelf ⑤.
4. Use flathead screwdriver secure Cam Lock .

 STEP 2

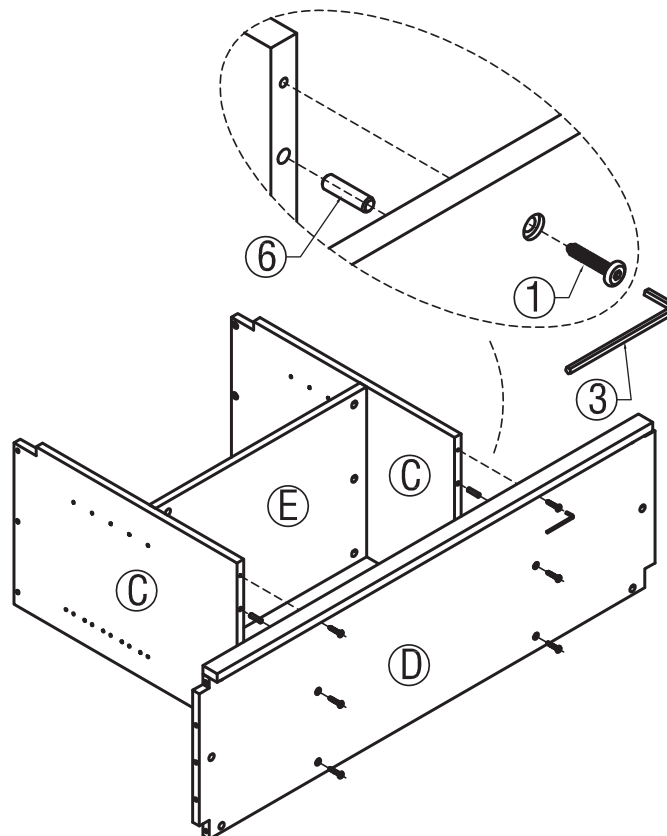


1. Insert Wood Dowels ⑥ into pre-drilled holes of Dividers ③.
2. Attach Dividers ③ to Bottom Panel ④ with Allen Key Screws ① through pre-drilled holes .

 STEP 3

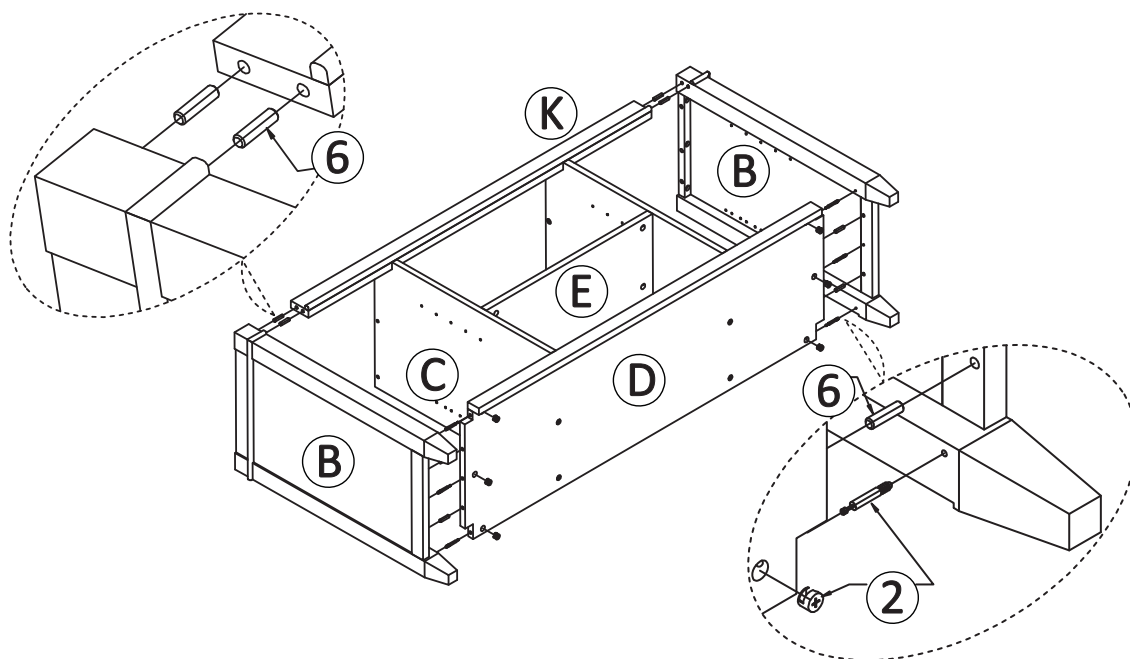


1. Insert Wood Dowels ⑥ into pre-drilled holes of Bottom Panel ④ and Front Bar ①.
2. Attach Cam Lock Pins ② to Sides ② using guide holes.
3. Align Cam Locks Pins ② into pre-drilled holes on Bottom Panel ④.
4. Insert Cam Locks ② into pre-drilled holes in Bottom Panel ④
5. Once in place tighten Cam Locks ② using a flathead screwdriver.

 STEP 4

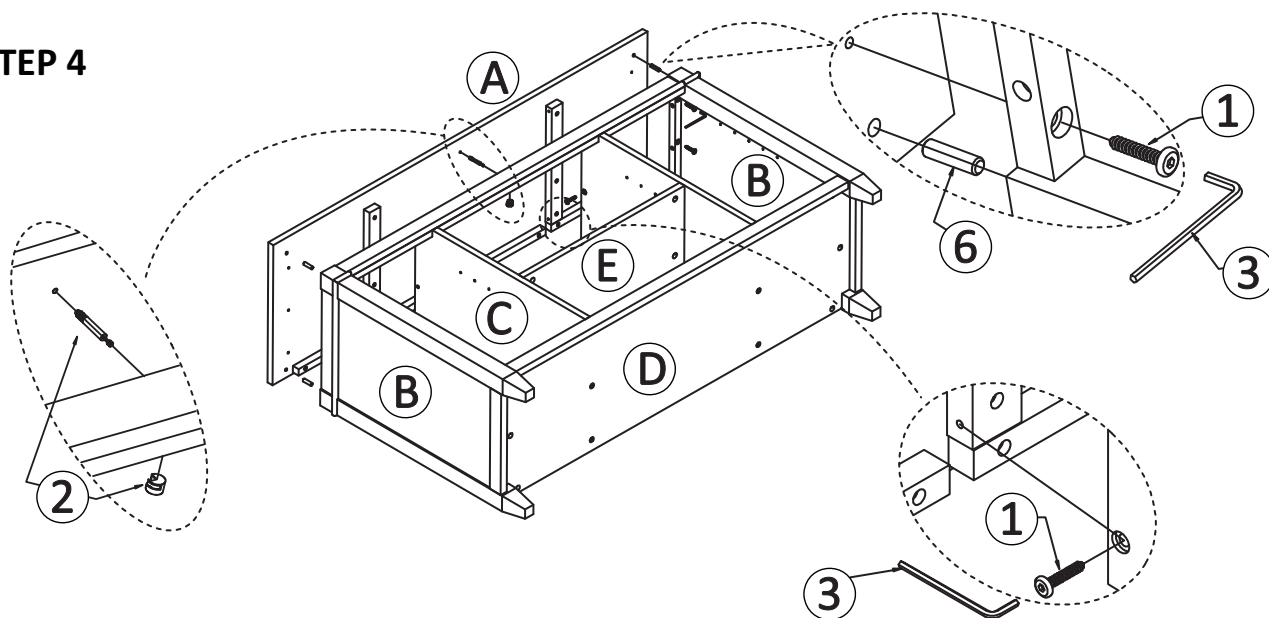


1. Insert 2 Dowels ⑥ into corners of each Side ②.
2. Attach Cam Lock Pins ② to Top ① using guide holes.
3. Align Cam Lock ② into pre-drilled hole on Front Bar ①.
4. Align pre-drilled holes on Bottom corners of Top ① with Dowels ⑥ in Sides ②.
5. Insert Cam Locks ② into pre-drilled holes on Front Bar ①.
6. Using 12 Allen Key Screws ① attach Top ① to Side ② and Divider ③.

 STEP 5




 NOTE: The screwdriver is not included in the hardware pack.

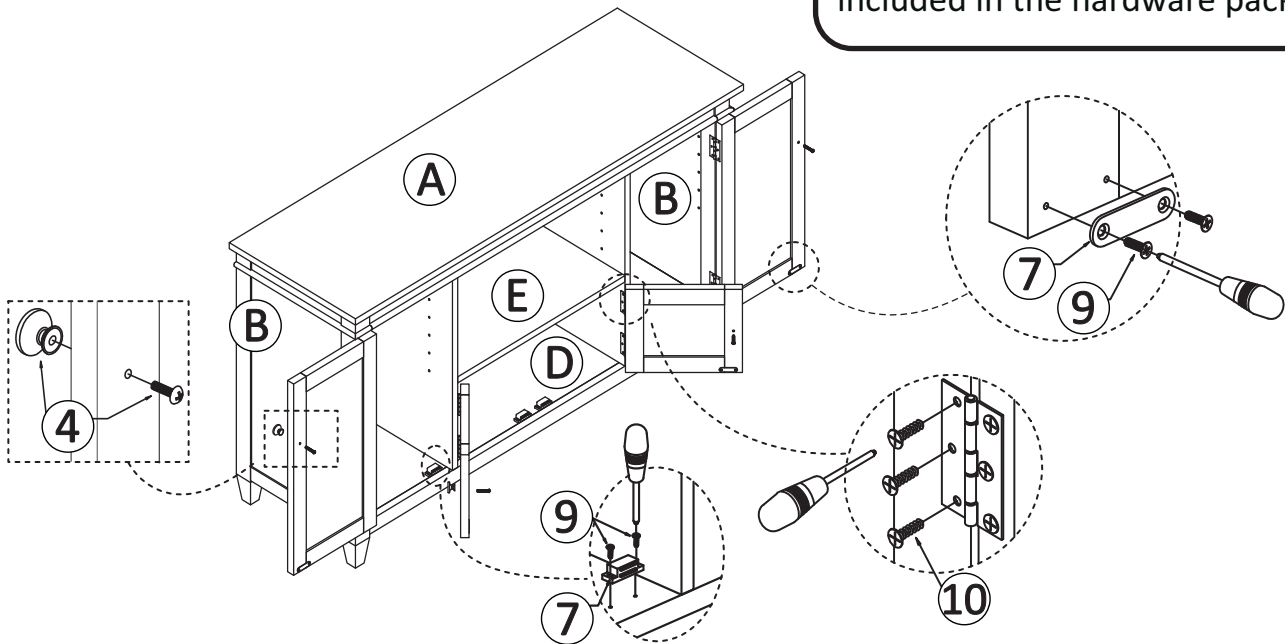


1. Attach hinges on Doors (I) and Sides (B) using Phillips Screws (10).
2. Attach hinges on Doors (H) and Divider (C) using phillips Screws (10).
3. Attach Magnet Plates (7) to Bottom corner of Doors (I) and (H) using Phillips Screws (9) into guide holes on Doors (I) and (H).
4. Attach Magnet (7) using Phillips Screws (9) into guide holes on Bottom Panel (D).
5. Use a Phillips screwdriver to attach Handles (4) to Doors (I) and (H).

 STEP 6




 NOTE: The screwdriver is not included in the hardware pack.

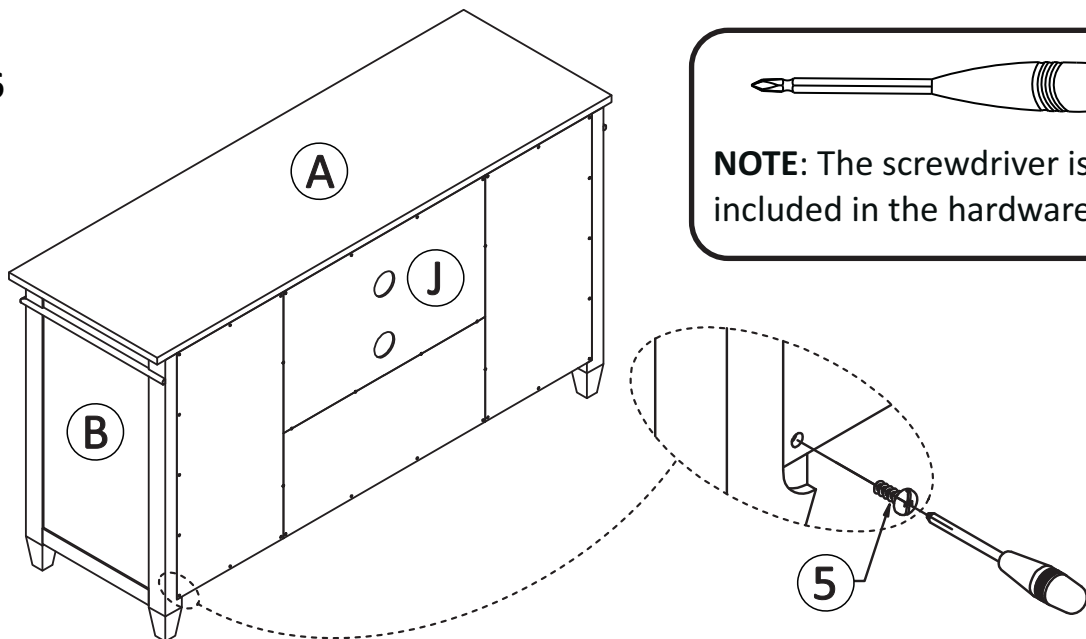


1. Attach Back Panels (J) to back of cabinet using Phillips Screws Round Head (5) into pre-drilled guide holes.
2. Use Phillips screwdriver to tighten screws.

 STEP 7

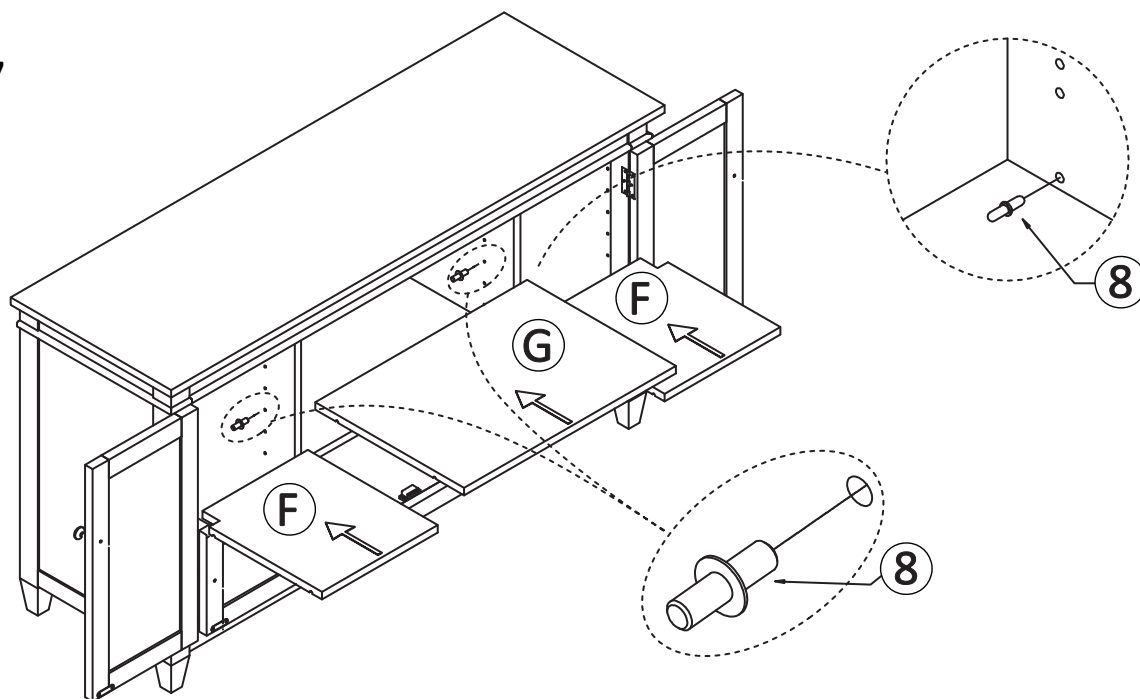

1. Use 4 Shelf Supports (8) for each shelf (F) & (G) in desired location.
2. 2 Shelf Supports (8) may be used on Back Top of each Shelf (F) & (G) as a tipping restraint.

 STEP 8

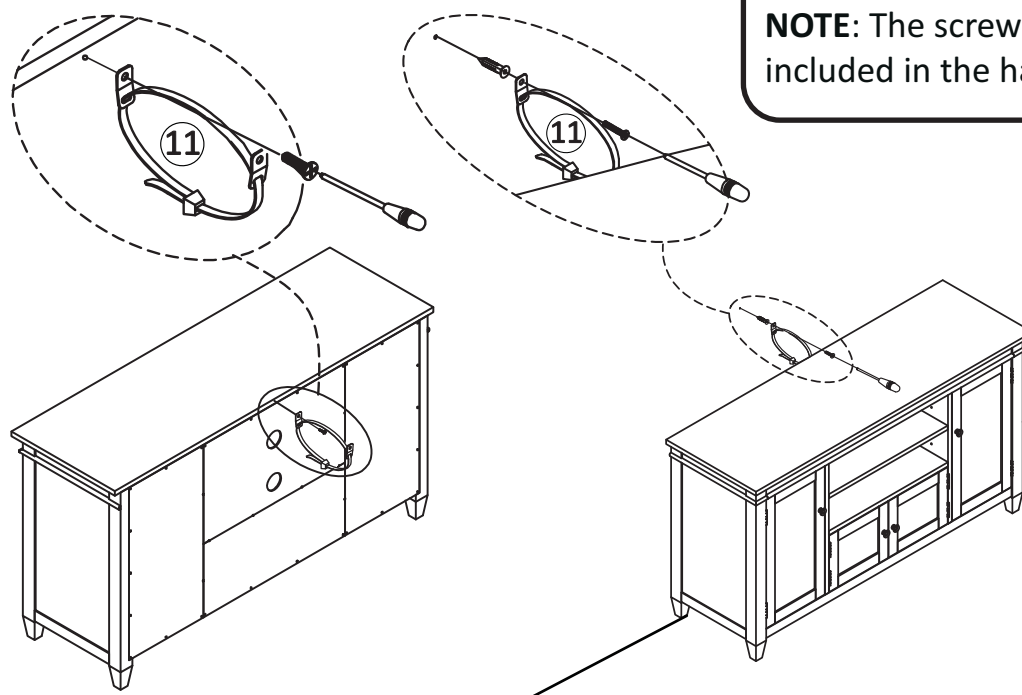

NOTE: The screwdriver is not included in the hardware pack.

1. To attach Tipping Restraint (11), follow instructions on Tipping Restraint package.

When you determined the location for your unit, install the Furniture Tipping restraint. Carefully follow the instructions contained on the package.



WARRANTY

Thank you for purchasing a **Simpli Home – Wyndenhall – Brooklyn + Max** product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 5 pm, Monday to Friday, Eastern Standard Time or by email at simpli-home.com/customer-support.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.

PLEASE NOTE: This item is hand-crafted and hand-finished with utmost care. As such, variations and imperfections should be expected and should be welcomed as the natural beauty of the wood.



Question, problems, missing parts?

Before returning please email Customer Support at
simpli-home.com/customer-support
or call

Customer Service at 1-866-518-0120 ext. 262
Monday to Friday between 9 am – 5 pm EST

For more information visit us on our website
www.simpli-home.com

Like us on facebook
www.facebook.com/simplihomefurnishings



**ENTER
TO WIN**

Upload an image of our furniture in your home with a short review to our facebook page and have a chance to

**Win your choice of any one of
Simpli Home furniture pieces
Free!!!**

www.facebook.com/simplihomefurnishings

(draws monthly – shipping included)

(vanities not included)

