CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when it is not in use. Dust regularly with small brush or vacuum.Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

Please make sure that you have all parts indicated before you begin assembly of this item.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE Q	UANTITY
Α	Back		1X
В	Seat		1X
С	Bottom		1 X
D	Left side		1 X
Е	Right side		1 X
F1	Allen bolt	ூற்றைறைற்றுற்று M6x70	4 X
F2	Allen bolt S	@mmmmmmmmmmmmmmmmmmmmmmmmmmmmmmmmmmmmm	2 X
F3	Allen screw	இற்றைக்கை M6x70	2 X
F4	Allen nut	والمستقدمة (المستقدمة) (المستقدمة) (المستقدمة) (المستقدمة) (المستقدمة) (المستقدمة) (المستقدمة) (المستقدمة) (ال M6x70	2 X
F5	Bolt extra	@mmmmmm M6×50	1 X
F6	Wrench	<u>ی</u>	1 X
F7	Allen key		1 X

SAFAVIEH OUTDOOR

MODEL# PAT6744 Product Dimension : 49.21"W x 22.44"D x 34.65"H

Weight capacity : 550 lbs. Warning : Do not stand on the bench Warning : Do not torque bolts / screws





Before beginning the assembly of the product,make sure all parts are present. Compare the parts with package contents list and hardware contents list. If any parts are missing or damaged,do not attempt to assemble the product. Tool required for assembly (included) : Allen key and Wrench.



Step1: attach the left side (D) to the seat (B), back (A), bottom (C) as shown on the picture.Using the Allen bolt (F1), the Allen screw (F3) and tighten with the Allen key (F7). Make sure you don't tighten too tight and you will do at the end.



Step 3: Use the Allen bolt S (F2) to fix the back (A) as shown on the picture by using the Allen key (F7).



Step 2: repeat with the right side (E) as step 1 as shown on the picture. At last tighten all bolts and screws.



Step 4: put the bottom (C) using the Allen nut (F4) as shown on the picture. Tighten the Allen nut (F4) by using the Allen key (F7) and wrench (F6).