ASSEMBLY INSTRUCTIONS

(For LD8176-11) Parts List Schema Description QTY Remark Pieces Screw 2 (M8*35) А В 2 \bigcirc Flat washer (M8) С 2 Lock washer (M8) Hard ware 2 \bigcirc Nut D (M8) pack Ε 2 (M8) Nut cap F 5 Wrench 1 3 2 1 1 Seat 2 2 - -Single alu plate Â 2 Alu plate 3 2 21- 3 Spring plate 4 5 (M8*35) Screw 4 6 (M8*45) Screw 4 These parts have been 7 Flat washer 8 (M8) assemble by factory 8 Lock washer 8 (M8) G already. 9 Nut 8 (M8) (H (M8))8 10 Nut cap 11 (M6*20) Screw 2 12 2 Flat washer (M6) 13 2 (M6) Lock washer 14 1 TR Parts ð Н 1 Base 1 2 1 Oil cap 6 Foot leveler J 1 Seat Cushion



WARNING!

O This chair has a 275 lbs weight capacity.

O Hang cushion over chair frame to dry if it gets wet to prevent mold/mildew.

ATTENTION:

- 1. Please read these instructions carefully before assembly.
- 2. Check parts against the parts list to make sure you have all parts needed for proper assembly.
- 3. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.

