

## ASSEMBLY INSTRUCTION



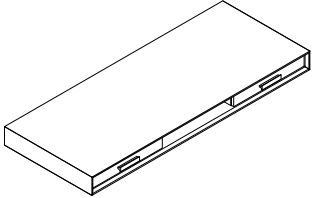

 
 
 




Sunpan Product Name: **ALMA DESK**

Please visit our website [www.sunpan.com](http://www.sunpan.com) for more great products.

For assembly questions please call **1-800-787-1019 (or +1-416-736-0094)** outside North America or email to [info@sunpan.com](mailto:info@sunpan.com)

### PARTS LIST

Before you begin, please layout all parts and ensure you have the correct count.

PARTS	DESCRIPTION	QUANTITY	ILLUSTRATION
A	WOOD TOP	1	
B	METAL LEGS	2	
C	METAL LEGS	2	
D	BOLTS (M6x20mm)	4	
E	BOLTS (M6x40mm)	2	
F	FLAT WASHERS (Ø6.5/Ø19)	6	
G	BOLTS (M8x20mm)	8	
H	FLAT WASHERS (Ø8.5/Ø19)	8	
I	ALLEN KEY	1	

## ASSEMBLY INSTRUCTIONS

STEP	DESCRIPTION	ILLUSTRATION
1	Attach Metal Legs (B) to Metal Legs (C) by using the Allen Key (I) to fix Bolt (G) and Flat Washer (H).	
2	<p>2: Attach Metal Legs (B) to the Wood Top (A).</p> <p>2a: Use Allen Key (I) to fix Bolt (D) (M6x20mm) to the front side of the desk.</p> <p>2b: Use Allen Key (I) to fix Bolt (E) (M6x40mm) to the back side of the desk.</p>	
3	Assembly completed.	

### ASSEMBLY TIPS:

Please check parts and hardware before assembling. Follow each instruction step by step.  
 Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.  
 Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.  
 Please follow instructions in the sequence as numbered to assure fast/easy assembly.

### WARNING:

Don't attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement.  
 Keep all hardware parts out of the reach of children.

### FURNITURE CARE:

Following these few basic steps will help to ensure that you enjoy your furniture for a long time:  
 Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.  
 Excessive exposure to sunlight may cause fading.  
 Excessive temperature and humidity or cold may cause cracking or splitting.  
 Dust with a clean, damp, lint free cloth.  
 Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface.  
 Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.