

20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. Please keep this number for your records.

View our full warranty: polywoodoutdoor.com/warranty



Having trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at hello@polywoodoutdoor.com or (833) 665-6300



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on ¹/₃ bleach and ²/₃ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD

Assembly Instructions



Farmhouse 37" Dining Table



RT236 Round 36" Dining Table RT248 Round 48" Dining Table



NCT37 NCT44 Nautical 37" Nautical 44" Dining Table Dining Table

Thank You

Thank you for choosing POLYWOOD! We hope our furniture helps create a gathering place for you and your loved ones to enjoy for many years to come!



Join the POLYWOOD Owner's Community

Sign up at: polywoodoutdoor.com/welcome

As a POLYWOOD Owner, you'll be among the first to access exclusive information about new product launches, special promotions, and giveaways.



Questions? Please contact us: hello@polywoodoutdoor.com (833) 665-6300



For assembly tips and videos visit: polywoodoutdoor.com/assembly

polywoodoutdoor.com

Share your space

We love to see where our furniture ends up — snap a pic and tag it on Instagram or Facebook for your chance to be featured on our social channels! #polywood #rethinkoutdoor



facebook.com/polywoodoutdoor





pinterest.com/polywood




youtube.com/polywood



Did you know?


On average, POLYWOOD recycles 400,000 milk jugs a day!

Learn more about our story: genuinePOLYWOOD.com

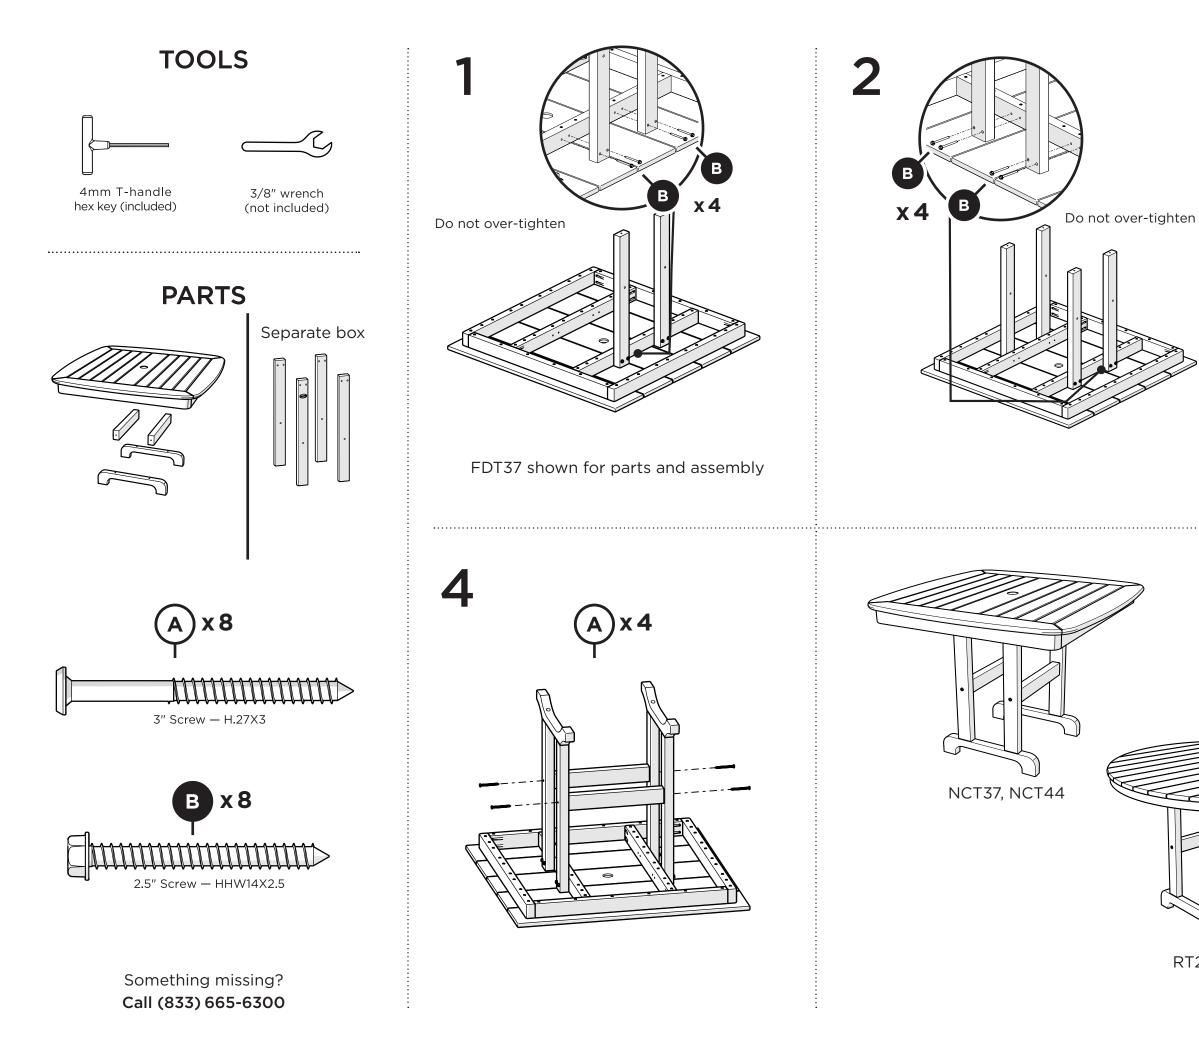


POLYWOOD

RT236, RT248

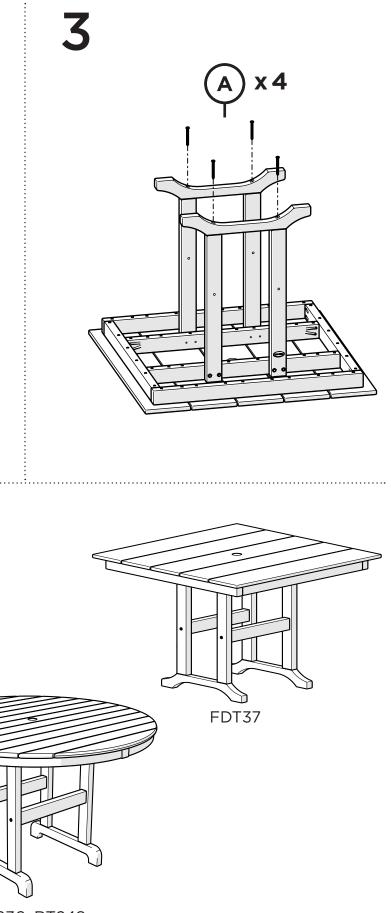

POLYWOOD

Assembly Instructions

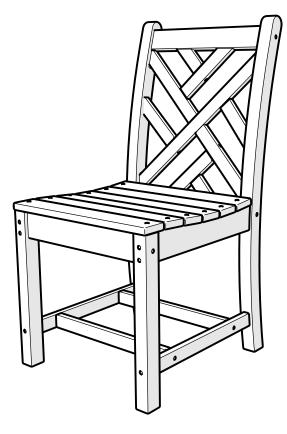



Hole Plug — HSP.312x.25 (Extra)

NO ASSEMBLY REQUIRED

CDD100 Chippendale Dining Side Chair

polywoodoutdoor.com

Thank You

Thank you for choosing POLYWOOD! We hope our furniture helps create a gathering place for you and your loved ones to enjoy for many years to come!



Reach Out

Let us know how we're doing: hello@polywoodoutdoor.com (833) 665-6300



Be the first to hear about new products, giveaways, and more by signing up for our email list: **polywoodoutdoor.com/subscribe**



Watch & Learn

For assembly tips and videos visit: polywoodoutdoor.com/assembly

Share your space

We love to see where our furniture ends up — snap a pic and tag it on Instagram or Facebook for your chance to be featured on our social channels! #polywood #rethinkoutdoor

facebook.com/polywoodoutdoor

@POLYWOOD

pinterest.com/polywood

youtube.com/polywood



Did you know?

POLYWOOD was the original outdoor furniture made from recycled materials.

Learn more about our story: genuinePOLYWOOD.com



20-year warranty

View our full warranty: polywoodoutdoor.com/warranty



Having trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at hello@polywoodoutdoor.com or (833) 665-6300



Cleaning tips

For a Quick Clean: Simply wipe down with soap and water.

For a Deep Clean:

Wipe on ¹/₃ bleach and ²/₃ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a ¹/₃ bleach and ²/₃ water solution and scrub with a softbristle brush. Hose down to rinse.