
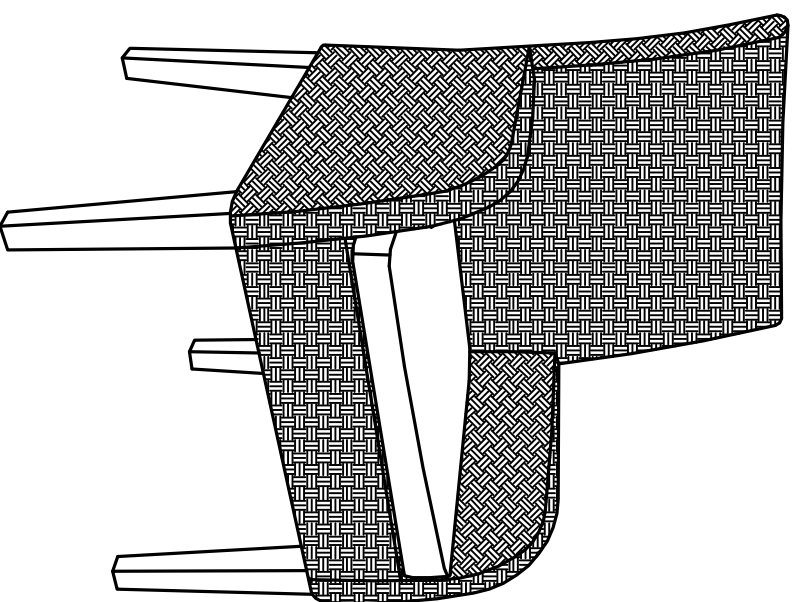
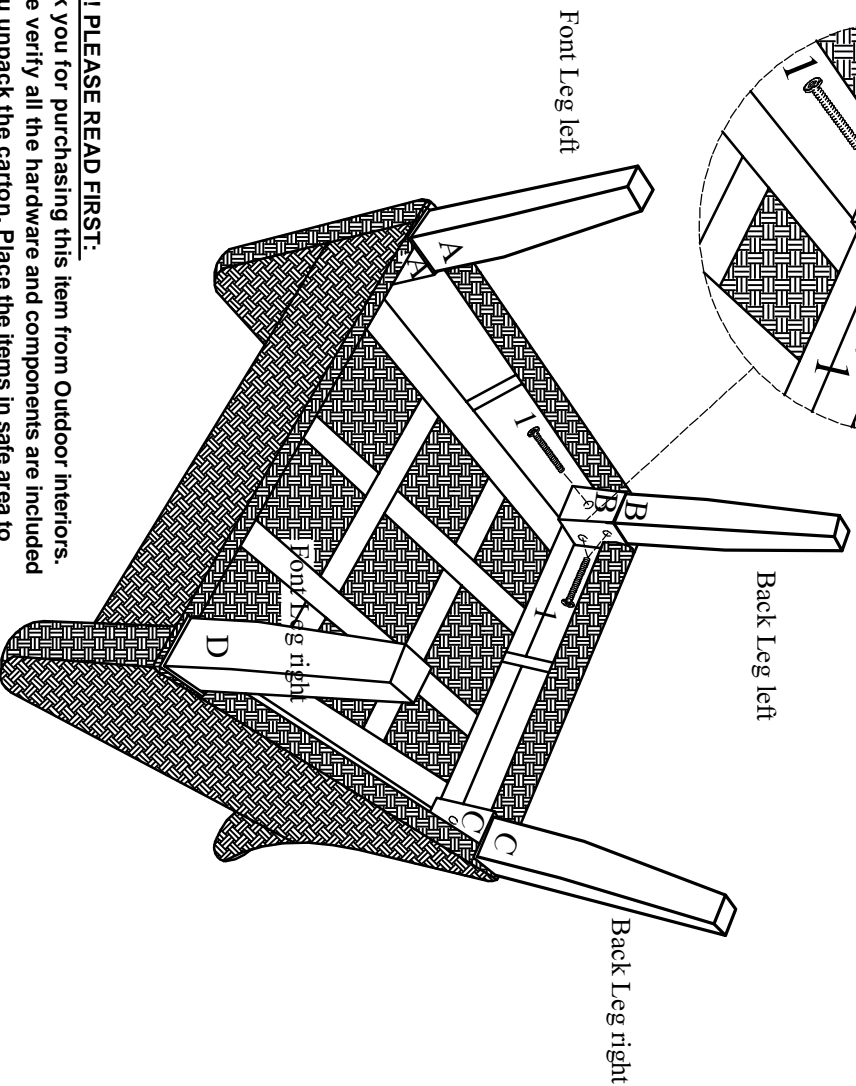


## ASSEMBLY INSTRUCTIONS

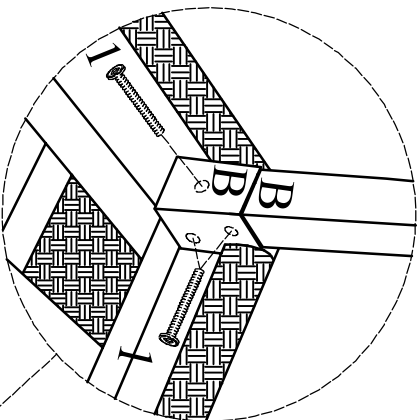

### All Weather Wicker & Teak Dining Chair (ASH)

**IMPORTANT NOTE:**

Each leg requires assembly for the purpose of shipping ease and to prevent damage. Each leg is identified by Letter A, B, C & D and must match up to the corresponding letter identified on the seat frame prior to assembly. Do not fully tighten until all (3) bolts per leg are aligned and then seated into the threading inside each leg. Then fully tighten prior to use.



**STOP! PLEASE READ FIRST:**  
 Thank you for purchasing this item from Outdoor Interiors. Please verify all the hardware and components are included as you unpack the carton. Place the items in safe area to avoid loss and damaging contents. Use a soft area or use the empty box to assembly the item.

ASSEMBLY PARTS LIST	
1	 12pieces
2	 2piece