

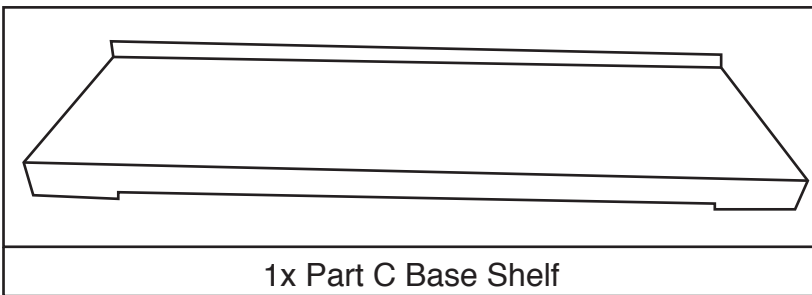


# LAUNDRY CART ASSEMBLY INSTRUCTIONS

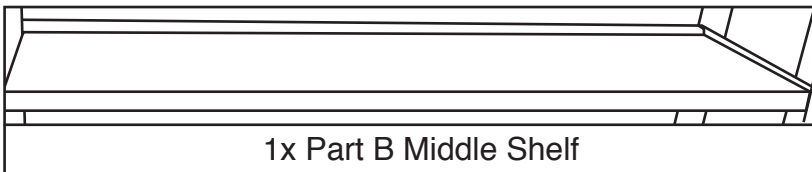

## PARTS LIST

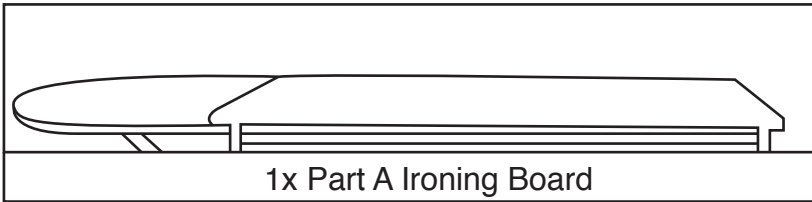

1x Part D Left Side	1x Part E Right Side	4x Part F Baskets	1x Part G Allen Key	20x Part H Screws	4x Part I Wheels

[www.cornerhousewares.com](http://www.cornerhousewares.com)  
[support@cornerhousewares.com](mailto:support@cornerhousewares.com)




Corner Housewares  
 3665 A RT 112 Coram, NY 11727  
 866-304-3936

**PRODUCT WARRANTY**  
 Corner Housewares offers replacement of items and parts with factory defects within one year of dated sales receipt. Customers may call toll free: 866-304-3936 or email [support@cornerhousewares.com](mailto:support@cornerhousewares.com)


# ASSEMBLY STEPS



1. Attach I caster wheels to part C

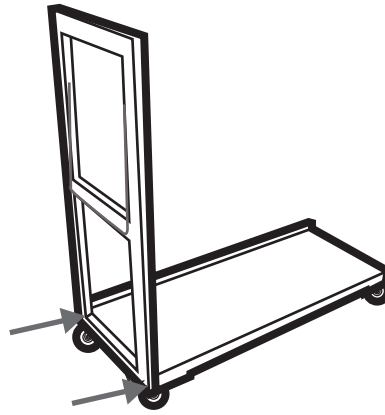

2. Attach D to C using (4x) H

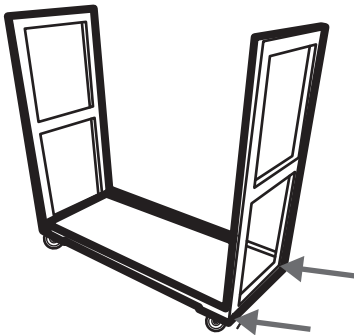

3. Attach E to C using (4x) H




4. Attach B to D using (4x) H




4. Attach B to E using (4x) H



6. Place A on top of D and E. Use (2x) H to fasten E to A.

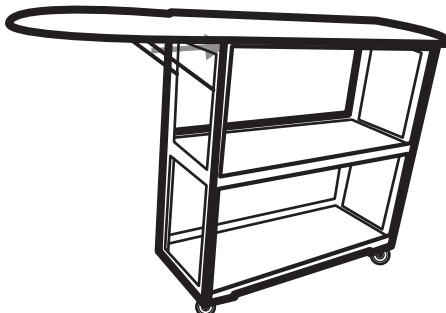

7. Open ironing board, supported by metal rack. Fasten D to A using (2x) H.

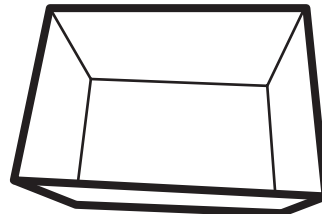

7. Unfold E (Basket) with fabric liner.

[www.cornerhousewares.com](http://www.cornerhousewares.com)  
[support@cornerhousewares.com](mailto:support@cornerhousewares.com)



Corner Housewares  
 3665 A RT 112 Coram, NY 11727  
 866-304-3936

**PRODUCT WARRANTY**  
 Corner Housewares offers replacement of items and parts with factory defects within one year of dated sales receipt. Customers may call toll free: 866-304-3936 or email [support@cornerhousewares.com](mailto:support@cornerhousewares.com)