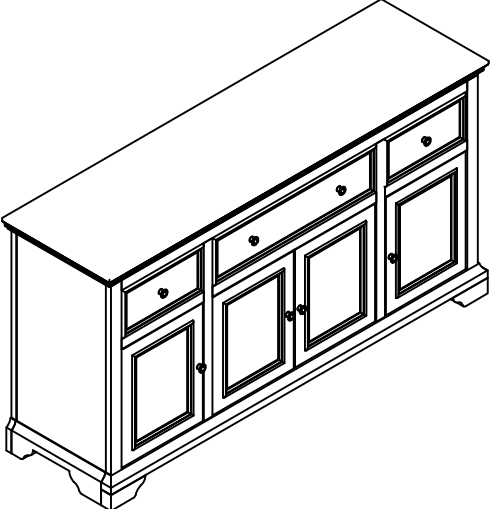 
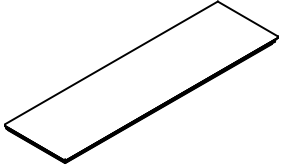 
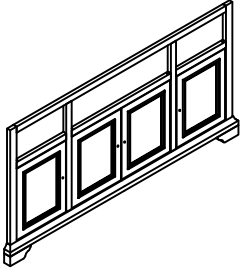 
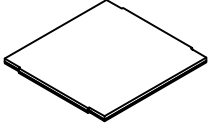 
 
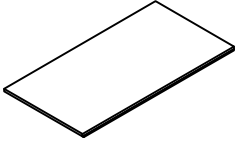 
 
 
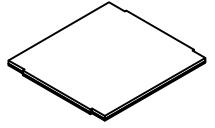 
 
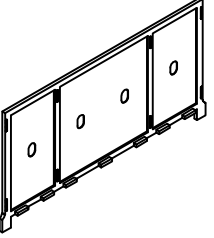 
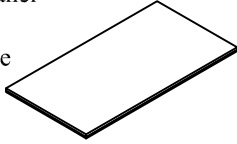 
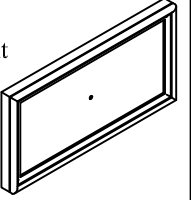 


PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS

ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D419-102










DESCRIPTION / DESCRIPCIÓN/Description : ANT. BLACK KD FOUR DOOR THREE DRAWER CONSOLE / KD QUATRE PORTE TROIS CONSOLE DE TIROIR / CONSOLA KD CUATRO PUERTAS TRES CAJONES

	(A) X1 Top panel X1 Techo X1 Le toit 	(E) X1 Front frame X1 Placa inferior X1 Plaque de fond 	(I) X2 L/R Bottom Panel X2 Placa base X2 Plaque Carte mère 
	(B) X1 Left side panel X1 Panel izquierdo X1 Panneau gauche 	(F) X1 Middle shelf X1 Laminados X1 Produits laminés 	(J) X1 Right partition panel 
	(C) X1 Right side panel X1 Panel lateral derecho X1 Panneau latéral droit 	(G) X2 Left/Right shelf X2 Plato medio X2 Plaque médiane 	(K) X1 Left partition panel 
	(D) X1 Back panel X1 Placa posterior X1 Fond de panier 	(H) X1 Middle Bottom Panel X1 Piso intermedio X1 Étage intermédiaire 	(L) X2 Left/Right Drawer Front 

PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS

ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D419-102

         
DESCRIPTION / DESCRIPCIÓN/Description : ANT. BLACK KD FOUR DOOR THREE DRAWER CONSOLE / KD QUATRE PORTE TROIS CONSOLE DE TIROIR / CONSOLA KD CUATRO PUERTAS TRES CAJONES

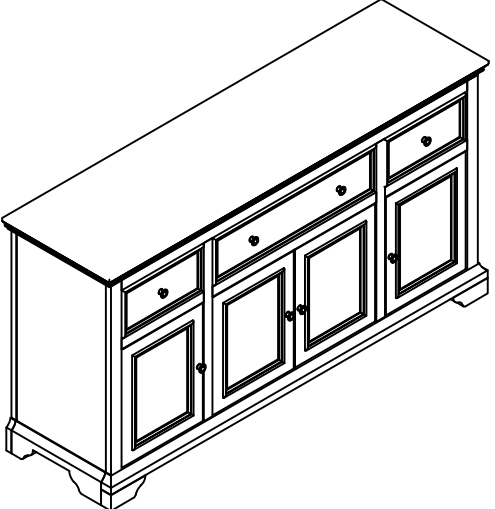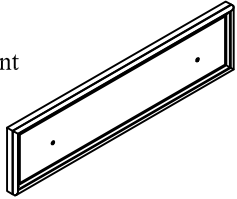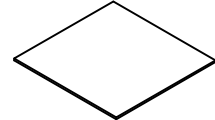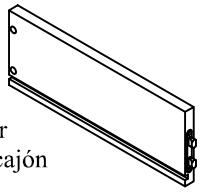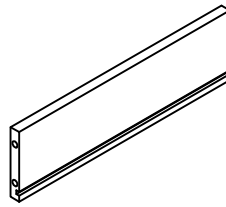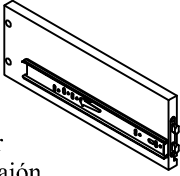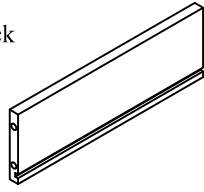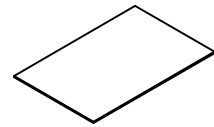	Ⓜ X1 Mid Drawer Front 	Ⓚ X2 Left/Right Drawer Bottom 	① X12 Bolt Ø1/4"*23mm X12 Perno Ø1/4"*23mm X12 Boulon Ø1/4"*23mm 
	Ⓝ X3 Drawer right X3 Côté droit du tiroir X3 Lado derecho del cajón 	Ⓡ X1 Mid Drawer Back 	② X12 Shelf Support Ø6.5mm X12 Soporte laminado Ø6.5mm X12 Support en stratifié Ø6.5mm 
	Ⓞ X3 Drawer left X3 Côté gauche du tiroir X3 Lado izquierdo del cajón 	Ⓢ X2 Left/Right Drawer Back 	③ X8 Handle screw Ø5/32"*19mm X8 Tornillo de la manija Ø5/32"*19mm X8 Vis de poignée Ø5/32"*19mm 
	Ⓟ X1 Mid Drawer Bottom 		④ X8 Knob X8 Manéjar X8 Poignée 

PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS


ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D419-102

 DESCRIPTION / DESCRIPCIÓN/Description : ANT. BLACK KD FOUR DOOR THREE DRAWER CONSOLE / KD QUATRE PORTE TROIS CONSOLE DE TIROIR / CONSOLA KD CUATRO PUERTAS TRES CAJONES

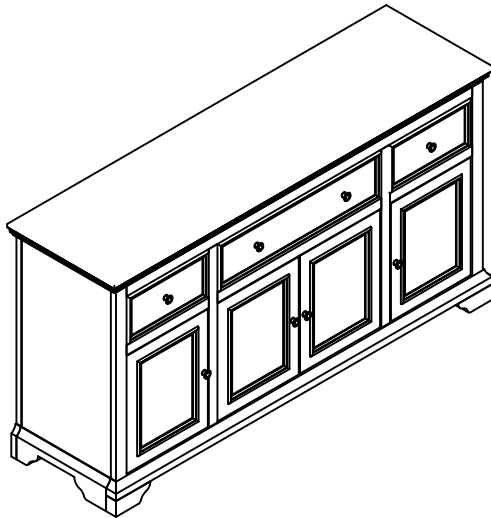


Step 1.

 Align the hardware of L/R Side Panels and L/R Partiton Panels (Parts B&K&J&C) into Back Panel (Part D) and press down to secure into place making sure that the holes in the panels are facing inward.

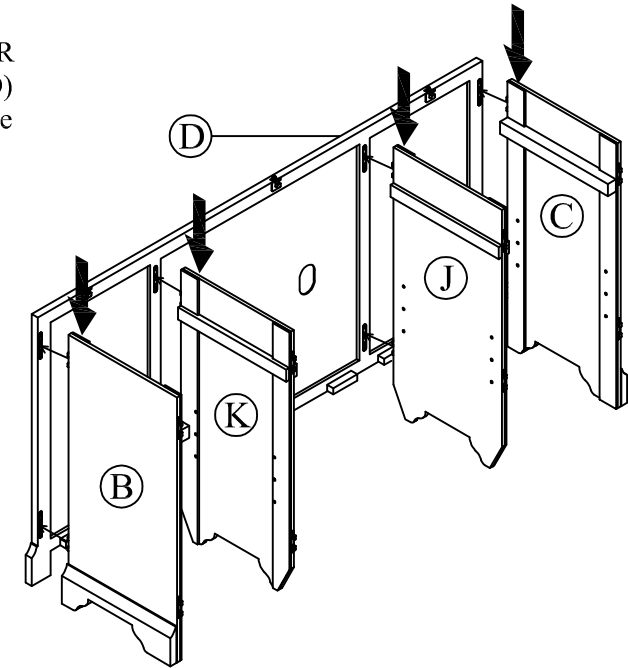

Step 2.

 
Insert the hardware on panels (Parts B,C,J&K) into the hardware on Front Panel (Part E) and press down to secure into place. Make sure that the tops of the side panels and front frame are flush.

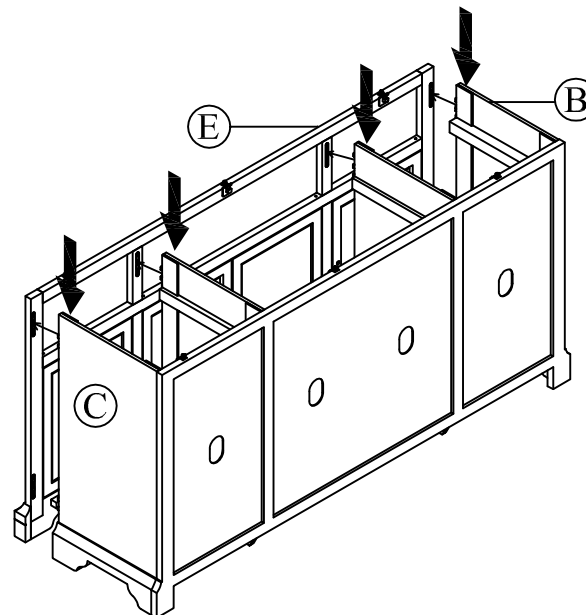

PARTS LIST / LISTE DES PIECES / LISTA DE PIEZAS



ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D419-102

 DESCRIPTION / DESCRIPCIÓN/Description : ANT. BLACK KD FOUR DOOR THREE DRAWER CONSOLE / KD QUATRE PORTE TROIS CONSOLE DE TIROIR / CONSOLA KD CUATRO PUERTAS TRES CAJONES

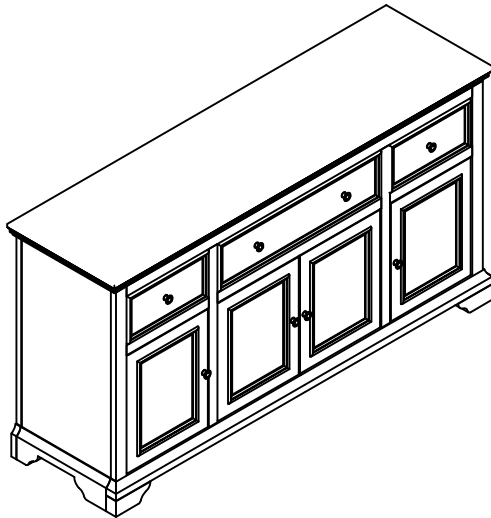

Step 3.

  Open the doors and insert L/R/Middle Bottom Panels (Part I&H) inside the frame to the position where the bottom of frame.

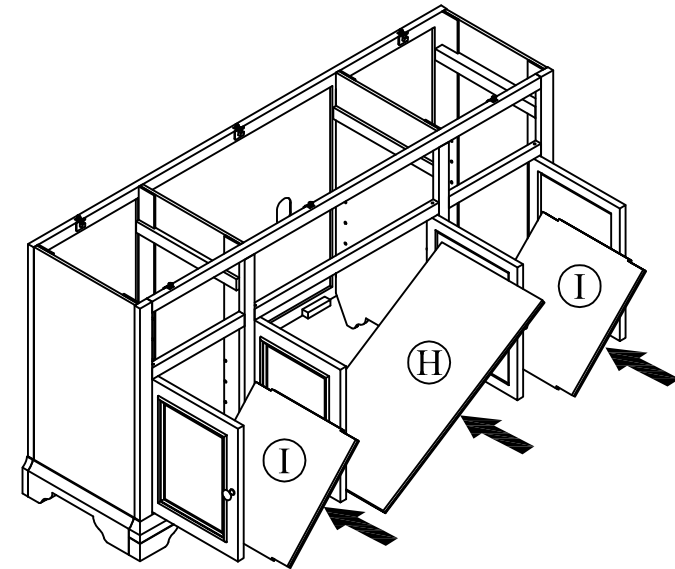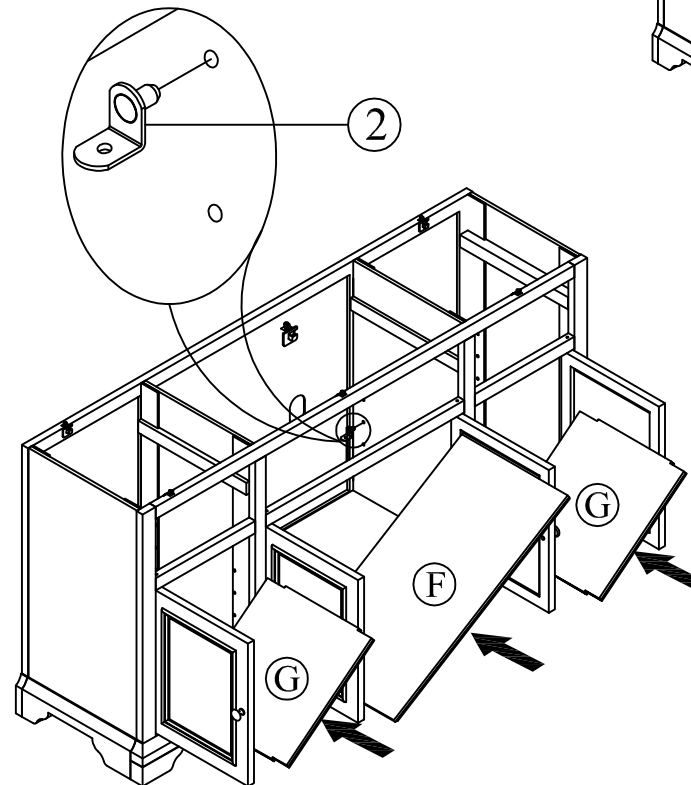


Step 4.

Insert Shelf Supports (Part 2) into the holes as shown. Then, insert the Adjustable Shelves (Part G&F) into the cabinet to the position where there are shelves support.

PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS


ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D419-102

 DESCRIPTION / DESCRIPCIÓN/Description : ANT. BLACK KD FOUR DOOR THREE DRAWER CONSOLE / KD QUATRE PORTE TROIS CONSOLE DE TIROIR / CONSOLA KD CUATRO PUERTAS TRES CAJONES

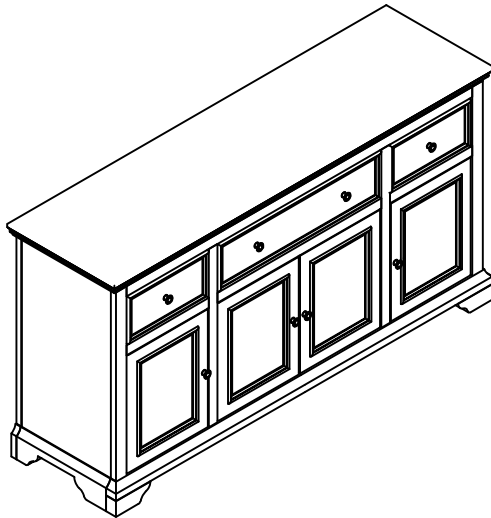


Step 5.

 Insert the Handle Screws for the Knob (Part 3) into the holes from the back side of the doors. Add the Knobs (Part 4) and turn the handle screws clockwise to tighten. You will need a phillip head screw driver to tighten completely.

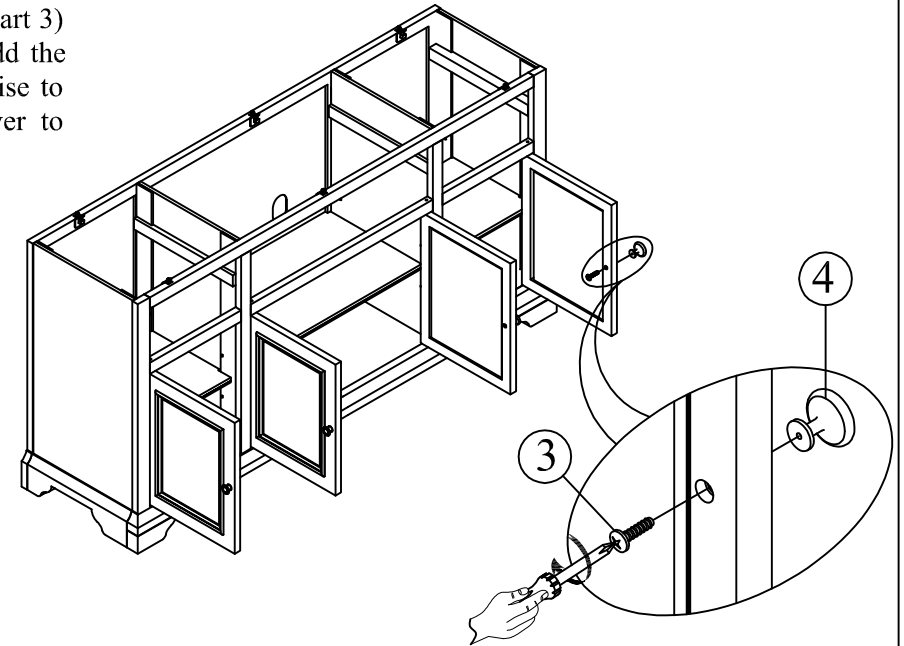

Step 6.

 
Make sure that all of the switch locking hardware in the panels are in the open position as indicated by the straight arrow in the diagram then align the hardware in the Top Panel (Part A) with the hardware on the top of frame and press down so make sure the top panel is flush with the panels. Lock the top panel into place by turning the switches indicated the by the curved arrow in the diagram below.

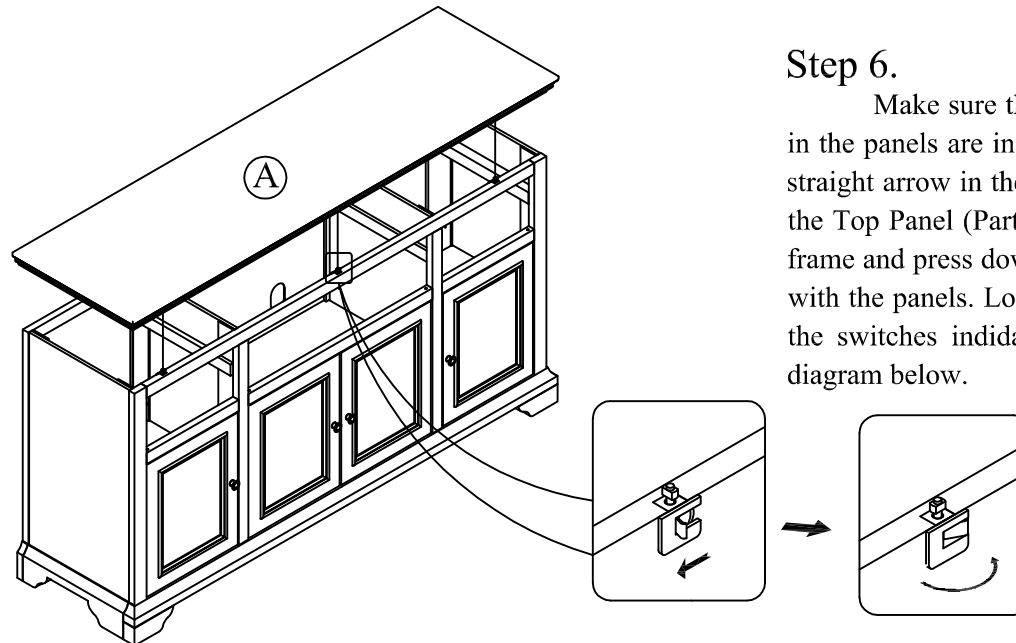

PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS



ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D419-102

 DESCRIPTION / DESCRIPCIÓN/Description : ANT. BLACK KD FOUR DOOR THREE DRAWER CONSOLE / KD QUATRE PORTE TROIS CONSOLE DE TIROIR / CONSOLA KD CUATRO PUERTAS TRES CAJONES

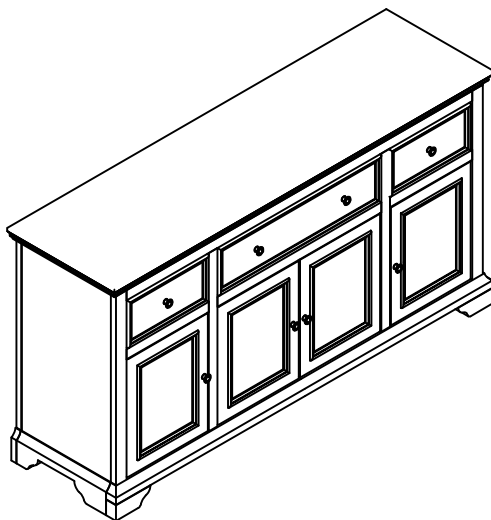

Step 7.

  Align the hardware on the L/R Drawer (Part O & N) with the hardware on the Mid Drawer Front (Part M) making sure that the grooves on the drawer sides are facing in and at the bottom of the drawer. Apply downward pressure to secure the drawer sides in place. Note that the grooves in the side panels and drawer front should be aligned to allow for the drawer bottom to be fully inserted. Also ensure the the drawer glides are facing out.

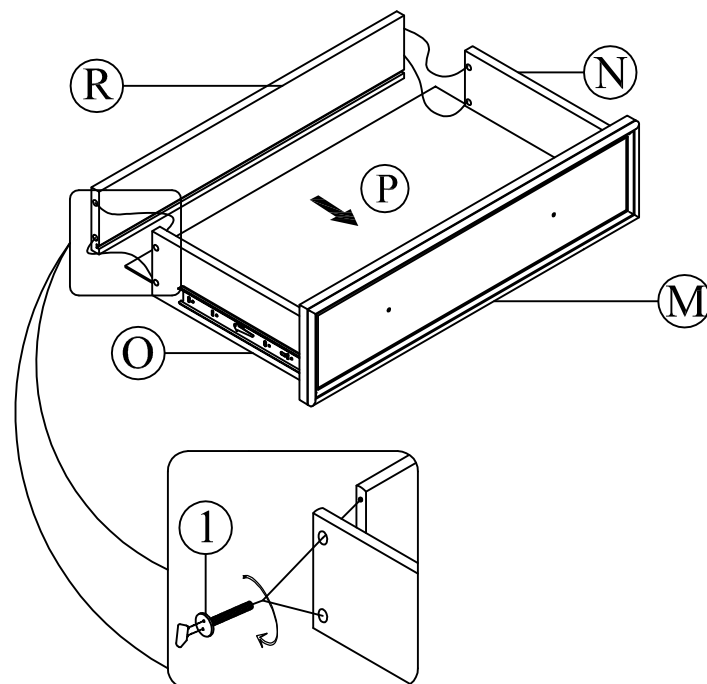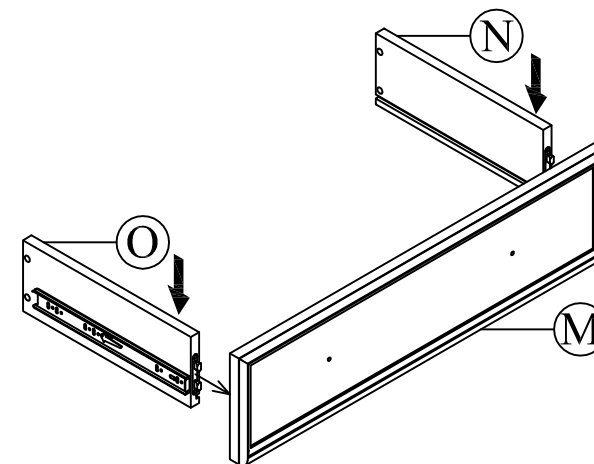


Step 8.

Insert the Mid Drawer Bottom (Part P) into the grooves in the side panels and press forward until the front edge goes completely into the groove in the drawer front. Add the Mid Drawer Back (Part R) making sure the mid bottom panel insert completely into the grooves. Insert Bolts (Part 1) and turn clockwise to tighten completely.

PARTS LIST / LISTE DES PIÉCES / LISTA DE PIEZAS



ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D419-102

 DESCRIPTION / DESCRIPCIÓN/Description : ANT. BLACK KD FOUR DOOR THREE DRAWER CONSOLE / KD QUATRE PORTE TROIS CONSOLE DE TIROIR / CONSOLA KD CUATRO PUERTAS TRES CAJONES

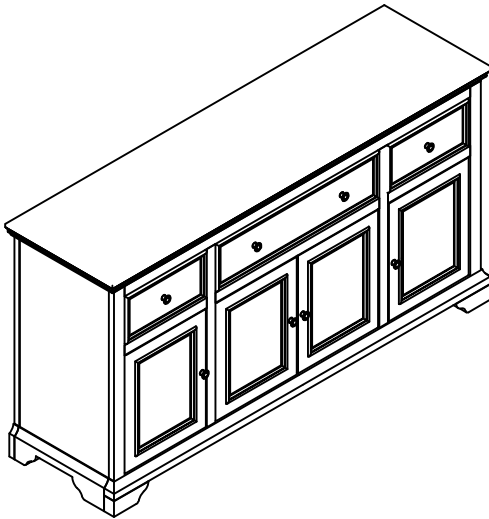

Step 9.

  Align the hardware on the L/R Drawer (Part O & N) with the hardware on the L/R Drawer Fronts (Part L) making sure that the grooves on the drawer sides are facing in and at the bottom of the drawer. Apply downward pressure to secure the drawersides in place. Note that the grooves in the side panels and drawer front should be aligned to allow for the drawer bottom to be fully inserted. Also ensure the the drawer glides are facing out.

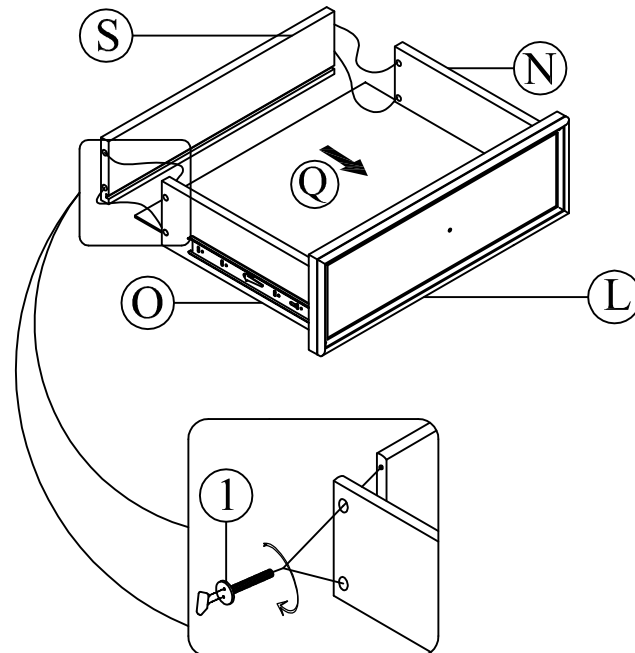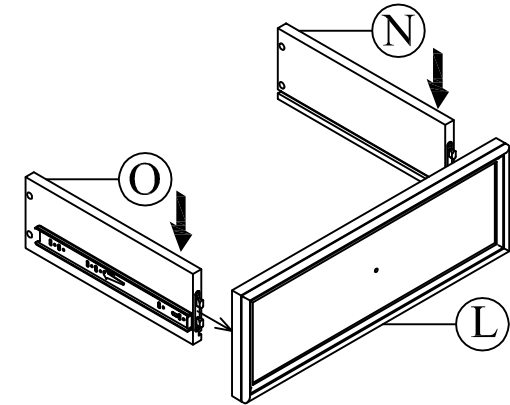

Step 10.

Insert the L/R Drawer Bottoms (Part Q) into the grooves in the side panels and press forward until the front edge goes completely into the groove in the drawer front. Add the L/R Drawer Backs (Part S) making sure the bottom panels insert completely into the grooves. Insert Bolts (Part 1) and turn clockwise to tighten completely.

 
 
PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS

 
ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D419-102

DESCRIPTION / DESCRIPCIÓN/Description : ANT. BLACK KD FOUR DOOR THREE DRAWER CONSOLE / KD QUATRE PORTE TROIS CONSOLE DE TIROIR / CONSOLA KD CUATRO PUERTAS TRES CAJONES

Step 11.

Insert the handle screws (part 1) into the holes from the back side of the drawer fronts. add the knobs (part 4). use a phillips head screwdriver to tighten the bolt by turning clockwise. do not turn the handle itself to tighten. you will scratch the drawer front if you do. align the drawer glides with those in the cabinet and press forward. open and close the drawer to get a smooth glide.

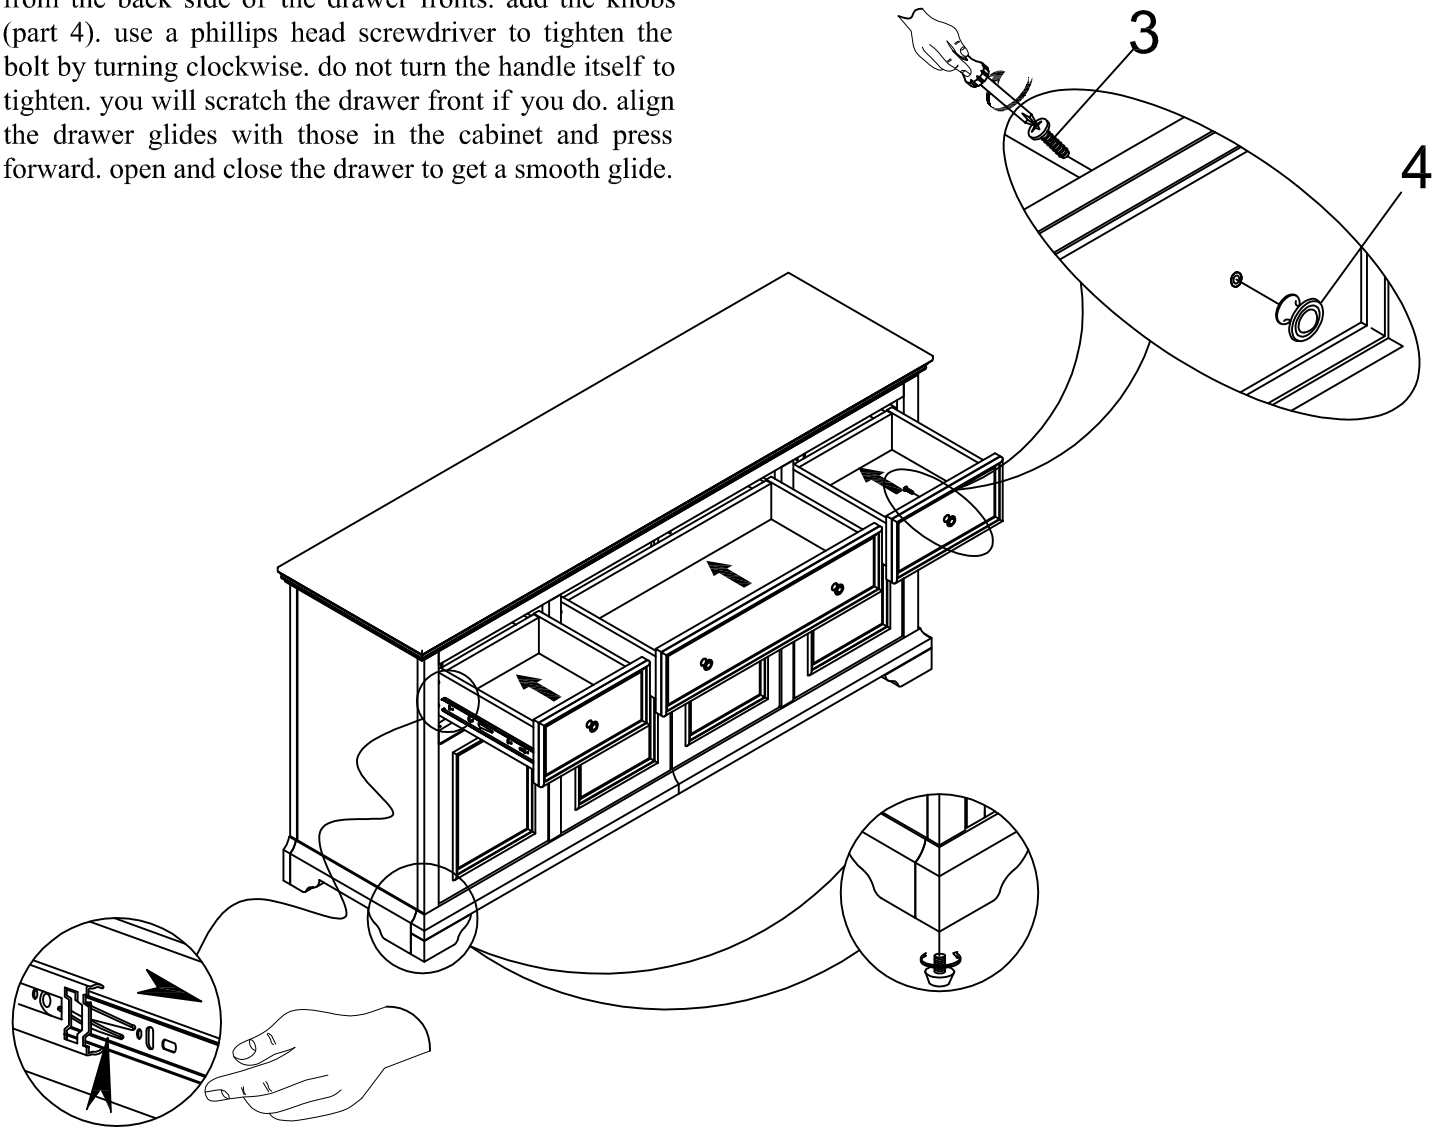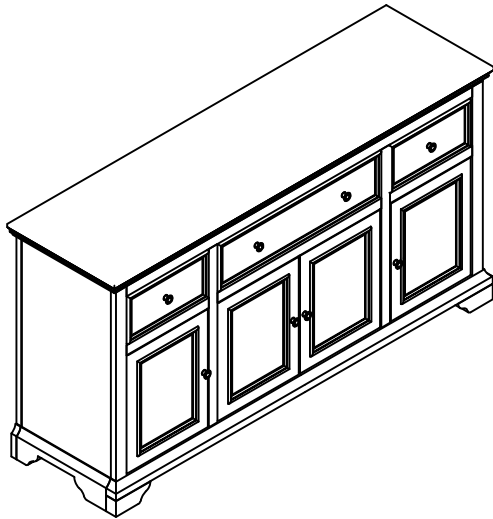

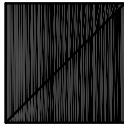


Furniture Safety Bracket Tip Resistant

- Designed to help prevent furniture tipover.
- Detachable strap allows for easy moving of furniture for cleaning .
- Also helps prevent furniture tipover during minor tremor.


Installation:

1. Locate a wall stud behind your furniture. Position a bracket on the stud approximately 1" below the top of the furniture. Mark and drill pilot hole into the center of the stud with a 3/32" drill bit. Attach a bracket to the stud with the long screws provided.

 2. On the back of the furniture, a bracket will need to be attached to the furniture frame at the top. To do this, temporarily move the furniture into its final position and mark the location of the wall bracket on the furniture frame. Move the furniture away from the wall and place a bracket on the mark. Mark and drill holes for screws with a 3/32" drill bit. Attach the bracket to the furniture with the short screws provided.

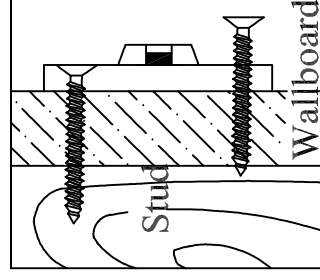

 3. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug. Do not over tighten.

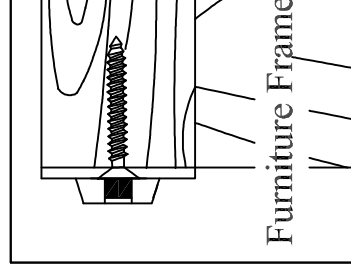

Important:

Check to be sure the wall bracket is firmly screwed into wall stud, the furniture bracket is firmly attached to the frame, and the strap is snug.

Caution:

This product is not to be a substitute for proper parental supervision. Manufacturer assumes no liability for improper installation or excessive loads placed on screws brackets or straps.

