



Item #: HT72ASS Assembly Instructions

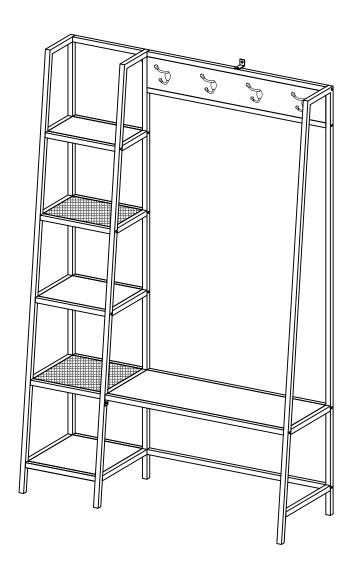


Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com

Revised 04/20/2017

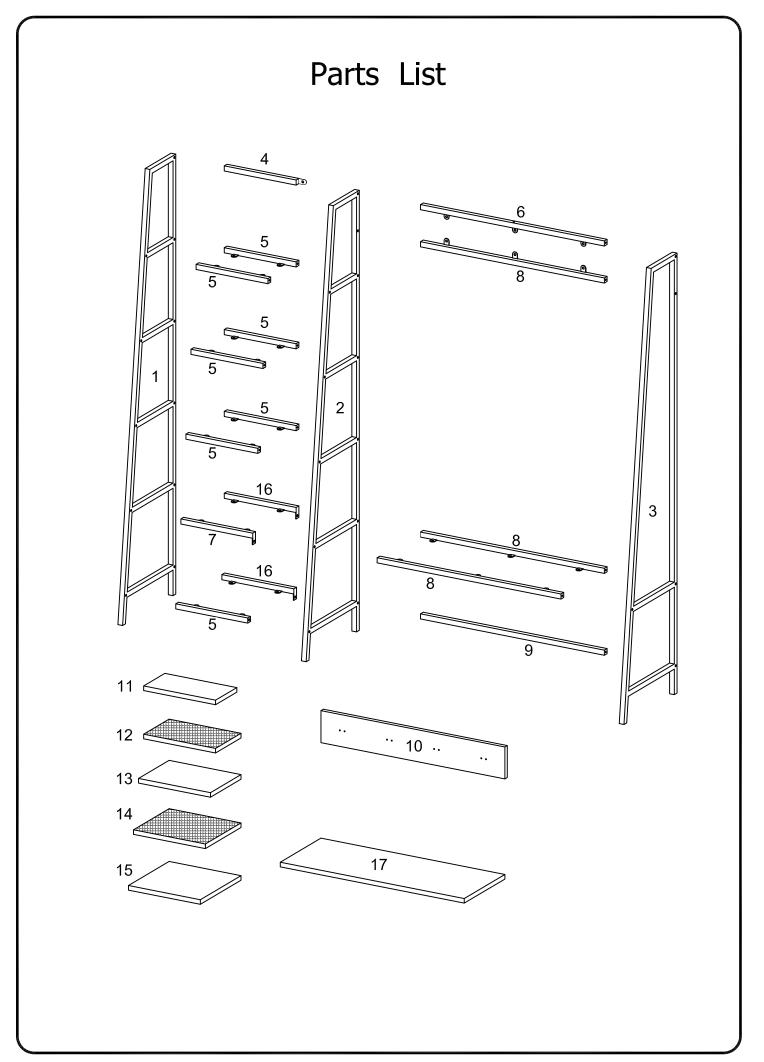


Hardware List


Α		Ø1/4x25mm	Bolt	28	pcs
В		Ø1/4x12mm	Bolt	37	pcs
С	0		Bracket	1	рс
D		M4	Hex key	1	рс
Е			Anchor	1	рс
F	{}	Ø4x30mm	Screw	1	рс
G		Ø16x6.5.x1.0mm	Washer	1	рс
Н			Hook	4	pcs

 

Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

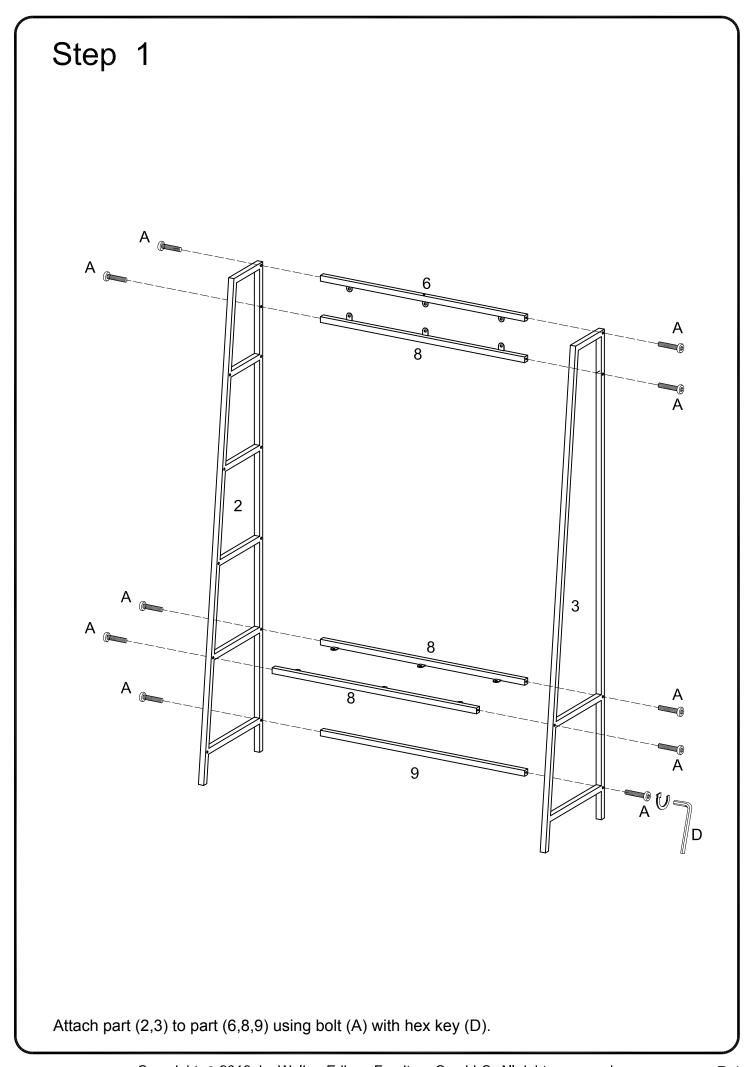


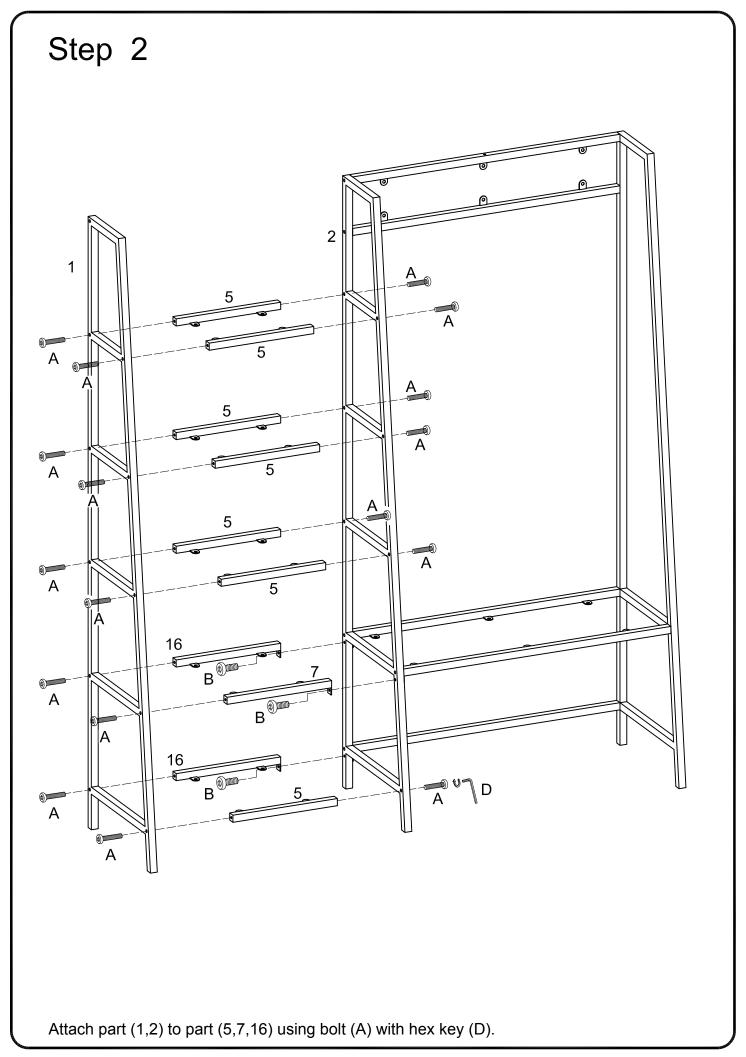

Step 3




Attach part (4) to part (1,2) using bolt (B) with hex key (D).

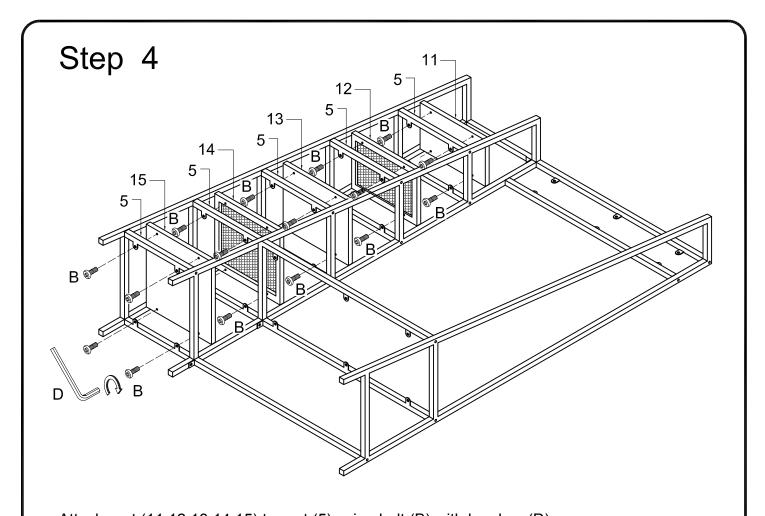


Attach part (11,12,13,14,15) to part (5) using bolt (B) with hex key (D).




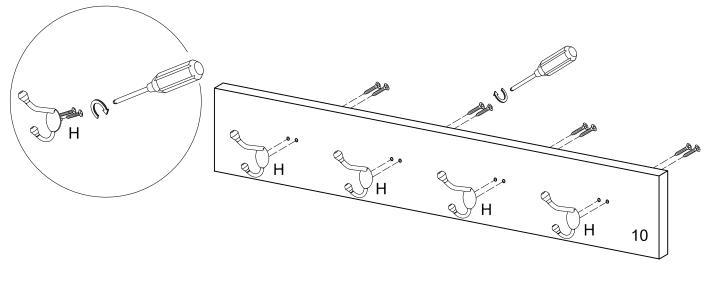


Disassemble screws from hook, then attach hook (H) to part (10) using screw with screwdriver.

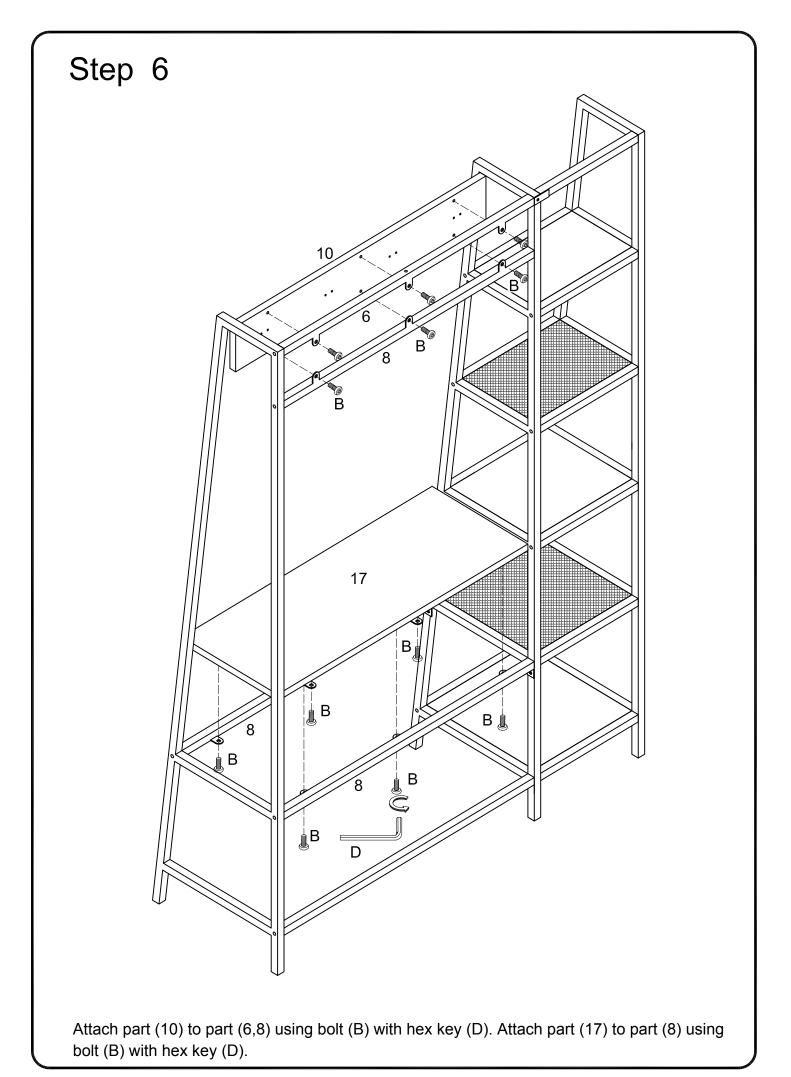


Step 7

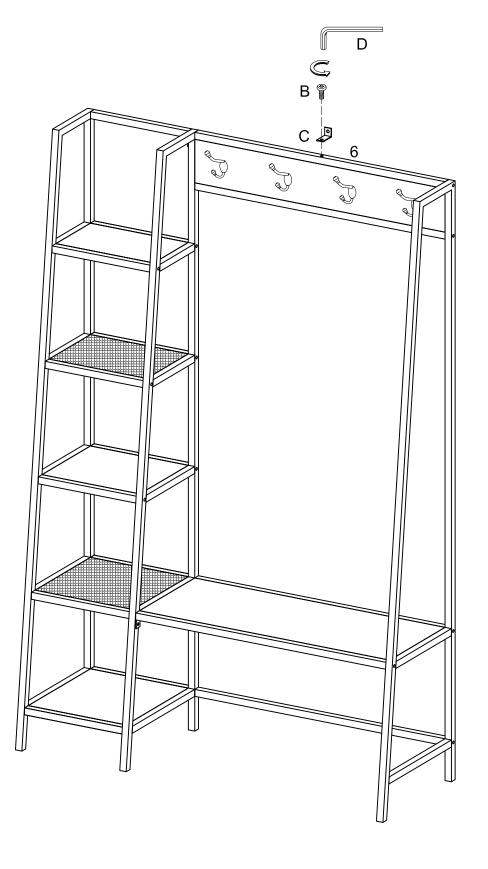

Attach bracket (C) to part (6) using bolt (B) with hex key (D).

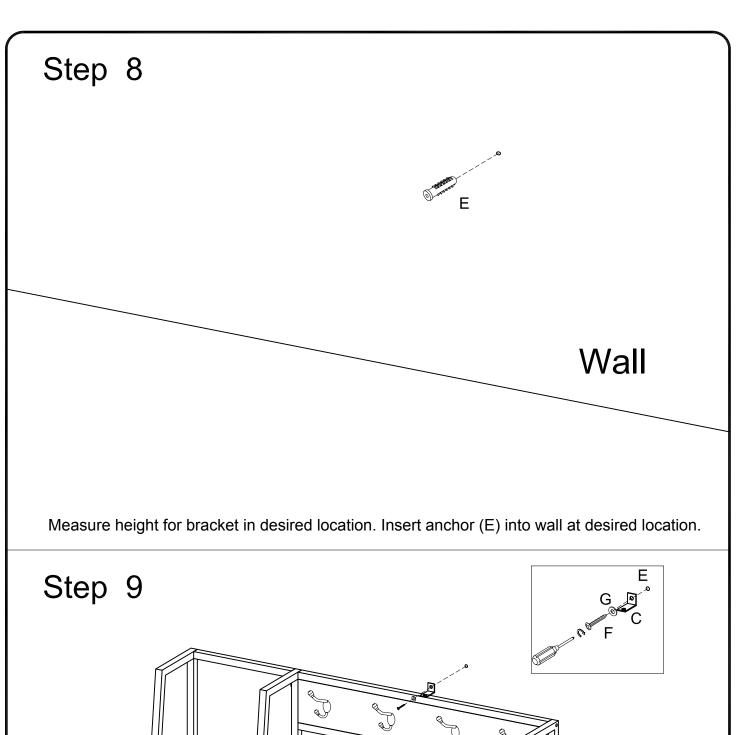

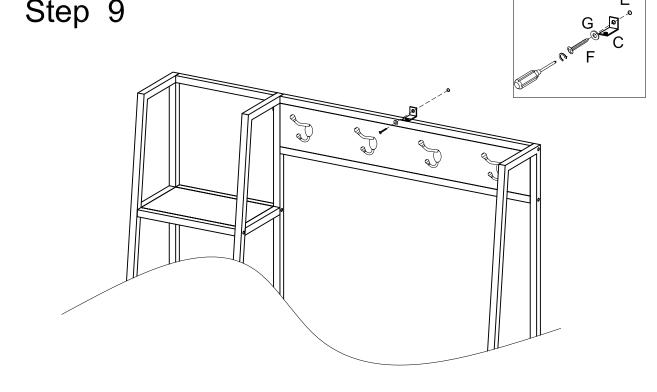

Secure furniture to anchor in wall using washer (G) and screw (F) with a screwdriver.

