



Retro Bluetooth Speaker with FM Radio

 
FEATURES

Bluetooth
AUX in
FM radio
USB music playback
Handsfree

SET INCLUDES

Bluetooth Speaker
USB charging cable
AUX IN cable
Instruction Manual

CONTROLS

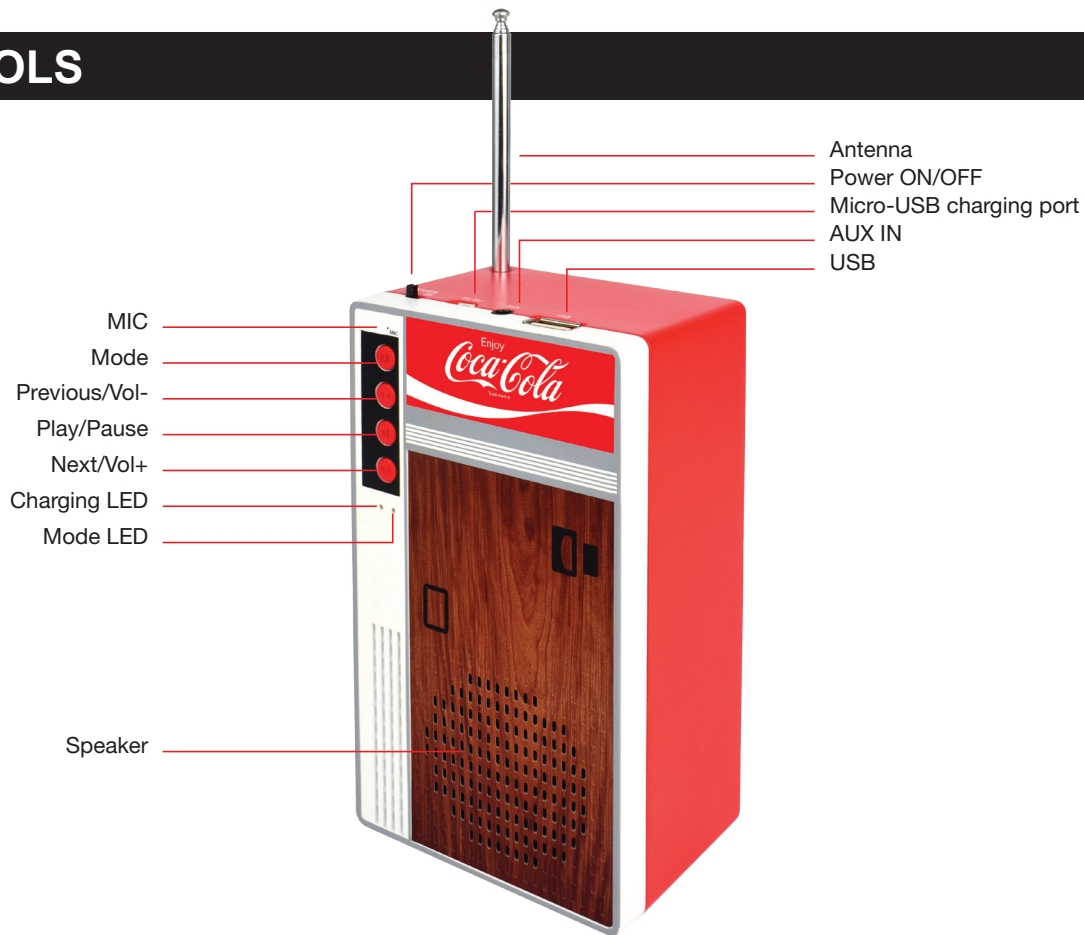


GETTING STARTED

Make sure the unit is fully charged before first use.

Insert the Micro USB in Speaker and other end of USB in computer, power bank or USB charger (Refer figure 1)

Red LED will stay on until speaker is charged completely. Approximate charging time is 3 hours.

 Fig. 1

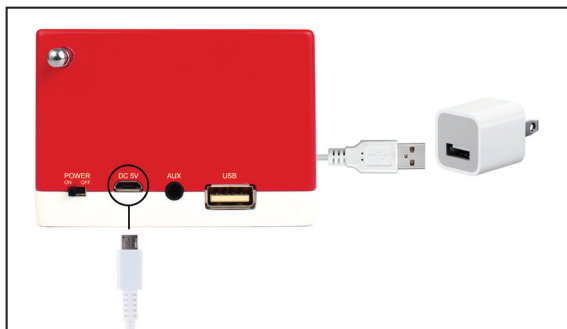

POWER ON/OFF

To turn the speaker ON, slide ON/OFF switch towards left and to turn the speaker OFF slide the same switch towards right.

BLUETOOTH FUNCTION

1. Turn the speaker ON. You will hear an announcement "BLUETOOTH MODE". Blue LED will start flashing rapidly.
 2. Turn on the Bluetooth function on your device. Your device will start searching Bluetooth option as CCSR2 BT.
 3. Once paired, you will hear an announcement "CONNECTED TO BLUETOOTH DEVICE". Blue LED will keep flashing slowly.
 4. Now you can use this feature to play music or receive phone calls.
- *If a code is required to pair the speaker with your device, enter 0000 and your device will start searching for Bluetooth connection.

NOTE:

Make sure the speaker and your Bluetooth enabled device such as your smartphone or tablet is no more than 1 meter away for the initial pairing process. Once paired, ensure your speaker and your device is always within range of 33 ft. WITHOUT obstruction.

TO ANSWER A PHONE CALL

Phone calls can be answered while in Bluetooth function.

1. To answer a call, press PLAY/PAUSE (▶||) button.
2. Press the same button to end the call.

FM RADIO FUNCTION

1. While in Bluetooth function, press and release MODE (M) button. You will hear an announcement "FM MODE".
2. Immediately press and hold PLAY/PAUSE (▶||) button for 2-3 seconds.
3. Blue LED indicator will start flashing and FM radio will start auto scanning all the stations one by one.
4. Do not take any action until radio stops scanning all the stations and blue LED stops flashing.
5. Press Forward (▶▶) or Previous (◀◀) button to catch the station after LED light stops flashing.


AUX FUNCTION

To use Aux Function simply connect one end of 3.5mm AUX cable to the speaker and the other end to your device or any other music source to enjoy music.

USB FLASH DRIVE FUNCTION

Insert external USB flash drive into the USB input slot to play the music. Refer figure 2:

 Fig. 2

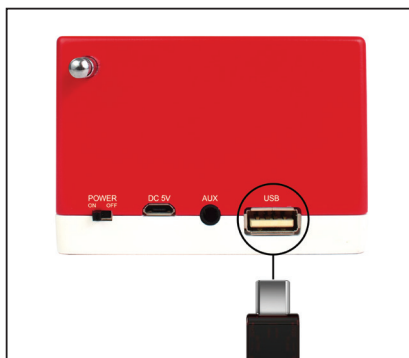

IMPORTANT SAFETY INSTRUCTIONS

1. Do not use or charge the speaker near water or heat source.
2. This product contains lithium battery, disposed of according to local laws.

COCA-COLA, COKE, the Dynamic Ribbon device, the Contour Bottle Design, and the Red Disc Icon are trademarks of The Coca-Cola Company and, in Canada, Coca-Cola Ltd. ©2018 The Coca-Cola Company. All rights reserved. Distributed by Style Asia Inc.

www.coca-colastore.com



Contact Information:
Style Asia Inc.
101 Moonachie Avenue
Moonachie, NJ, 07074

FCC ID:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

MADE IN CHINA