BT-1404 PARTS ASSEMBLY INSTRUCTION (1)X1(5)X8(4) 0 ----(2)X1(6)X8 (5) (6) (6)(5) -(3)(2)(3)-(3)X2(7)X1(1) ----**©** (6) (5) (4)X2(2) -(3)