

GRGR200


COLLAPSIBLE GARMENT RACK



WHAT'S INCLUDED:

- Rack
- 2 locking casters
- 2 regular casters

Insert the casters before opening.

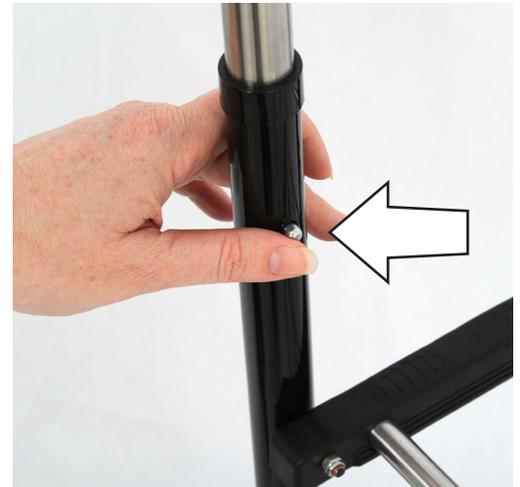

TO OPEN:

Pull apart and push down on the center shelf to click into place.

TO CLOSE:

Press both side tabs inwards, then pull upright.

TO RAISE BARS:

Press click tab inwards, slide pole up to the next hole.
Note: There are 3 pre-drilled level locations



TO EXTEND HANGING BARS:
Pull outwards.




Greenway[®]



CE QUI EST INCLUS :
 Porte-vêtements
 2 roulettes
 2 roulettes normales

Insérez les roulettes avant ouverture

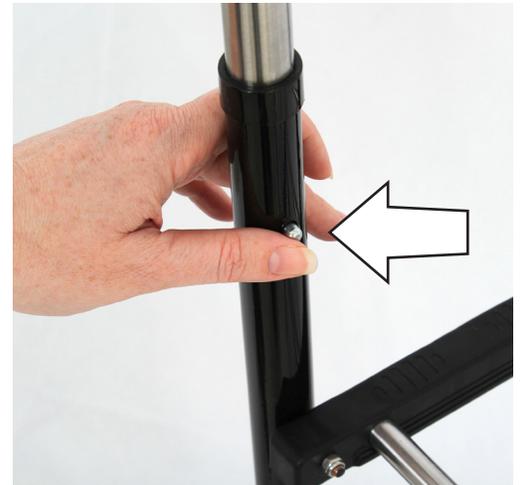

POUR OUVRIR :
 Séparez et poussez vers le bas sur l'étagère centrale pour qu'elle clique en place.

POUR FERMER :
 Poussez les deux boutons verrouillage vers l'intérieur, puis tirez vers le haut.

POUR LEVER LES BARRES :
 Pressez le bouton verrouillage à clic vers l'intérieur, puis glissez le poteau jusqu'au prochain trou.

Remarque : Il y a 3 emplacements de niveau préperforés



POUR RALLONGER LES BARRES SUSPENDUES :
 Tirez vers l'extérieur.

