
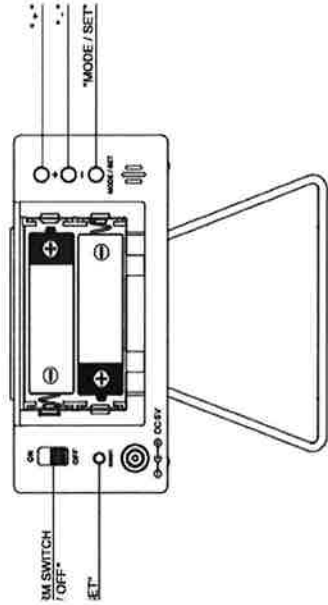


- INSTRUCTION MANUAL
- MANUEL D'INSTRUCTIONS
- MODE D'EMPLOI
- BEDIENUNGSANLEITUNG
- 使用説明書

Thank you for purchase of our SEIKO clock.
Please read this instruction manual carefully before use.

NOZE / LIGHT
RTT STOP (TIMER-STOPWATCH)

CURRENT TIME
(ALARM TIME-CALENDAR
TIMER-STOPWATCH)

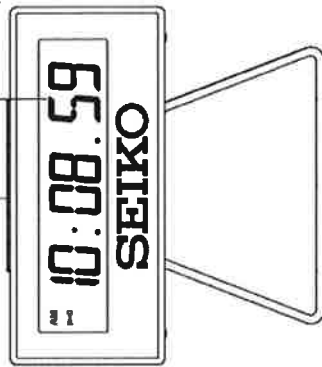

INSTRUCTION MANUAL

CAUTION

Caution on batteries

Please be sure to observe the following correct battery usage. Misusing batteries may cause leakage or a battery explosion, which may result in a malfunction of the clock or personal injury.

1. Insert batteries into the battery holders, locating the plus (+) and minus (-) ends correctly.
2. If you replace batteries, replace all of them at one time with new one as specified in this manual.
3. Batteries used in this clock are not rechargeable. Never attempt to recharge the batteries.
4. Do not attempt to solder anything directly to batteries.
5. Do not expose batteries to direct sunlight, heat, or high humidity.
6. When the clock stops, or it is no longer used, remove the batteries.
7. As the initial batteries are inserted at the factory, their actual lives once in your possession may be shorter than the specified period.

SPECIFICATIONS

Operational temperature: between -10 °C and +50 °C (the display can be read between 0 °C and +40 °C)
Time setting: Load/gain (monthly rate) is less than 30 seconds (at normal temperature range between 5 °C and 35 °C)
Alarm: The electronic beep sounds at a designated time for approximately 5 minutes and automatically stops.
An approximate every 5-minute snooze function is equipped. (Snooze function can be used repeatedly)
Calendar: No need of adjustment until the year of 2099
Stop watch: It measures up to 99hours 59 minutes 59 seconds.
Timer: 1 second to 99hours 59minutes 59 second (1 second increments)
Display: Time(hour, minute, second) in 12-hour format or 24-hour format. Calendar(month, date, day)
Battery: AA battery, 2 pieces
Battery life for clock: Approximately 1 year
DC power jack: Outside diameter: 4mm / Inside diameter: 1.7mm, Center (+)

HOW TO USE THE CLOCK

- Remove the protective film slowly on the display before using the clock.
- Slide and open the battery hatch on the rear of the clock and insert 2 "AA" batteries following the plus (+) and minus (-) polarity diagram correctly and press "RESET" button.
- Press reset button to initiate the unit. Otherwise the unit may not work properly.

TO SET CALENDAR AND TIME

- ① In the Normal Time Display, press and hold the "MODE/SET" button for 2 seconds or longer, then starting calendar and time setting.
- ② Each time the "MODE/SET" is pressed, the flashing digits on the display will change in the following order:
[Year Setting Display] → [Month-Day Setting Display] → [Time Setting Display] → [12/24 Hour Setting Display]
- ③ Press the "▲"/"▼" buttons to set the date, time and 12/24 hour setting.
- Press and hold the "▲"/"▼" button to increase or decrease the value quickly.
- The display will automatically return to the Normal Time Display if the "▲"/"▼" button remains unwatched for approximately 5 seconds.

12:00.00 (Normal Time Display)
Use the clock in this mode for normal use.

20 13 31 [Year Setting Display]
Press the "▲"/"▼" button to set the year.
The year can be selected between 2013 and 2099.

1 1 17 11 [Month-Day Setting Display]
Press the "▲"/"▼" button to set the month and date.

12:00.00 [Time Setting Display]
Press the "▲"/"▼" button to set the hour and minutes.
The seconds are reset to 0 at the moment the "▲"/"▼" is pressed.

24 H [12/24 Hour Setting Display]
Press the "▲"/"▼" button to set 12 Hour system or 24 Hour system.
* When setting the time, make sure the time is correctly set for the morning or afternoon.

④ Press the "MODE/SET" to return to the normal time display after adjusting the settings.

TO SET ALARM

- ① Press the "▲"/"▼" to adjust the alarm time.
- Press the "▲"/"▼" to enter Alarm Setting Mode. The alarm time will start to flash.
- In Alarm Setting Mode, press and hold the "▲"/"▼" to increase or decrease the value quickly.
- The alarm time will be confirmed automatically if the button remains unwatched for approximately 5 seconds.
- ② Flip the alarm switch to "ON".
- The alarm will sound at the designated alarm time.
- The alarm icon (bell) will be shown.
- When the alarm begins to sound, the light will turn on for approximately 5 seconds.
- When the alarm will not sound at the designated alarm time if the Timer Display is being used.

Note: The alarm will not sound at the designated alarm time if the Timer Display is being used.

There are two ways to stop the alarm.

- [To deactivate the alarm]
- Flip the alarm switch to "OFF" to stop the alarm.
- The alarm mark (bell) will disappear.

[Set the alarm to sound after approximately 5 minutes (Snooze function)]

- Press the "SNOOZE/LIGHT" button to temporarily stop the alarm. The alarm will sound again after approximately 5 minutes.
- The alarm mark (bell) will flash during the snooze period.
- The snooze function can be used for as many times as you like.
- The alarm will automatically stop after sounding for approximately 5 minutes. (Automatic stop function)

In this case, the alarm mark will remain displayed, and the alarm will sound at the designated alarm time the next day.

HOW TO USE THE TIMER

- ① Press the "MODE/SET" button to switch the Stopwatch/Timer display.
- ② Press the "MODE/SET" button for 2 seconds or longer, the second time will start to flash.
- ③ Press and hold the "▲"/"▼" button to increase or decrease the value quickly.
- ④ Press the "MODE/SET" button, then second time will start to flash.
- ⑤ Press and hold the "▲"/"▼" button to increase or decrease the value quickly.
- ⑥ Press the "MODE/SET" button, then minute time is set. And hour time will start to flash.
- ⑦ Press and hold the "▲"/"▼" button to increase or decrease the value quickly.
- ⑧ Press the "MODE/SET" button, then timer time is set.
- To stop the timer, press the "SNOOZE/LIGHT" button to start the timer.
- Each time the button is pressed, the timer will alternate between stopping and restarting.
- When the timer reaches 0, the alarm will sound for approximately 1 minute.
- To stop the alarm while it is sounding, press the "SNOOZE/LIGHT" button.
- And display returns to designated count down time.
- The time of second, minute and hour will be confirmed automatically if the button remains unwatched for approximately 5 seconds.
- To reset the timer 00H00M00S, press and hold the "▲"/"▼" and "▼" button at the same time for 2 seconds or longer.

HOW TO USE STOPWATCH

- ① Press the "MODE/SET" button to switch the Stopwatch/Timer display.
- ② When display shows 00H00M00S, press the "SNOOZE/LIGHT" button to start stopwatch with flashing 11.11 in so.
- Press and hold the "▲"/"▼" and "▼" button at the same time for 2 seconds or longer, display will be changed to 00H00M00S.
- ③ Count up to 99H59M59S, then start from 00H00M00S.
- Note: While the timer is counting down or stopwatch is counting, the display will not change to the Normal Time Display and Calendar Display even if the "MODE/SET" button is pressed.

TO USE LIGHT FUNCTION

- You may check the time anytime in the dark by simply press the "SNOOZE / LIGHT" button. The display will light for 3 seconds. You can read the time easily and clearly.

NOTE: Frequent use of this feature will affect battery life.